

ROUGH COUNTRY

SUSPENSION SYSTEMS®

GM 2003-06 Chevy 1500/2500 30" Single Row LED Behind Grille

Thank you for choosing Rough Country for all your lighting needs.

▲ NOTICE

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @ 1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

▲ NOTICE

Only fits **2003-06 Chevrolet** models.

Tools Needed:

5/32" Allen
7/16" Wrench/Socket
Drill Motor
9/32" Drill




Kit Contents



- (1) RH Grille Mount Bracket
- (1) LH Grille Mount Bracket
- (2) 30" Single Row LEDs
- (1) 70703BAG
 - (8) 1/4" Flat Washers
 - (4) 1/4" Nylock Nuts
 - (4) 1/4" x 1" Button HeadBolts





1. Park the vehicle on a smooth level surface.
2. Remove the 7 push pins and the upper radiator cover. Save for reuse. **See Photo 1.**
3. Remove the grille by gently pulling from front of truck. **See Photo 2.**

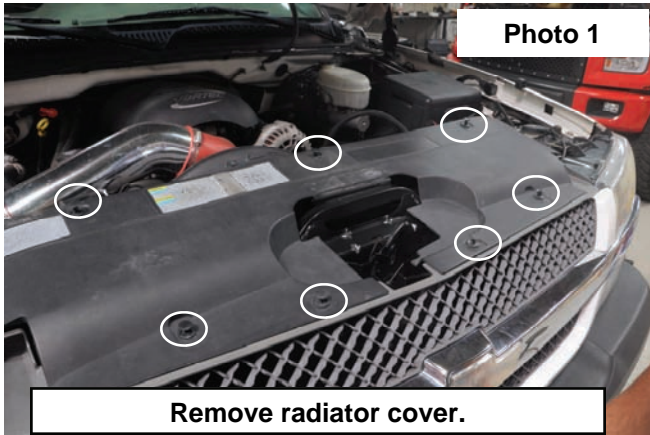



4. Behind the lower headlight, measure 3/4" from the inside edge of the core support. **See Photo 3.**
5. Behind the lower headlight, measure 3/4" from the back edge of the core support. **See Photo 4.**

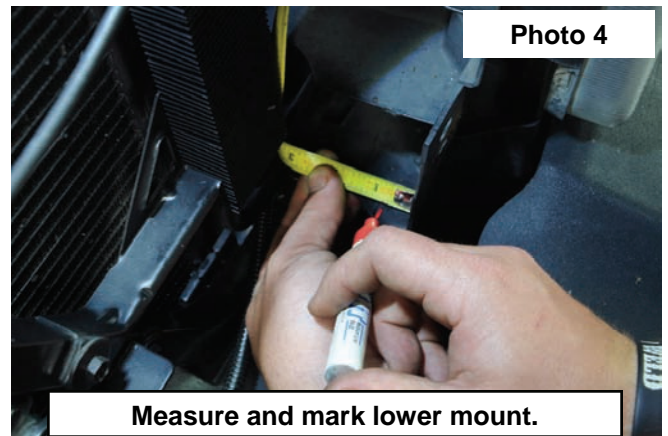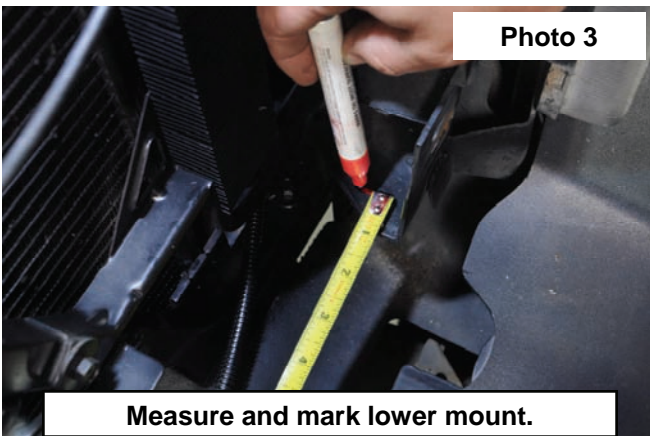


6. Using a 9/32" drill, drill the marked hole. **See Photo 5.**
7. Repeat steps 4-6 on opposite side.
8. Using the supplied hardware and Allen, attach the lights to the brackets. **See Photo 6.**

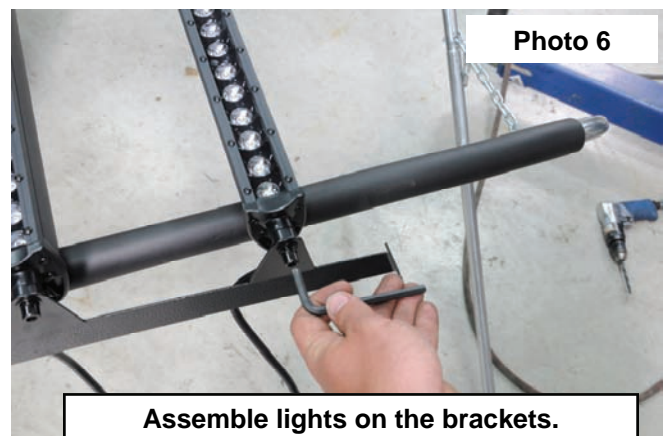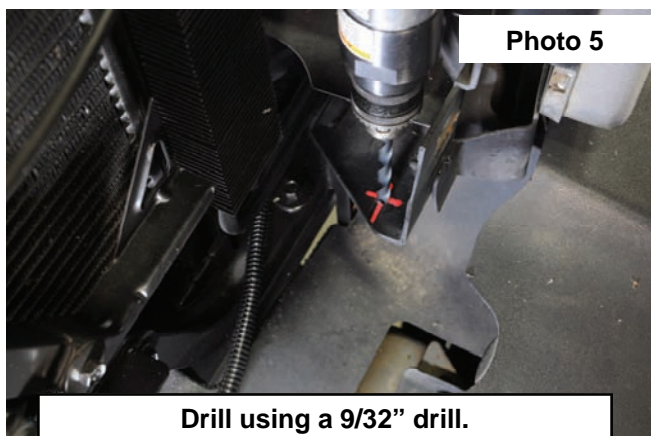



9. Install the light and bracket assembly onto the lower mounting holes. **See Photo 7.**
10. Using the supplied 1/4" x 1" button head bolts, washer, and nut, attach the light assembly to the core support. **See Photo 8.**

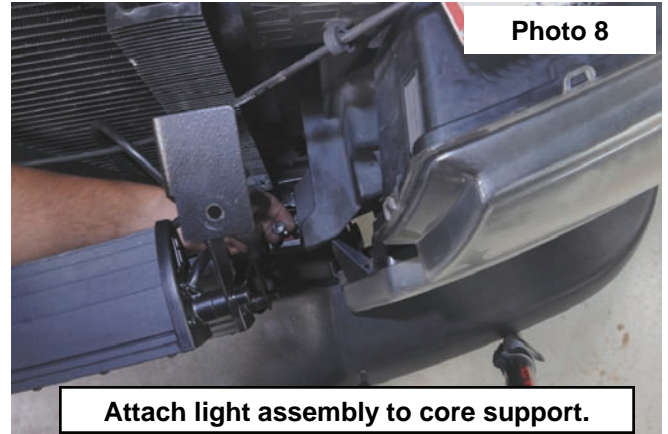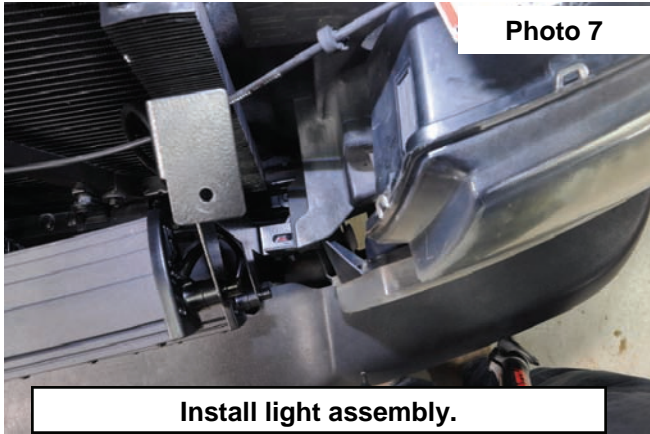



11. Tighten the lower hardware using a 5/32" Allen and 7/16" wrench. **See Photo 9.**
12. Wire the lights according to the instructions included with the lights.
13. Install the grille by gently pushing from the front of the vehicle, making sure all clips are secured. **See Photo 10.**
The upper light bracket mounts should sit on top of the grille.

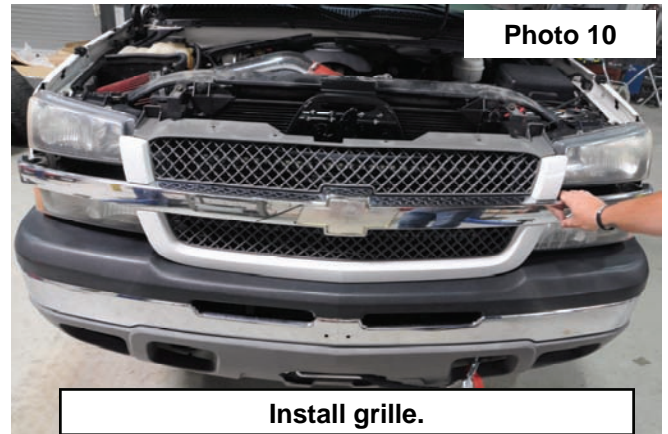

14. Measure over 1" from the grille brace to the outside edge of the bracket and mark the hole. **See Photo 11.**
15. Using a 9/32" Drill and the bracket as a guide, drill through the grille. **See Photo 12.**

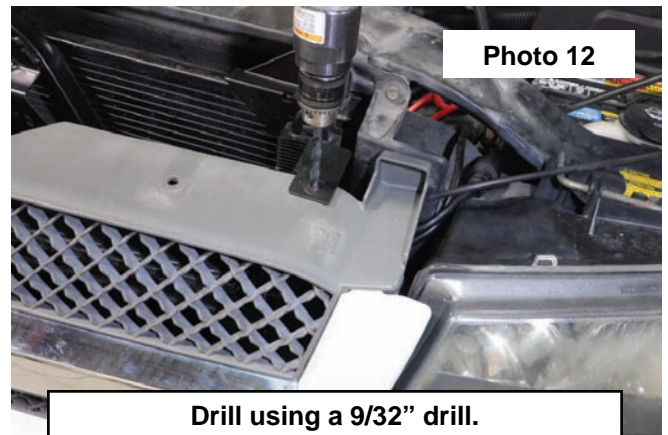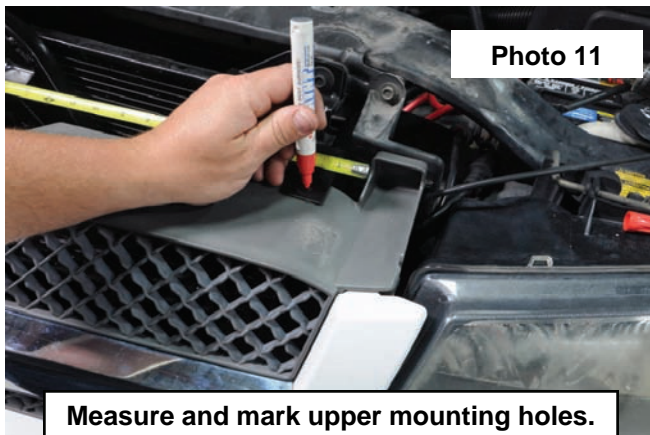

16. Using the supplied 1/4" x 1" button head bolts, washer and nut, attach the bracket to the grille. Tighten using a 5/32" Allen and 7/16" wrench. **See Photo 13.**
17. Repeat steps 13-15 on opposite side.
18. Install the radiator cover using the factory push pins. **See Photo 14.**

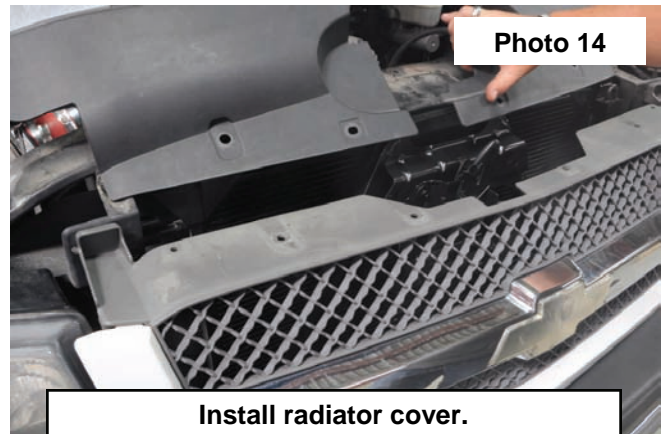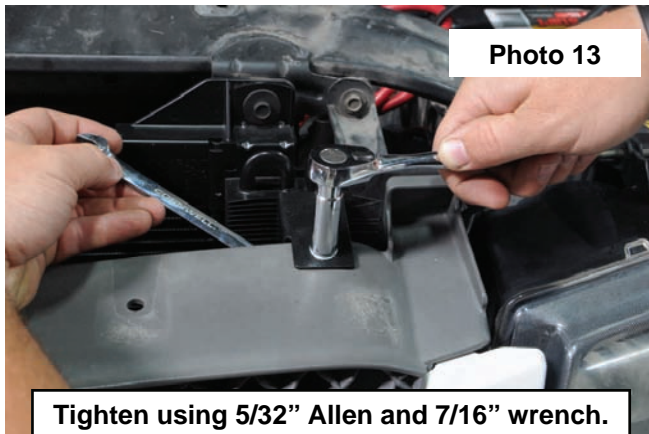

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

