

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### Can-Am Defender 50" LED Windshield Mount

Thank you for choosing Rough Country for all your off road needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @ 1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

#### Tools Needed:

4mm Allen  
10mm Socket  
1/2" Wrench  
Center Punch  
Hammer  
25/64" Drill  
Drill Motor  
Tape  
Marker



#### Kit Contents:

##### 2- 50" LED Mounting Brackets

##### 1- 71005BAG1

4- 6mm Threaded Inserts  
4- 6mm x 20mm Button Head Bolts  
4- 6mm Flat Washers  
1- 6mm x 50mm Bolt  
1- 5/16" Nut  
2- 6mm Flat Washers

##### 1-50" Rough Country LED Light:

1- LED Light Wiring Harness  
1- 50" LED Light Cover  
1- 5mm Allen Wrench  
1- 6mm Allen Wrench

### INSTALLATION INSTRUCTIONS

1. Place tape over the A-pillars to protect them during install.
2. Measure down 1" from the top corner of the windshield frame and mark. **See Photo 1.**
3. Place the supplied light bracket, top of bracket lined up with the mark, on the A-pillar. Mark the installation holes. **See Photo2.**



Photo 1

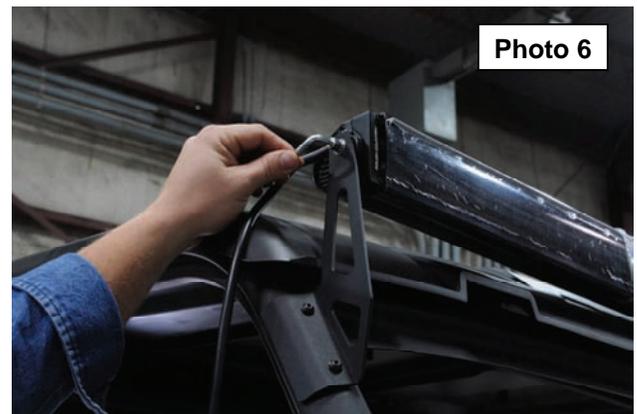


Photo 2

3. Center punch the holes for drilling.
4. Drill using a 25/64" drill. **See Photo 3.**
5. Install the supplied 6mm threaded inserts. **See Photo 4.**
6. Use the supplied 6mm x 50mm bolt and the supplied 5/16" nut and 6mm washers, to install the threaded insert if you do not have an installation tool. Slide a 6mm washer, the 5/16" nut, and another 6mm washer over the 6mm x 50mm bolt. Thread the bolt into the threaded insert. Hold the 5/16" nut using a 1/2" wrench. Tighten the 6mm x 50mm bolt using a 10mm socket, this will cause the threaded insert to mushroom inside of the A-pillar, locking it in place.



7. Install the supplied light bracket using the supplied 6mm x 20mm button head bolt and 6mm flat washer. Tighten using a 4mm Allen. **See Photo 5.**
8. Install the light using the supplied hardware and instructions included with the light. **See Photo 6.**



## Thank You for choosing Rough Country for your lighting needs!!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

