

## Honda 2019-20 Talon Full Front Windshield

## Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

**KIT CONTENTS:** Windshield x1 Seal x1 Bottom Seal x1 Straps x4



| Torqu | e Specs:  |           |      |           |            |
|-------|-----------|-----------|------|-----------|------------|
| Size  | Grade 5   | Grade 8   | Size | Class 8.8 | Class 10.9 |
| 5/16" | 15 ft/lbs | 20ft/lbs  | 6MM  | 5ft/lbs   | 9ft/lbs    |
| 3/8"  | 30 ft/lbs | 35ft/lbs  | 8MM  | 18ft/lbs  | 23ft/lbs   |
| 7/16" | 45 ft/lbs | 60ft/lbs  | 10MM | 32ft/lbs  | 45ft/lbs   |
| 1/2"  | 65 ft/lbs | 90ft/lbs  | 12MM | 55ft/lbs  | 75ft/lbs   |
| 9/16" | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs  | 120ft/lbs  |
| 5/8"  | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs  |
| 3/4"  | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs  |



## INSTALLATION INSTRUCTONS

- 1. Clean the surface of the UTV that the windshield will be applied to. See Photo 1.
- 2. Remove the protective cover from the windshield. See Photo 2.






- 3. Install the rubber seal, starting on the bottom of one side and continue around the top side to the bottom of the opposite side, trim any excess. **See Photo 3.**
- 4. Install the bottom seal, starting at one bottom corner and continue to the opposite bottom corner. See Photo 4.





- 5. Place the windshield onto the front of the UTV. See Photo 5.
- 6. NOTE: How the strap is wrapped behind the pin. See Photo 6.




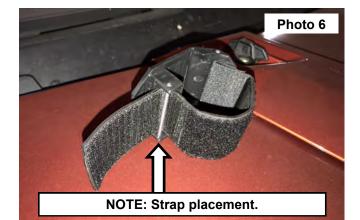




- 7. Install the 2 straps into the opening in each side of the windshield. See Photo 7.
- 8. Wrap the strap behind the pin in the outer portion of the strap. See Photo 8.



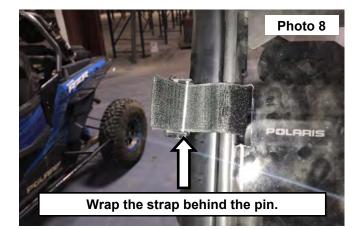

- 9. Tuck the strap into the windshield. See Photo 9.
- 10. Pull the outer windshield mount tight laying the strap into the opening in the windshield. See Photo 10.

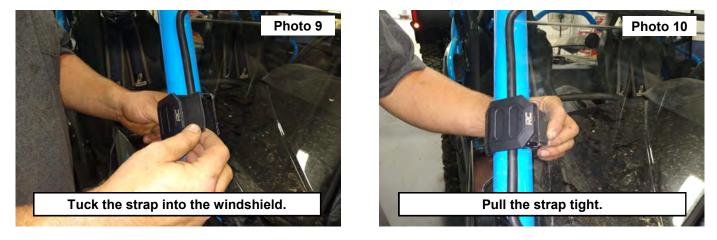

11. Secure by finishing the wrap around the strap. See Photo 11.







By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

