

Thank you for choosing Rough Country for all your Off road needs.

▲ NOTICE NOT FOR USE IN CALIFORNIA

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

Tools Needed:
14mm Socket


Kit Contents
Rough Country Jeep Exhaust
1-Stainless Steel Exhaust Clamp

INSTALLATION INSTRUCTIONS

1. Park the vehicle on a level surface, set parking brake and allow exhaust to cool if hot.
2. Remove the factory clamp on the exhaust pipe and remove the stock exhaust pipe and muffler from the stock hangers. Take care not to damage the factory exhaust isolators as they will be reused for the new exhaust.



3. Install the new exhaust in the factory hangers.
4. Install the exhaust on the factory pipe and secure with the supplied exhaust clamp. Tighten using a 14mm socket.

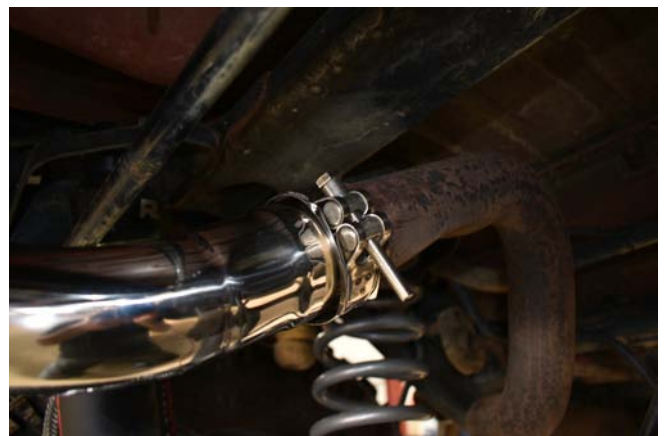

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.