

SPECTRE®

Performance

Installation Instructions

P/N 42821 (chrome) - P/N 42821G (bronze)

P/N 42821K (black) - P/N 42821S (silver)

Step 1

Before you permanently install the air box cover, place the air box onto the factory air box to ensure proper fit and alignment.

Step 2

Then clean the top of the factory air box with rubbing alcohol to remove any dirt, oil or contaminants.


Step 3 For Models Except Hellcat:

Peel the backing film off the double sided tape shown in the picture. Place the lid onto the air box making sure it aligns properly and press firmly to set.



Step 3 For Hellcat Models Only:

Install the provided 1" square pieces of double sided tape in the locations shown in the diagram. Then peel the backing film off the installed pieces of double sided tape and the 2 pieces of tape shown in the picture. Place the lid onto the air box making sure it aligns properly and press firmly to set.

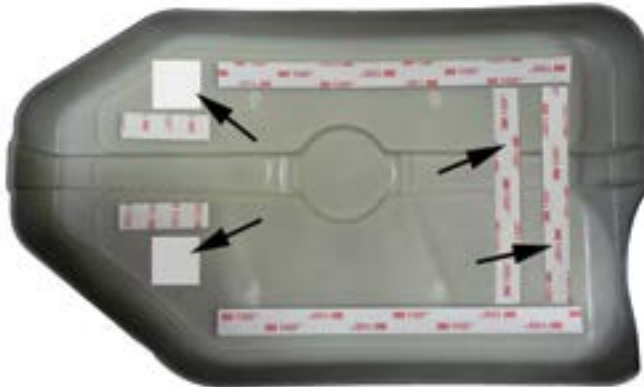

ATTENTION: Do not use harsh chemicals to clean covers.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

WARNING This product can expose you to a chemical or chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

176285
8/25/16