
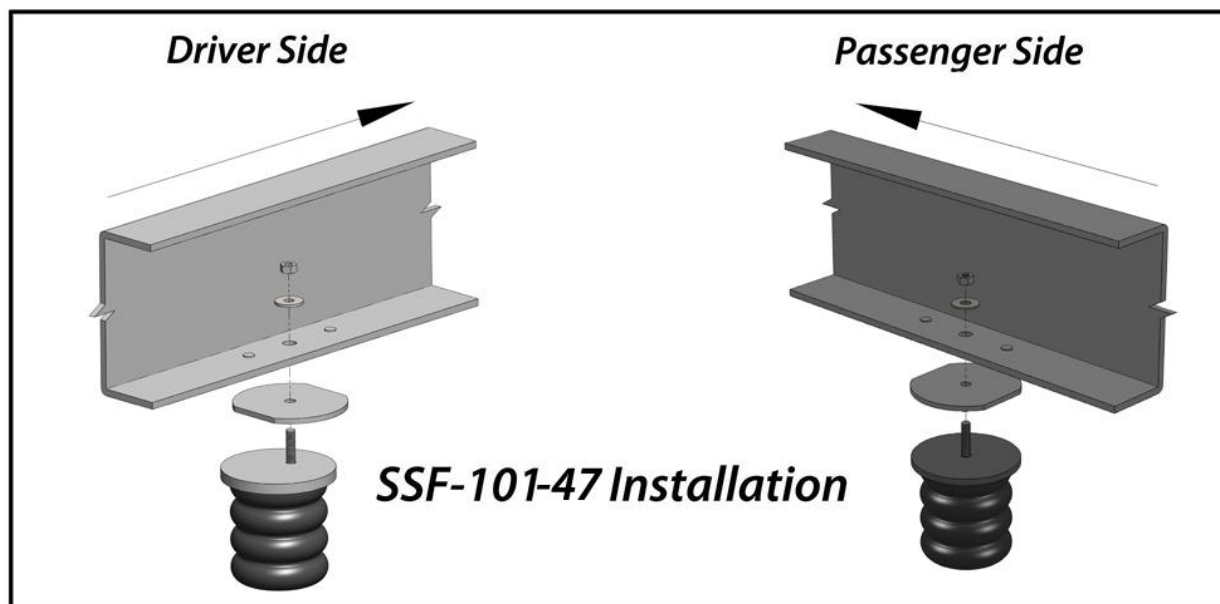


SumoSprings ***Front***

Suspension Enhancement
FORD F-250/350 Super Duty 2x4 [1999-present]
SumoSprings Part# SSF-101-47

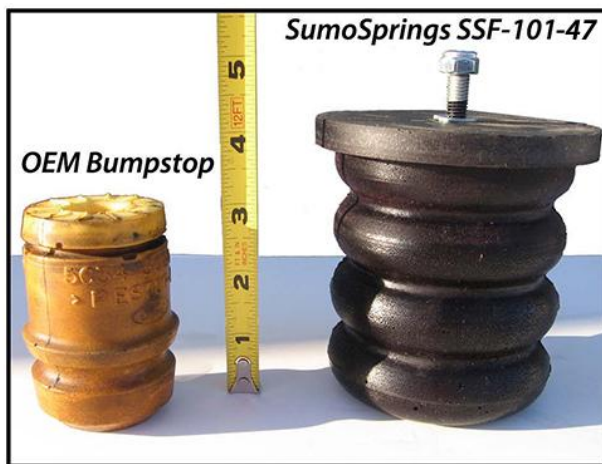

Refer to SumoSprings application guide for part selection www.supersprings.com [Tech line #866-898-0720]
SumoSprings enhance load carrying capability, handling & towing. Never exceed vehicle manufacturer's GVWR rating.

Installation Instructions

- 1) Park vehicle on level hard surface. Engage emergency brake. Place blocks in front and behind rear wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
- 2) Raise front of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
- 3) Remove existing factory jounce bumper assembly from the frame.
- 4) Ensure that the SumoSPring with the centre stud is installed on the passenger side and the one with the offset stud is installed on the driver's side. The driver's side will be installed with the offset to the rear as indicated above. Ensure trimmed washer plates are attached and oriented to sit between the rivets on the underside of the frame.
- 5) On older trucks insert the stud on the end of the SumoSPring into the threaded hole where the factory jounce bumper was located. Install the supplied flat washer and nut on top of the stud and tighten securely.
- 6) On newer model trucks where the factory bumpstop stud is metric, thread the SumoSPrings stud into the hole where the factory jounce bumper was located. Apply Loc-tite to secure the stud. If needed on driver side, adjust the offset position by adding the washer between the SumoSPring and the frame. Orient the driver's side SumoSPring with offset to the rear.
- 7) Repeat steps three through six on the other side of the vehicle.
- 8) Jack up vehicle, remove safety jack stands.
- 9) Carefully lower vehicle to the hard surface. Remove the blocks in front and back of the rear wheels.
- 10) Release emergency brake.
- 11) Fill out warranty card and send to SuperSprings. The warranty card is on the reverse side of this page.

Tool List

• Floor Jack	1
• Jack Stands	2
• 13mm Socket/Wrench	1
• Ratchet	1
• Wheel Blocks	4

Parts List

• SumoSPrings	2
• Plate Washers	2
• M8 Washer	2
• M8 Nuts	2
• Lock-Tite sachet	1

Important Notice.

- 1) For easy installation please read instructions completely first and have all necessary tools available.
- 2) We recommend that this installation be done by a professional or persons with sound mechanical knowledge.
- 3) SumoSPrings are designed to work with the original factory springs only. If they have been replaced with aftermarket springs then please consult with Supersprings International at 866-898-0720.
- 4) These instructions are meant as a guide for the installation of SumoSPrings. SuperSprings International assumes no liability for the actual installation process. Installers should apply common automotive safety practices when raising, lowering and working on vehicles.
- 5) SumoSPrings are designed to enhance the vehicles load carrying performance and road handling however it does not authorize (or recommend) loading beyond the manufacturer's GVWR specifications.
- 6) For technical support contact SuperSprings International at 866-898-0720.

To prevent damage to the vehicle and to ensure safety, do not exceed the maximum load recommended by the vehicles manufacturer (GVWR).