

HOOD PROTECTOR INSTALLATION INSTRUCTIONS

KIT CONTAINS:

HOOD PROTECTOR
 6 SELF-TAPPING MOUNTING SCREWS
 6 PLASTIC SHOULDER WASHERS

TOOLS NEEDED:

POWER DRILL WITH 3/32" DRILL BIT
 #2 PHILLIPS SCREWDRIVER
 TAPE MEASURE PENCIL

CAUTION!

DO NOT ATTEMPT TO USE POWER TOOLS WHEN INSTALLING YOUR HOOD PROTECTOR.

1. Lift the truck hood and hold the hood protector against the underside of hood centered equally from the edges. (Use the center mark on the hood protector as a guide)

IMPORTANT! MAKE SURE THERE IS AT LEAST 3/4" CLEARANCE BETWEEN THE HOOD PROTECTOR AND THE HOOD. Mark the hood through the center of each of the mounting slots with a pencil.


2. Remove the hood protector and drill 3/32" holes at each pencil mark. Take one of the self-tapping screws and start it then remove it from each of the holes. (This is to start threads in the hole)

3. Put the hood protector in place again. Place a shoulder washer onto each of the screws and fasten the hood protector to the hood. Tighten just enough to hold the hood protector in place.

4. Be sure the hood protector is centered and tighten the screws with a screwdriver until snug. **IMPORTANT:** DO NOT OVER TIGHTEN THE SCREWS! THEY WILL STRIP THE THREADS IF TIGHTENED TOO MUCH.

5. Close the truck hood slowly to make sure there is clearance between the hood protector and the grille. If necessary adjust the hood stops or the locking mechanism to allow for the thickness of the hood protector.

* NOTE: ON THE JEEP CHEROKEE AND GRAND CHEROKEE MODELS, CENTER TWO HOLES ON TABS WHEN MOUNTING NEED PRE-DRILLING BECAUSE OF DOUBLE METAL.

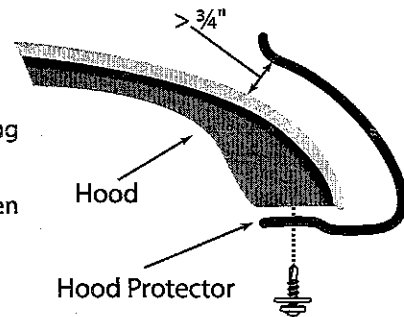

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS

Stampede Products, Inc. • 1924 S. Washington, Blvd. • Camanche, IA. 52730 • Ph 563-259-9189 Fax 563-259-9288 • www.stampedeproducts.com