

TOOLS NEEDED:

#2 PHILLIPS SCREWDRIVER
5/16 SOCKET OR LARGE
FLATHEAD SCREWDRIVER

INSTALLATION TIPS:

- Read and understand all instructions before beginning installation
- Take care not to over tighten the screws as damage can occur
- To clean use only soapy water and a soft cloth. Do not use paper towels, petroleum products or solvents.

KIT CONTAINS:

2- WHITE GROMMET NUTS 3- STEEL INSERTS
2- WASHERS HOOD PROTECTOR
2- SILVER PAN HEAD SCREWS
3- LARGE BLACK SCREWS

WARNING:

Stampede Automotive Accessories only approves installing this Hood Protector to these written instructions with the hardware provided. Failure to install according to these instructions will invalidate the warranty. This includes, but not limited to using alternative installation methods, hardware, or materials.

INSTALLATION INSTRUCTIONS:


• VERIFY FIT

(A) Inspect the Hood Protector thoroughly for defects or damage and verify the contents of package.

• INSTALLATION

(A) Lift the hood and remove any dirt or debris.

(B) Carefully test fit the Hood Protector on the truck and then note the 5 mounting locations of the tabs.

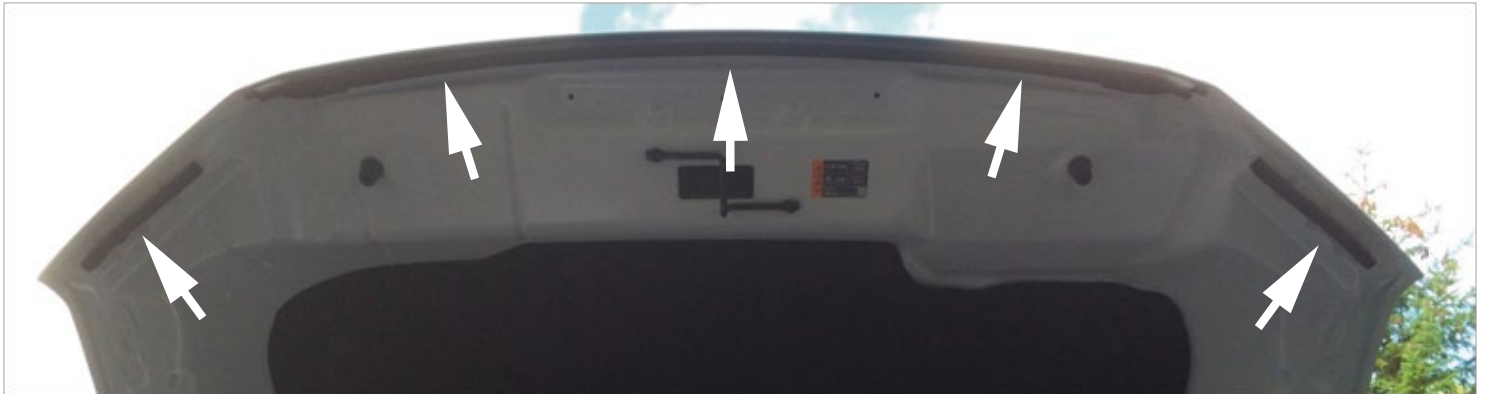

(C) Insert a white grommet nut in to each of the outer most slots in the hood located under the outside gaskets.



(D) Remove the three factory clips from the center gasket noted in step B above. Do not completely remove the gasket.

(E) Insert a steel insert into the three holes in the hood from the previous step. Make sure the insert snaps into place.



(F) Carefully place the Hood Protector to the hood with the five mounting tabs between the underside of the hood and the three gaskets.

(G) Carefully center the Hood Protector to the hood and start one of the three large black screws into the center steel insert through both the gasket and the Hood Protector. Make sure the mounting tab is pressed tightly to the contour of the hood.



(H) Start the other two large black screws into the other two steel inserts in the same manner as the previous step.

(I) Install each of the two remaining small screws into the grommet nuts through the hood protector on the outside two tabs.

DO NOT INSTALL THESE SCREWS THROUGH THE RUBBER GASKETS.



(J) Carefully center the hood shield and then tighten all five screws while making sure that each tab is pressed tightly to the contour of the hood.

(K) Carefully close the hood and verify proper fitment.

• CLEANING

USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

• IMPORTANT INFORMATION

AFTER INSTALLING THE HOOD PROTECTOR CHECK FOR FIT. MAKE SURE THE HOOD PROTECTOR IS NOT TOUCHING THE PAINT IN ANY SPOTS THAT MAY CAUSE RUBBING BY VEHICLE VIBRATION AS THIS INDICATES AN IMPROPER INSTALLATION. IF YOUR APPLICATION REQUIRES BUMP-ONS MAKE SURE THEY ARE INSTALLED PROPERLY. STAMPEDE WILL NOT PAY FOR PAINT TOUCH UPS OR REPAIRS ON HOODS DUE TO IMPROPER INSTALLATION.