

STAMPEDE™

AUTOMOTIVE ACCESSORIES

For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Important Safety Information


- Serious personal injury and property damage can occur if vehicle is driven without both black snaps at the front of cover fastened.
- Prior to vehicle operation, clamps must be secured such that the clamp lips tightly grip the inner bedwall structure.
- Only release front strap/snap when fully installing cover.
- After a setting period (1 week) it may be necessary to readjust the clamp load after foam isolators take a set to maintain the uniform gap between the roll up tonneau cover and bed rails.
- Check the bracket clamp loads every 3 months or 5,000 miles.
- The roll up tonneau cover must be closed or secured with straps while the vehicle is in motion.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Place the rail on truck and push towards front with tailgate closed.

1

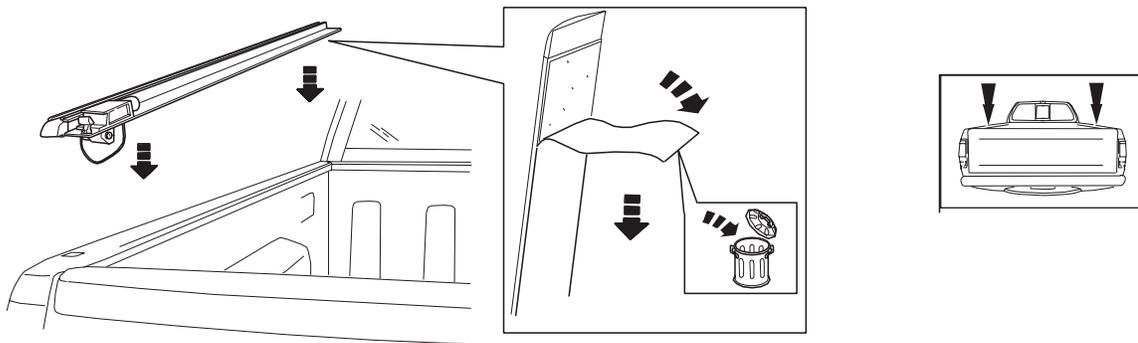


Attach clamps as shown, may need to adjust up or down to adjust rail.

2

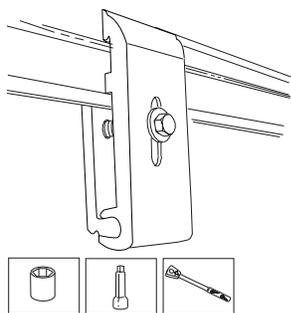

Place front rail at front of truck rail as shown.

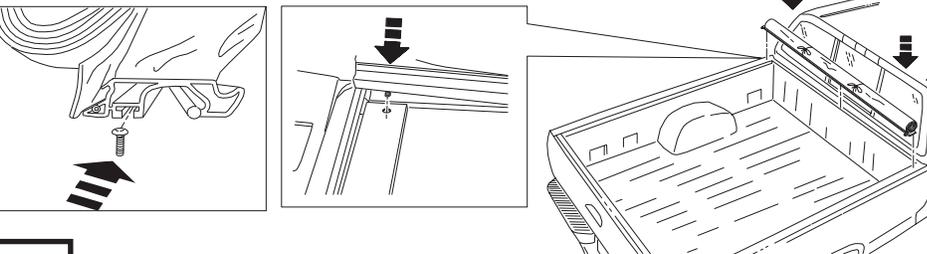

3

Release the ties and unroll the cover. Do not apply pressure to the Velcro at this time. Latch rear rail first then secure Velcro. Pull cables to release. Straps must be tied at front when cover is rolled up.

4

