


- 1** Lift the hood and remove any dirt or debris. Remove the rubber bumpers from the hood.
- 2** Line up the hood protector on the underside of the hood. Insert the mounting screws through the holes in the hood protector into the factory holes in the hood.  
**TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.**
- 3** Center the hood protector on the hood and then tighten the screws with a screwdriver until snug. **DO NOT OVER TIGHTEN** this may damage your new hood protector. Close the hood **CAREFULLY** to check the fit. If the hood protector is not centered, slightly loosen the screws and move it to one side or the other until centered and re-tighten the screws.

**KIT CONTAINS:**  
HOOD PROTECTOR  
6 MOUNTING SCREWS  
**TOOLS NEEDED:**  
PHILLIPS SCREWDRIVER

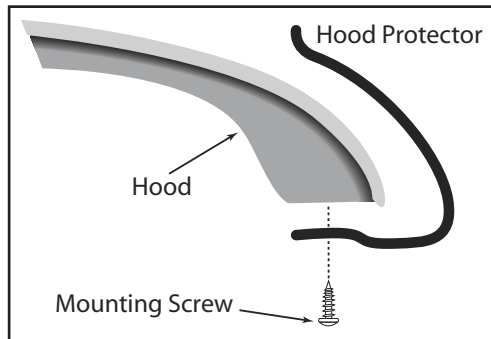

**CLEANING:** USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.