




129 NO DRILL HOOD PROTECTOR INSTALLATION INSTRUCTIONS

- 1** LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2** LINE UP THE HOOD PROTECTOR ON THE UNDERSIDE OF THE HOOD. INSERT THE SCREWS THROUGH THE HOOD PROTECTOR AND INTO THE HOLES IN THE HOOD. **TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.** (Fig 1)
- 3** CENTER THE HOOD PROTECTOR ON THE HOOD AND THEN TIGHTEN THE SCREWS WITH SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.
- 4** CLOSE THE HOOD **CAREFULLY** TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED AND RE-TIGHTEN THE SCREWS.

KIT CONTAINS:
HOOD PROTECTOR
6 MOUNTING SCREWS

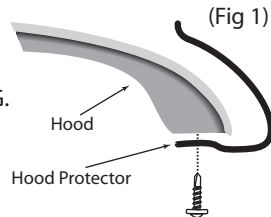

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.