


- 1** LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2** LOCATE THE 6 SQUARE HOLES UNDER THE RUBBER SEAL AND PLACE A PLASTIC INSERT INTO EACH OF THE SQUARE HOLES.
- 3** CENTER THE HOOD PROTECTOR TO THE HOOD AND SLIDE THE MOUNTING TABS BETWEEN THE RUBBER SEAL AND THE HOOD. INSERT A SCREW WITH A WASHER THROUGH EACH OF THE HOLES AND TIGHTEN JUST ENOUGH TO HOLD THE HOOD PROTECTOR IN PLACE.
- 4** TIGHTEN THE SCREWS WITH A SCREWDRIVER UNTIL SNUG **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.
- 5** CLOSE THE HOOD CAREFULLY TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED AND RE-TIGHTEN THE SCREWS.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

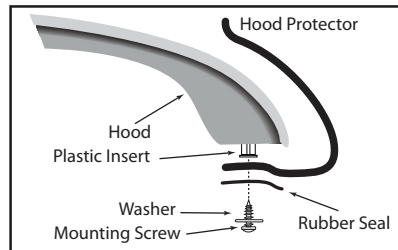

KIT CONTAINS:

HOOD PROTECTOR
6 MOUNTING SCREWS
6 WASHERS
6 PLASTIC INSERTS

TOOLS NEEDED:

PHILLIPS SCREWDRIVER