

HOOD PROTECTOR INSTALLATION INSTRUCTIONS


KIT CONTAINS:

HOOD PROTECTOR 4 GROMMET NUTS 4 MOUNTING SCREWS

4 PLASTIC WASHERS PHILLIPS SCREWDRIVER

TOOLS NEEDED:

- Lift the hood and remove any dirt or debris.
- Locate the 4 existing holes in the hood that line up with the holes in the hood protector. Insert grommet nuts from the hardware pack into the holes in the hood.
- The mounting tabs of the hood protector will be inserted THROUGH the grill. Lower the hood and using the alcohol pad provided in the hardware pack, clean the areas under the grill where the tape on the mounting tabs will adhere.
- Remove the red backing from the tape on the hood protector mounting tabs.
- Center the hood protector on the hood and slide the mounting tabs through the grill. Apply firm upward pressure to the underside of the mounting tabs to secure the hood protector to the grill.
- Using the screws and washers provided, fasten the hood protector to the hood in the 4 holes with the grommet nuts.

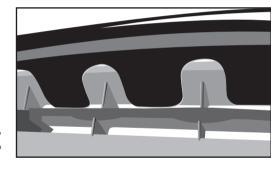

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS.

Stampede Products, Inc. • 1924 S. Washington, Blvd. • Camanche, IA. 52730 • Ph 563-259-9189 Fax 563-259-9288 • www.stampedeproducts.com