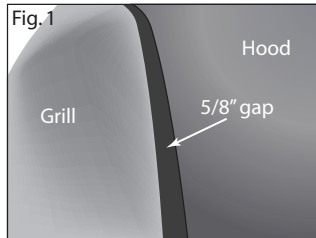


HOOD PROTECTOR INSTALLATION INSTRUCTIONS

- 1** Before starting installation insure that there is an even gap of at least 5/8" (16mm) between the hood and the grill across the entire length of the hood. (Fig. 1) If the gap needs to be adjusted, slightly loosen the adjustment bolts located at the points shown (fig. 2) and gently nudge the grill until the correct gap is achieved. Re-tighten the bolts.
- 2** Lift the hood and remove any dirt or debris. Clean the area under the hood with the alcohol pad where the tape is to adhere.
- 3** Remove the red backing from the adhesive tape on the hood protector.
- 4** Line up the hood protector on the underside of the hood and insert the plastic rivets through the slots in the hood protector and into the existing holes in the hood.
- 5** Match the contour of the inner tabs on the hood protector to the hood and apply firm pressure to securely adhere them to the underside of the hood.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

**KIT CONTAINS:**

HOOD PROTECTOR
2 PLASTIC RIVETS
3 SELF PIERCING SCREWS*
3 SHOULDER WASHERS*
ALCOHOL PADS

***NOTE:** The self piercing screws and shoulder washers included in the hardware pack are provided as an alternative to the adhesive tape installation.

