


70°-100° F (Install temp.)

- 1 This product is designed to be placed inside the window channel. Lower the window. Clean window channel with alcohol pad.
- 2 Remove the tape liner from the front flange. Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts **between** the trim and exterior surface. The front and top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 5 Install the rear visor using the same preparation and installation methods as front visor. Note that the top & rear flanges slide into the window channel, and the front flange fits **between** the rubber & window frame.

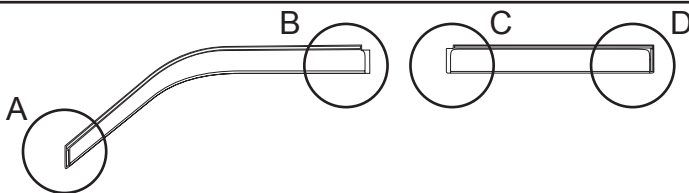

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219



70°-100° F (Install temp.)

- 1 This product is designed to be placed inside the window channel. Lower the window. Clean window channel with alcohol pad.
- 2 Remove the tape liner from the front flange. Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts **between** the trim and exterior surface. The front and top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 5 Install the rear visor using the same preparation and installation methods as front visor. Note that the top & rear flanges slide into the window channel, and the front flange fits **between** the rubber & window frame.



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219