


INSTALLATION INSTRUCTIONS


CARGO TRUNK

PART NUMBER: 426-01
2021-2025 FORD BRONCO
UNIVERSAL APPLICATION

PARTS CHECKLIST

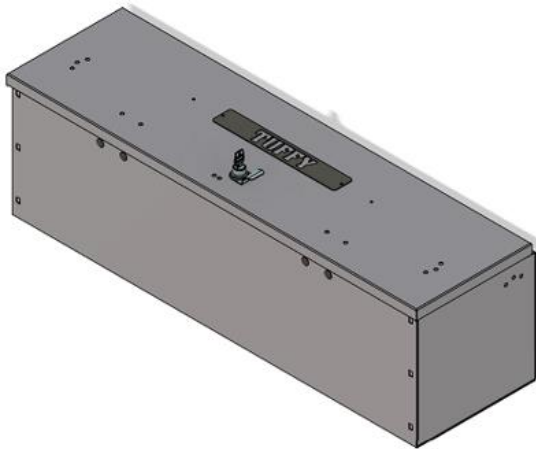


426-01 CARGO TRUNK

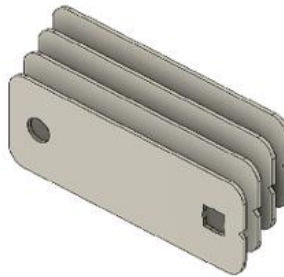

#1 (4) MOUNTING BRACKETS

SHIPPING PACKAGE CHECKLIST

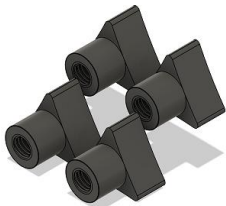

#2 (4) WING
KNOB NUTS




#3 (4) 5/16 x 3/4"
CARRIAGE BOLT



#4 (4) 3/8" FLAT
WASHER



#5 (4) 8mm x 40mm
FLANGE HEAD BOLT

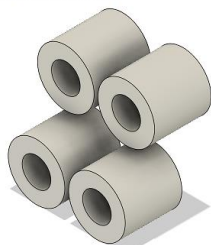

#6 (4) 3/4" ALUMINUM
SPACER



#7 (4) 5/16" LOCK
WASHER

 PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION

TOOLS NEEDED FOR FORD BRONCO INSTALLATION

- 13mm Socket, Extension, and Ratchet
- 10mm Socket, Extension, and Ratchet

OPTIONAL TOOLS FOR UNIVERSAL INSTALLATION

- Drill and bit (Appropriate size for selected hardware)

*****DUE TO THE HEAVY WEIGHT OF THE PRODUCT A SECOND SET OF HANDS IS RECOMMENDED*****

FORD BRONCO INSTALLATION

1. Mounting Bracket Installation

- Prepare the Cargo Trunk by installing the (4) #1 Mounting Brackets using the (4) #2 Wing Knob Nuts, (4) #3 Carriage Bolts, and (4) #4 Flat Washers.
- Begin by taking one #3 Carriage Bolt and placing the bolt through the square hole in one #1 Mounting Bracket. **(See Figure 1)**

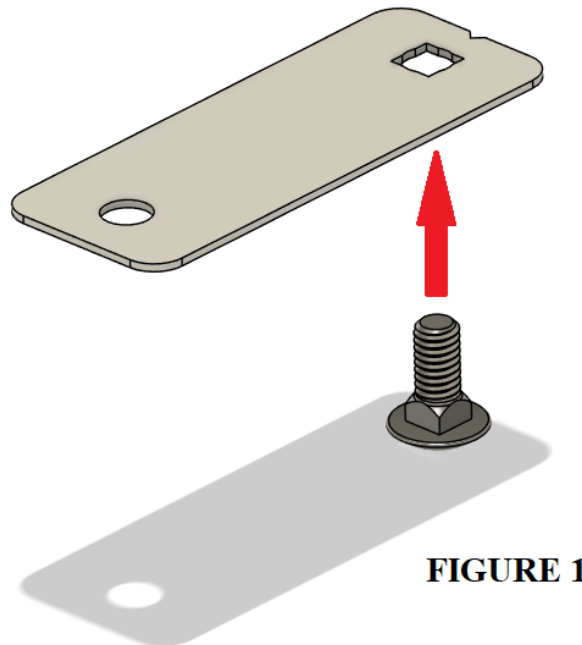


FIGURE 1

 Call 800-348-8339 for Technical Support

- Take the #1 Mounting Bracket with the #3 Carriage Bolt and run the bolt through one of the mounting holes in the bottom corner of the trunk. Use one #4 Flat Washer and one #2 Wing Knob Nut to secure. **Do not fully tighten.** (See Figure 2)

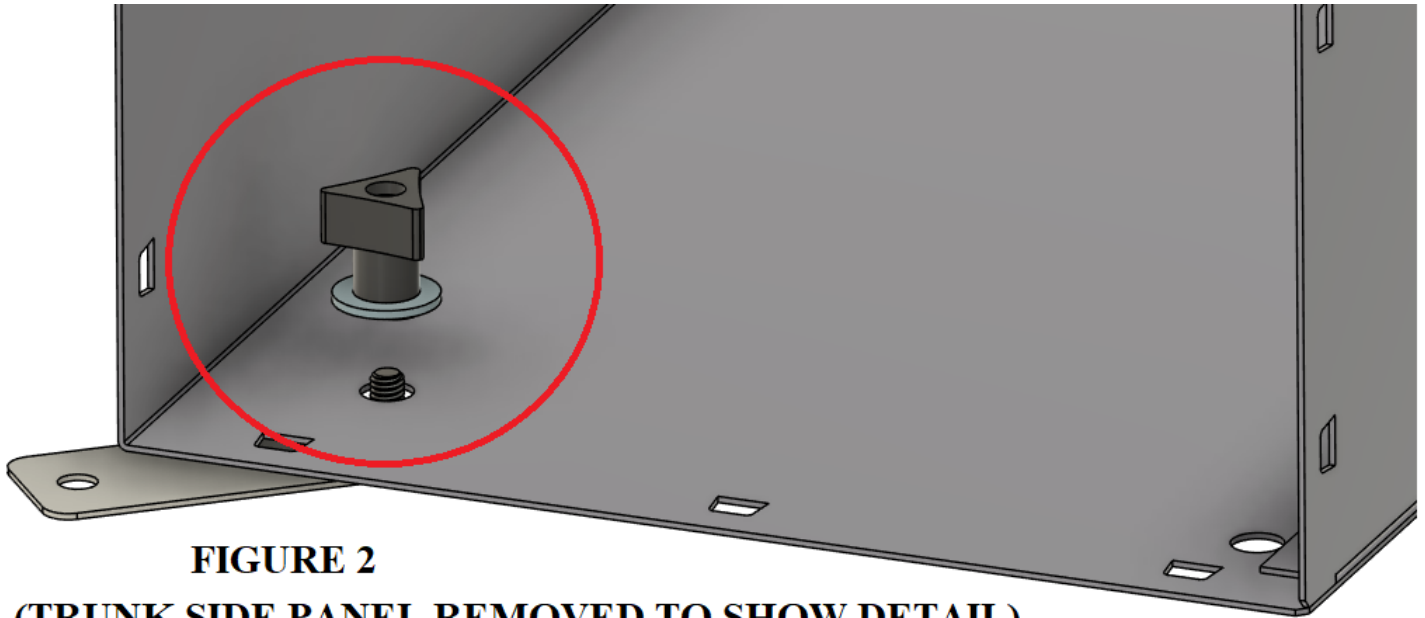


FIGURE 2
(TRUNK SIDE PANEL REMOVED TO SHOW DETAIL)

- Repeat the process with the remaining three Mounting Brackets.
2. **Prepare vehicle for installation**
 - Remove cargo loops from the vehicle cargo area using the 10mm socket.
 3. **Install Cargo Trunk in vehicle**
 - Place the Cargo Trunk in the vehicle cargo area so the mounting brackets are over the cargo loop mounting points.
 - Rotate Mounting Brackets so the holes in the brackets line up with the threaded mounting points on the vehicle floor.
 - Place one #6 Aluminum Spacer under each Mounting Bracket hole.
 - Insert one #5 Flange Head Bolt and one #7 Lock Washer through each Mounting Bracket, Aluminum Spacer, and thread into the vehicle mounting point. **Do not fully tighten.**
 - Once the Cargo Trunk is in the correct position, tighten all Mounting Bolts and Wing Knob Nuts.
 - Installation is now complete!

UNIVERSAL INSTALLATION

***** ADDITIONAL HARDWARE IS REQUIRED FOR UNIVERSAL MOUNTING APPLICATIONS *****

***** A SECOND SET OF HANDS MAY BE REQUIRED TO COMPLETE INSTALLATION *****

1. Prepare mounting location

- Place the Cargo Trunk in the desired location.
- **Before marking mounting hole locations:**
 - A. Make sure the lid opens without interference
 - B. Make sure drill hole locations do not interfere with subsurface vehicle wiring, plumbing, components, etc...
- Mark the Mounting Bolt drill locations through the four corner holes in the base of the Cargo Trunk.
- Move Cargo Trunk and set aside.

2. Determine needed mounting hardware

- Take note of the bolt length needed that can be sourced from a local hardware store.
- Assess mounting surface to determine appropriate length bolts.
- Suggested hardware will include (4) Bolts, (8) Washers, and (4) Lock Nuts.

3. Drill mounting holes

- **Use a drill stop if necessary to control drill bit depth and prevent damage to subsurface objects.**
- Use the appropriate drill bit size to drill through the marked drill locations.

4. Install Cargo Trunk in vehicle

- Place Cargo Trunk over mounting holes and align the holes in the base of the Cargo Trunk with the drilled hole locations.
- Starting with one mounting bolt at a time, place bolt with washer thru the base of the Cargo Trunk and secure with washer and lock nut. **Do not fully tighten.**
- Once the Cargo Trunk is in the desired location, tighten all mounting bolts. A second set of hands may be necessary for this step.