

INSTALLATION INSTRUCTIONS


36" CARGO DRAWER

(P/N# 43001-01-03/43001-01-01)


2018-2025 JEEP WRANGLER JL

2021-2025 FORD BRONCO


PARTS CHECKLIST

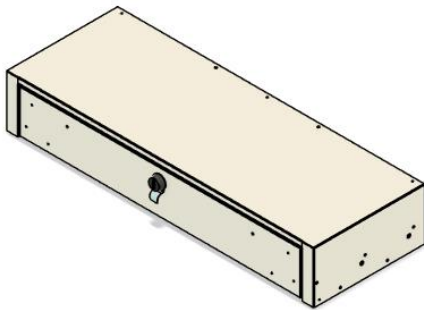

36" DRAWER ASSEMBLY

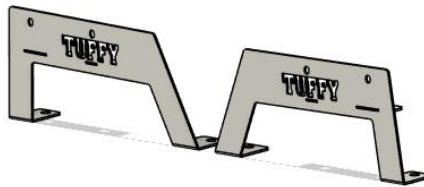

#1 - JEEP WRANGLER JL
LEFT AND RIGHT SIDE
MOUNTING BRACKETS

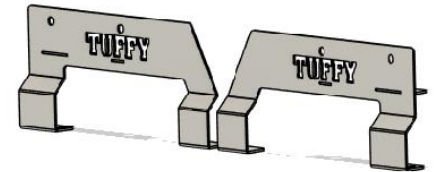

#2 - FORD BRONCO
LEFT AND RIGHT SIDE
MOUNTING BRACKETS



#3 (8) 5/16" TAMPER
RESIST TORX SCREWS



T40 TAMPER RESIST TORX WRENCH

TOOLS NEEDED FOR FORD INSTALLATION

- 10mm Socket and Ratchet


TOOLS NEEDED FOR JEEP INSTALLATION

- Small Flat Blade Screwdriver

*****DUE TO THE HEAVY WEIGHT OF THE PRODUCT A SECOND SET OF HANDS IS RECOMMENDED*****

JEEP WRANGLER JL INSTALLATION

1. Prepare the vehicle for installation by removing the (2) front (forward most) and (2) middle cargo tie-down loops using the provided T40 Torx Wrench. Set these aside, as they will be used to install the drawer.
Use the small flat-blade screwdriver to flip open the cover on the cargo loop allowing access to the factory T40 Torx Screw
2. With assistance, place the drawer on a flat surface, allowing access to the bottom and sides of the drawer for installation of the mounting brackets.
3. Using the **provided T40 Torx Wrench**, install the **#1 Left and Right-Side Mounting Brackets** to the Drawer Assembly using **four #3 Torx Screws** per side. **Do not fully tighten the screws until all the screws have been started.**

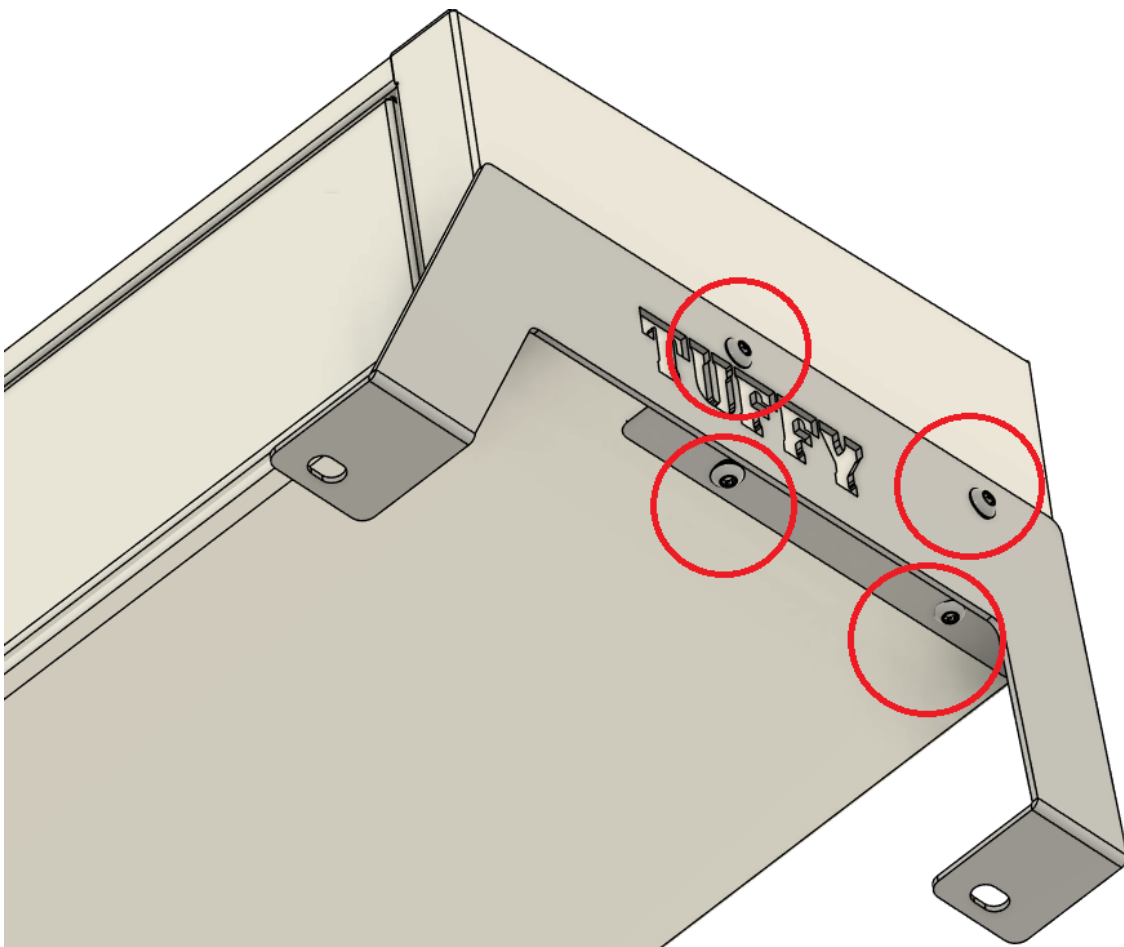

4. With assistance, place the drawer assembly into the cargo area, lining the holes in the mounting brackets with the holes used to mount the cargo loops.
5. Using the factory bolts with cargo loops, secure drawer to vehicle.

Do not fully tighten the screws until all the screws have been started.


*****Align the plastic locating tab on the bottom of the cargo loop with the inside edge of the mounting bracket. Cargo loop will sit flat on the top of the mounting bracket when the orientation is correct. Improper alignment may cause damage to the cargo loop*****

6. Once all bolts are started and cargo loops are in the correct orientation, fully tighten all the bolts.
7. Installation is now complete.

*****DUE TO THE HEAVY WEIGHT OF THE PRODUCT A SECOND SET OF HANDS IS RECOMMENDED*****

FORD BRONCO INSTALLATION

1. Prepare the vehicle for installation by removing the (2) front (forward most) cargo tie-down loops using your 10mm socket. Set the bolts aside, as they will be used to install the drawer. The cargo tie-down loops will not be used with your cargo drawer.
2. With assistance, place the drawer on a flat surface, allowing access to the bottom and sides of the drawer for installation of the mounting brackets.
3. Using the **provided T40 Torx Wrench**, install the **#2 Left and Right-Side Mounting Brackets** to the Drawer Assembly using **four #3 Torx Screws** per side. **Do not fully tighten the screws until all the screws have been started.**

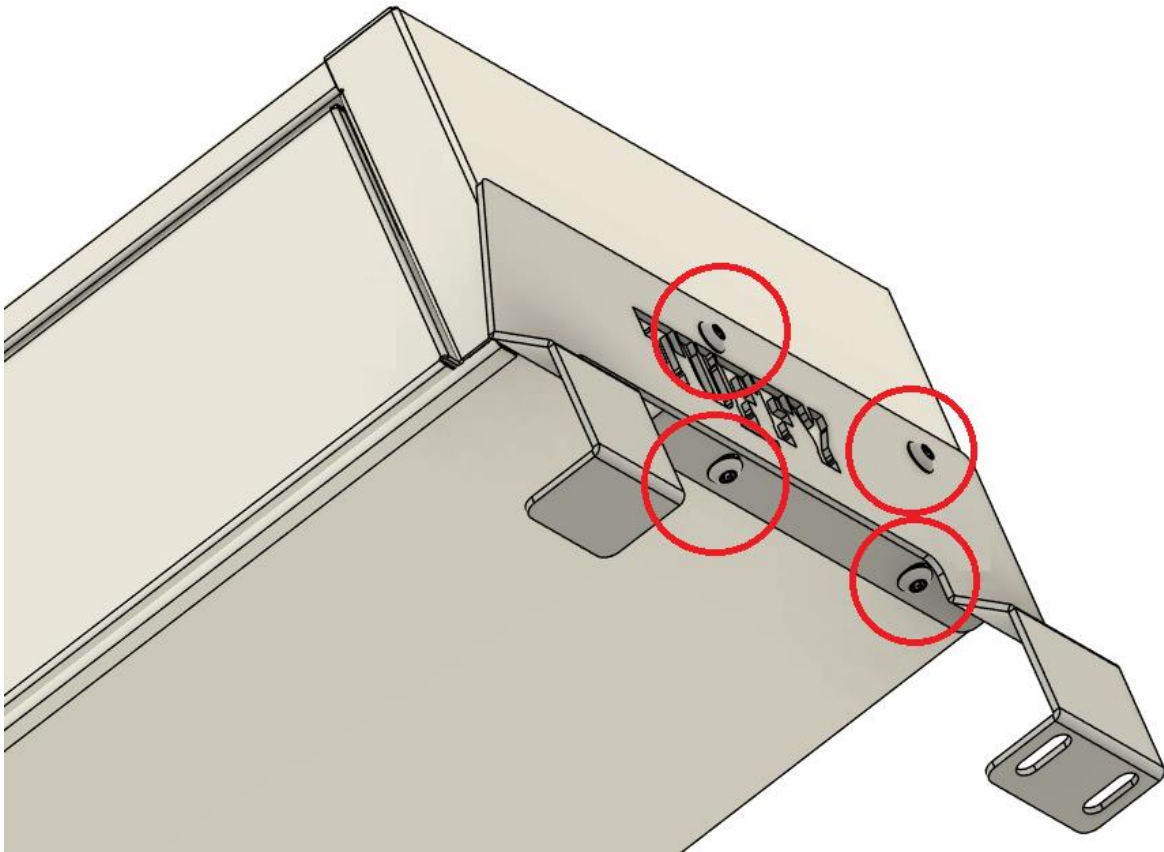

4. With assistance, place the drawer on the floor of the rear passenger area of the vehicle, lining the holes in the mounting brackets with the holes used to mount the cargo loops.
5. Using the factory bolts, secure drawer to vehicle.
Do not fully tighten the screws until all the screws have been started.
6. Once all bolts are started and cargo loops are in the correct orientation, fully tighten all the bolts.
7. Installation is now complete.