



INSTALLATION INSTRUCTIONS


Console Safe #761-01
2022 – Current Toyota Tundra
See tuffyprompts.com for Fitment Guide

QC CHECK

____ SHIP PACK CONTENTS
____ VISUAL INSPECTION
____ LOCK FUNCTION TEST
____ RUBBER SEAL
____ SHIPPING PACKAGE

Please read and fill out the enclosed warranty registration card or register online at <https://tuffyprompts.com/help/warranty-information/warranty-registration/> to activate your warranty.

PARTS CHECKLIST

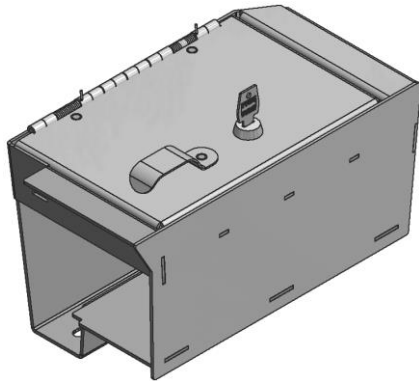


#761 Console Safe




#1.5 Rubber Mat

SHIPPING PACKAGE CHECKLIST

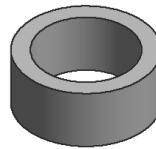


#1.1 (1) 3/8" Aluminum Spacer

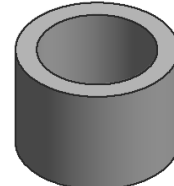


#1.2 (1) 1/2" Aluminum Spacer



#1.3 (2) 1/4" Washer

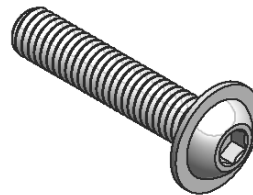

#1.4 (1) M6-30mm Screw

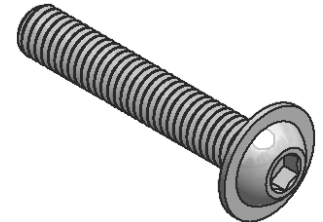

#1.5 (1) M6-35mm Screw

TOOLS CHECKLIST

- 10mm Socket
- 4mm Hex Wrench

PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Remove all contents from the shipping box and confirm that you have all the components listed above.
2. Remove the mat in the bottom of the console and unscrew the (2) OEM Hex Screws shown in **Figure 1**.

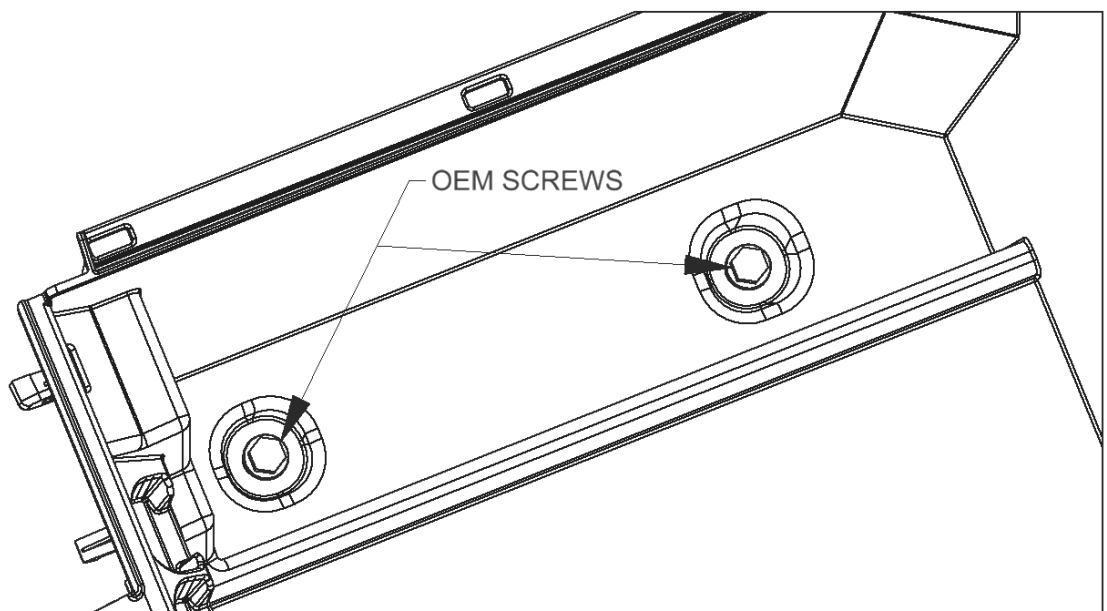


FIGURE 1

3. In place of the OEM Screws, insert the #1.1 Spacer into the front emboss
And the #1.2 Spacer into the back emboss at the bottom and
centered over the holes. **See Figure 2.**

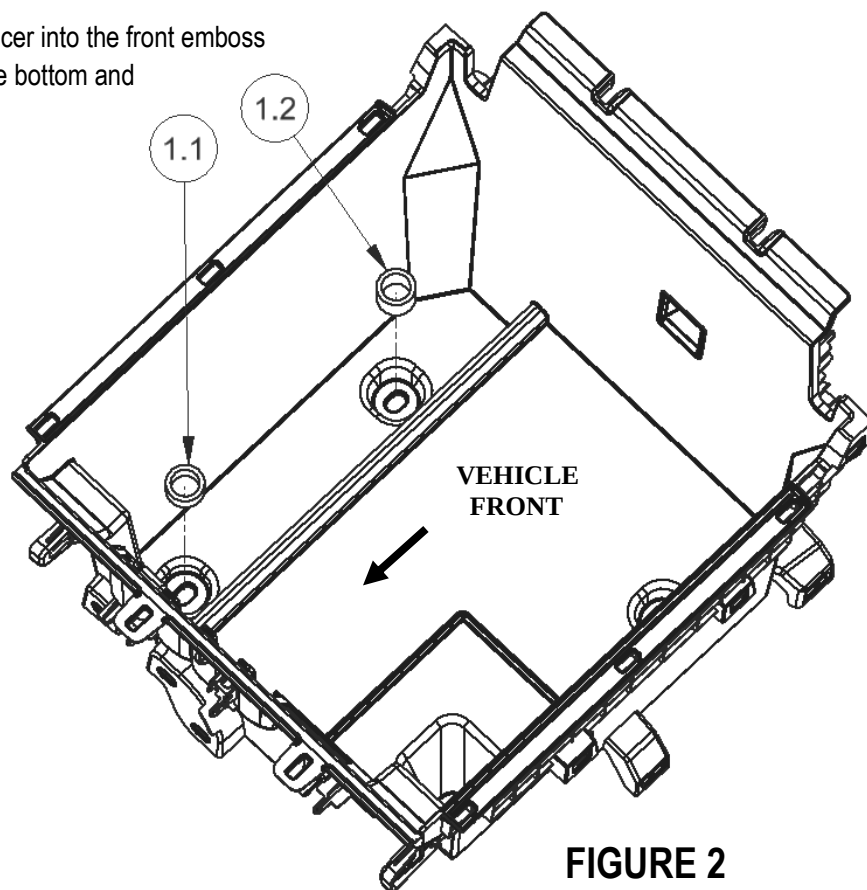


FIGURE 2

4. Lower the #761 Console Safe down into the console, shown in **Figure 3.**

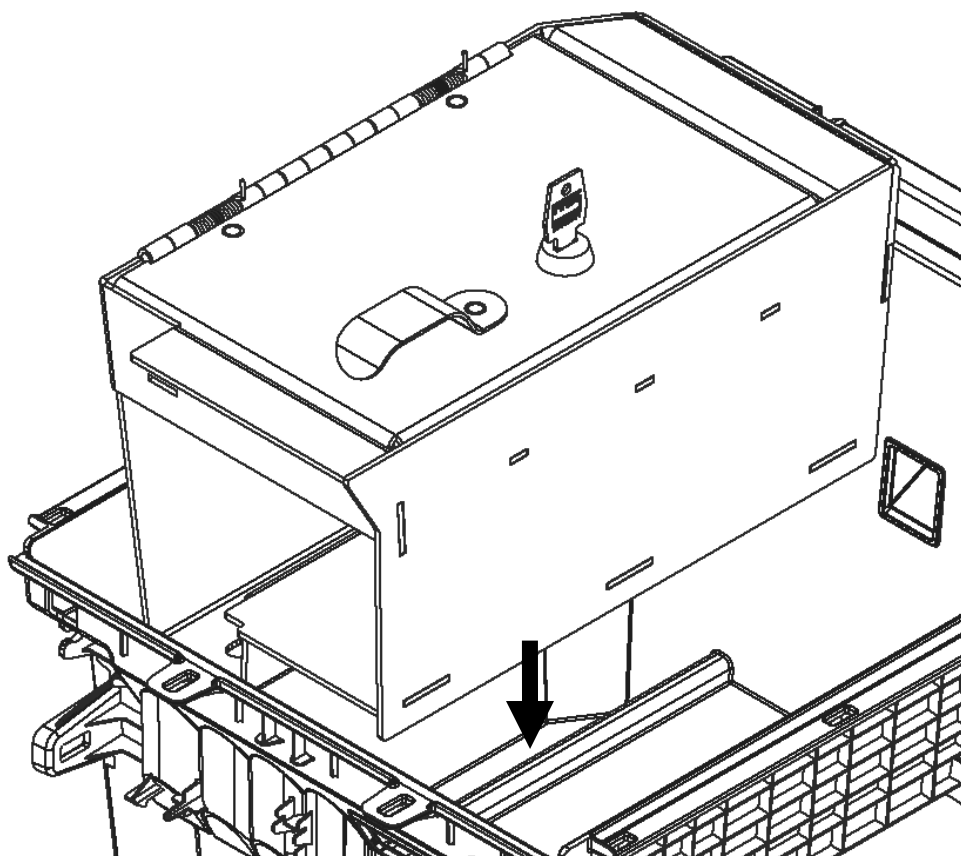


FIGURE 3

5. Unlock and open the safe. Insert the #1.4 and #1.5 Screws through the (2) #1.3 Washers and then insert the #1.4 Screw in the front hole and the #1.5 Screw into the back hole.

See Figure 4

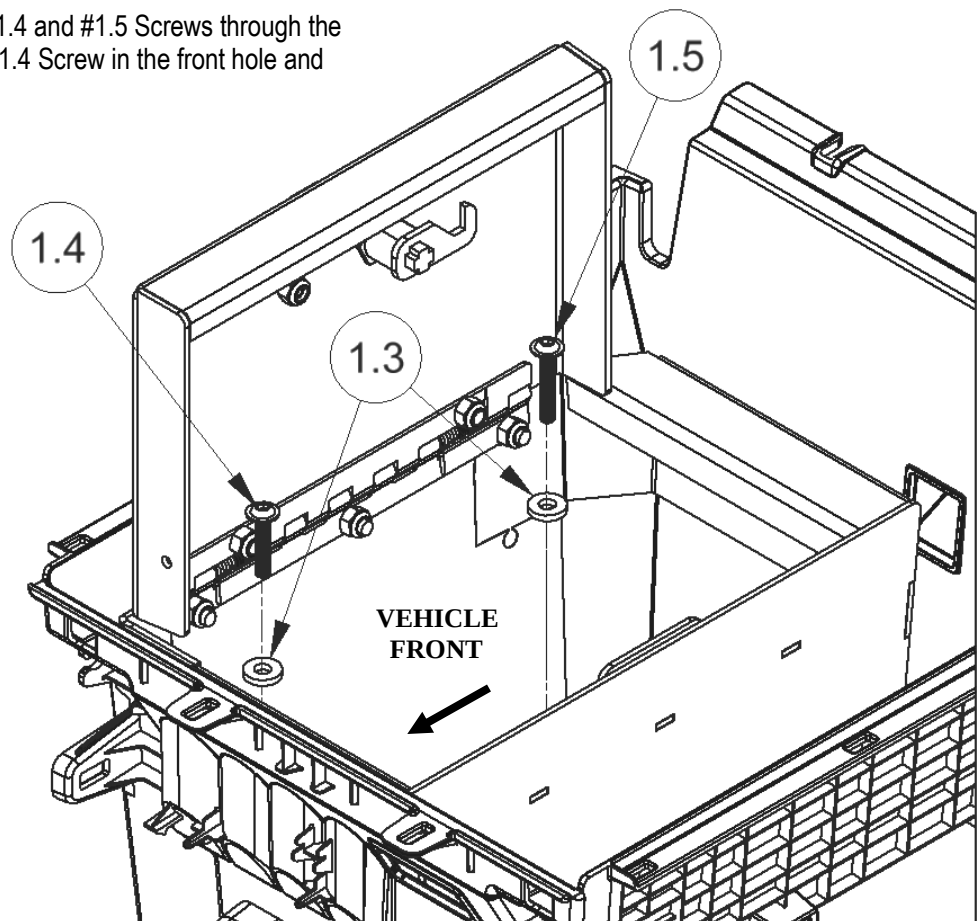


FIGURE 4

6. Place the #1.6 Mat into the lower portion of the console safe with the notched edge in the back.

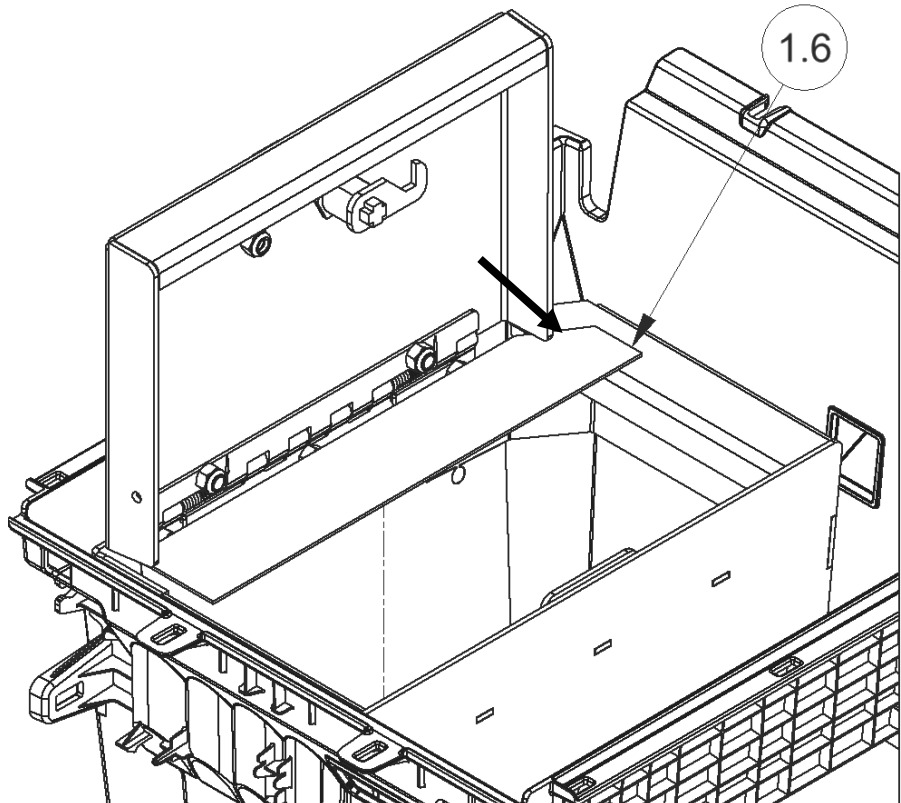


FIGURE 5