

T-REX

Billet Grilles

20897

05-08 TOYOTA
TACOMA

20897

05-08 TOYOTA
TACOMA

HOOD SCOOP INSERT

Tools Required:

Phillip Screw Driver
5/16" Wrench
Drill & 1/8" Drill Bit


Hardware / Parts List:

- 1 Billet Insert (4 bars)
- 2 6-32 X 1.5" Machine Screw
(SHAVED HEAD SCREW)
- 2 6-32 Nylon Lock Nuts
- 2 #6 Flat Washers

Read and understand instructions before attempting installation

Step 1

Center the billet into the hood scoop opening. Mark the mounting holes to the factory hood scoop. Remove the billet and drill a 1/8" hole at each mark. Insert the machine screws into the tabs on the billet. The head on the screws have been shaved down to fit in between the billet bars.

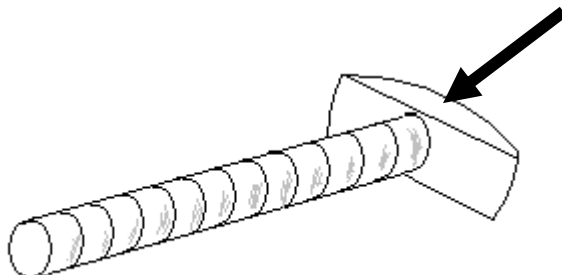

Step 2

Re-center the billet into the opening. Install the washers and nylon lock nuts from the back.

Thank you for purchasing your T-Rex billet grille. T-Rex Truck Products Inc. 4/18/05