

T-REX

Billet Grilles

21902

**2008 TOYOTA
SEQUOIA**

21902

**2008 TOYOTA
SEQUOIA**

4 PC BILLET INSERT


Recommended Tools:

Phillips Screw Drivers
8mm, 10mm Socket or Wrench


Parts List / Hardware:

| | | | |
|---|-------------------------|---|---------------------------|
| 4 | Billet Inserts | 2 | Factory Replacement Clips |
| 6 | #8 6 Head X 1 ¼" Screws | | |
| 6 | #8 U Nuts | | |
| 6 | 1" J-Hooks | | |

Read and understand instructions before attempting installation

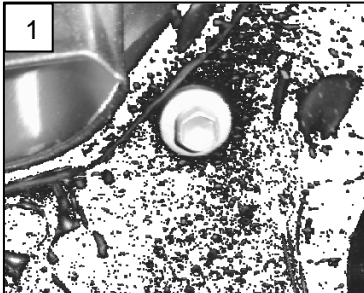

STEP 1: Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

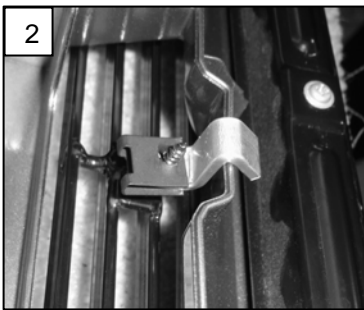

STEP 2: Open the hood of the vehicle. Remove the factory bolts holding the factory grille to the hood supports. Remove the two 10mm screws holding the hood latch to the grille. Remove all remaining bolt holding the grille to the hood supports (1). There are 12 bolts total. Pry the top of the grille away from the hood using a soft tool. Removing the grille shell is going to take quite a bit of pressure. There is a clip in each corner of the grille that will break. New replacements are provided in the hardware.

STEP 3: Now that the grille is removed from the vehicle; place grille down on a soft surface. Place an insert into the lower grille opening and turn grille shell over. With the grille centered; place the provided screws from the front side of the grille into the provided J-Hook (2). Repeat this on all J-Hooks and all inserts.

STEP 4:

Replace the clip in each corner of the grille shell and reinstall the shell. Reinstall the factory bolt into factory positions and enjoy.

Thank you for purchasing your T-Rex billet grille. 03-13-08