

20809

**07-08 INFINITI
G-35 SEDAN**



20809

**07-08 INFINITI
G-35 SEDAN**

BILLET INSERT


Tools Required:

Phillip / Slotted Screwdrivers
10mm Socket

Hardware / Parts List:

1 Billet Insert	4 2" Flange Brackets
4 #8 x 1 ¼ Screws (#6 Head)	2 Plastic Retainers
4 #8 U-Nuts	


Read and understand instructions before attempting installation

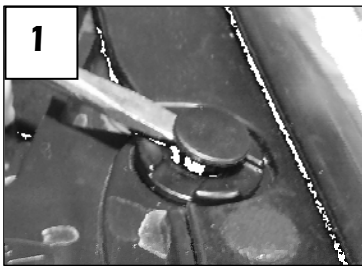

Step 1

Remove six plastic fasteners along the top of the grille; use a small screwdriver to pull the center from each fastener (1). Remove five 10mm bolts securing the radiator cover.

Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (2). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, remove (2).

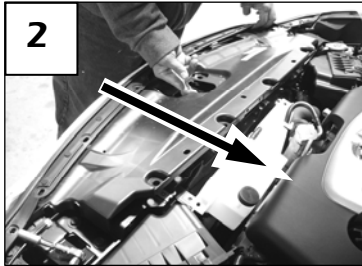


Remove five 10mm bolts behind the grille. Depress the molded clips retaining the grille and remove from the front.

If installing a bumper billet, install the bumper billet and then go to **Step 2** below.

Step 2

Center the billet insert into the opening. The mounting tabs align with the factory mounting holes.

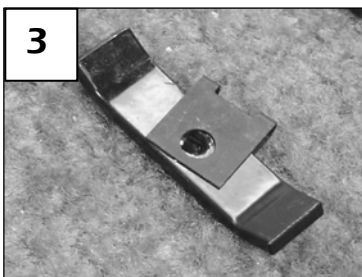

Slide the upper brackets into the mounting holes (it may be necessary to slightly bend the upper brackets so they align correctly). Use the plastic retainers to retain the upper mounting tabs.

Slide the u-nuts onto the flange brackets supplied (3). Secure the four lower mounting tabs to the bumper cover using the screws from the front and the flange brackets with u-nuts from the back. Tighten the hardware.



Step 3

Re-install the wiring harness and radiator cover. Secure the coolant overflow tank. ***Thank you for purchasing your T-Rex billet grille. 2/21/07***