

25284

**06-09 CHEVY
TRAILBLAZER SS
BUMPER BILLET**



25284

**06-09 CHEVY
TRAILBLAZER SS
BUMPER BILLET**

2006-09 CHEVY TRAILBLAZER SS (ONLY) CENTER BUMPER BILLET

Tools Required:

Phillips Screwdriver


Parts list:

- 2 Side Vent Billets (7 bars each)
(Right & Left)
- 2 #8 x 1.25" Screws (#6 Head)
- 2 #8 U-Nuts
- 2 2" Flange Brackets

Read and understand instructions before attempting installation

Step 1

Test fit the grilles in place to identify the left and right billet. Slide the u-nuts onto the flange brackets.

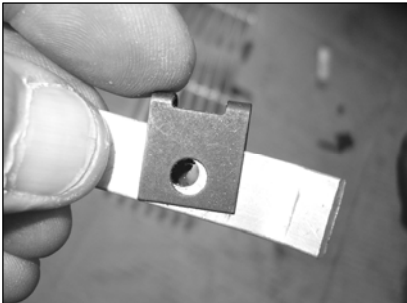

Step 2

Place one of the inserts into the opening. Hold the billet in place and insert screw; secure the billet with the flange bracket from behind the bumper. Do not over-tighten. Now snug the two screws so the billet is held firmly in place. Repeat the installation of the remaining billet. *Thank you for purchasing a T-Rex billet grille. 9/6/06*

