

# 54284

06-08 CHEVY  
TRAILBLAZER SS



# 54284

06-08 CHEVY  
TRAILBLAZER SS

## **UPPER CLASS SERIES MESH GRILLE – 4 PC** (Includes 2 PC mesh inserts between headlights and signal lights)

### **Recommended Tools:**

3/16" Socket or Nut Driver  
Slotted screwdriver  
Phillips Screwdriver  
Drill & 1/4" drill bit




### **Parts List / Hardware:**

1	Upper Mesh Grille	7	#10 Flat Washers
1	Lower Mesh Grille	7	6-32 Nylon Lock Nuts
2	Mesh Side Vent Inserts	4	#8 Flat Nuts
7	Slotted T Brackets	4	#8 X 3/4" Phillips Screws

## **Read and understand instructions before attempting installation**

### **Step 1**

Use a slotted screwdriver to release the clips along the back of the grille (1). Lightly pull grille forward; release the clips in the center and along the bottom. Two clips remain on each end of the grille (between headlamps and signal lamps). Wrap a slotted screwdriver with a rag to prevent scratching; then pry the clips loose (2).

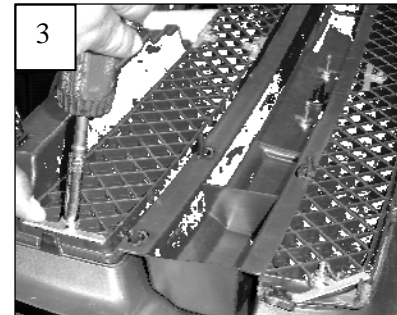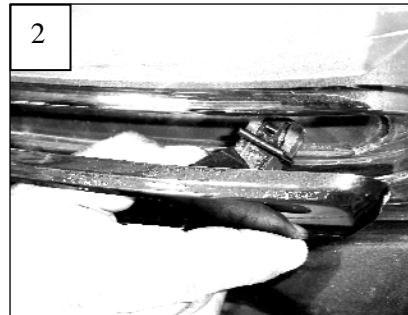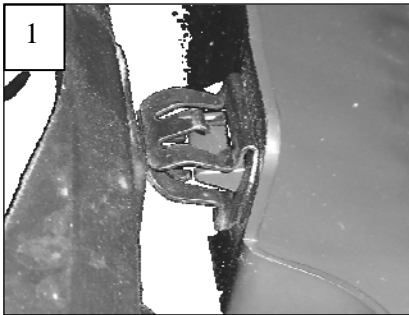

### **Step 2**

Center the upper grille and install the slotted T brackets (3). Secure the brackets with the washers and nylon lock nuts. Center the bottom grille and install center slotted T bracket. Install a T bracket on each end; angle these brackets on each end. Tighten the hardware.



### **Step 3:**

The factory side vents in the grille must be removed from the cross bar to install the inserts. Drill the factory rivets from the inner holes on the vents; slide the plate out. Center the new mesh inserts in front of factory vents; re-center the vent with the mesh insert in front. Install two #8 Phillips screws and flat nuts. Check the alignment of the inserts; tighten the hardware. Repeat process for opposite side. Re-install the grille assembly onto the vehicle; re-install the radiator cover. ***Thank you for purchasing a T-Rex Billet Grille. 11/1/06.***