

54481

**07-13 JEEP
WRANGLER
UNLIMITED**



54481

**07-13 JEEP
WRANGLER
UNLIMITED**

UPPER CLASS MESH INSERT

Tools Required:


Phillip/ Slotted Screwdriver
Needle Nose Pliers
8mm Socket

Hardware / Parts List:

7 Mesh Inserts
21 1/2" x 1/2" L Brackets
21 6-32 Nylon Lock Nuts

Step 1

Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

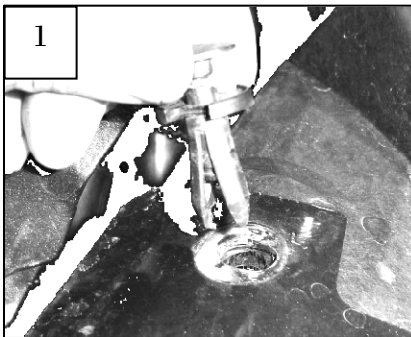


Step 2

Using the needle nose pliers; unclip the harness to the factory turn signals. These can be accessed through the wheel wells. Remove the upper factory pop clips holding the grille to the vehicles core support (1). By pulling on the bottom center of the grille; this will release the four lower grille clips. Remove the grille from the vehicle and place on a soft surface to prevent damaging your factory grille.

Step 3

If the grille is equipped with a one piece factory mesh; remove the mesh by removing the screws and U clips on the bottom of the grille. Place the grille face up on a soft surface. Place one of the inserts into an opening. While holding the grille insert in place; place an L Bracket and nylon lock nuts onto each stud (2). Making sure that the insert is centered; tighten the hardware. Repeat this on all remaining inserts.

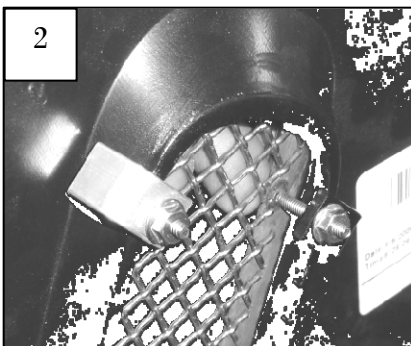

Step 3

Replace the grille and all hardware. Reconnect the fog lights. Make sure all hardware is secure.

Thank you for purchasing your T-Rex billet grille. 5/5/08