*54810* 

08-12 INFINITI **G-37 SPORT** 



*54810* 

08-12 INFINITI **G-37 SPORT** 

# **UPPER CLASS SERIES MESH GRILLE**

### **Tools Required:**

Phillip / Slotted Screwdrivers 8mm, 10mm Socket


#### Hardware / Parts List:

1 Mesh Grille

8 #10 Flat Washers

8 6-32 Nylon Lock Nuts

# Read and understand instructions before attempting installation

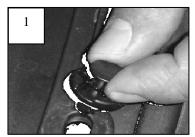

### Step 1

Remove seven plastic fasteners along the top front side of the grille; use a small screwdriver to pull the center from each fastener (1). Remove twelve 10mm bolts securing the radiator cover. Two of these are located on each side of the vehicle under the hood seal in the corner (2). Remove the bracket on each side. Un pop the bumper cover from the fender.



Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (3). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, unclip the hood latch cord and remove cover (3).


Remove five 10mm nuts behind the grille. Depress the molded clips retaining the grille and remove from the front.



<u>If installing a bumper grille, install the bumper grille and then go to Step 2.</u>

## Step 2

Center the insert into the opening. The mounting tabs align with the factory mounting holes. Slide the mounting brackets into the mounting holes. On each of the studs; place a washer and nylon lock nut [4]. Making sure that the grille is centered, tighten down the hardware.

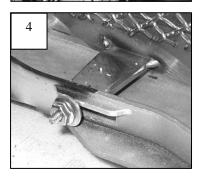

### Step 3

Re-install the wiring harness and radiator cover. Secure the coolant overflow tank. *Thank you for purchasing your T-Rex grille.* 12/08/07