

55029

52029



55029

52029

2010-2013 CHEVY
CAMARO SS

2010-2013 CHEVY
CAMARO SS

2010-2013 CHEVY CAMARO SS

Mesh Bumper

TOOLS REQUIRED:

Socket & Ratchet Set
Screwdriver Set
1/16 Drillbit & Drill

PARTS LIST


(1) Mesh Grille
(16) #8 Screws
(16) #8 Flatnuts

Step 1 Removal

- Remove 3 Torx from front of each Fenderwell. (Fig. 1)
- Remove 7mm Bolt from Bumper Cover just behind side signals. (Fig. 2)
- Remove 4 10mm Bolts from under Fender Well Cover at top front of Bumper Cover. (Fig. 3)
- Remove 2 10mm Bolts from bottom of Bumper Cover. (Fig. 4)
- Unplug Fog Lights
- Remove Bumper Cover
- Remove Plastic Bumper Reinforcement.

Step 2 Grille Installation

- Unlatch from around the Factory Bumper Grille and Remove. (Fig. 5)
- Place Mesh Bumper into the Factory Bumper Opening. (Fig. 6)
- With a 1/16 Drillbit, Drill through the Holes that are on the Brackets on the Mesh Grille. (Fig. 7)
- Insert the #8 Screw through the Hole you Drilled and Place a Flatnut to Thread the Screw in Place. (Fig. 8)
- Place back the Factory Shell.

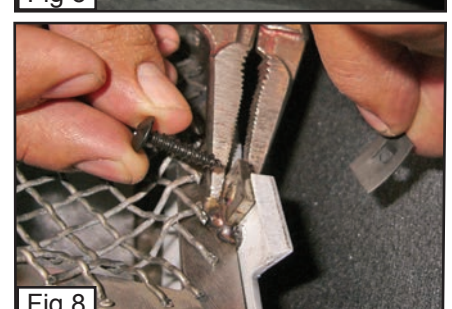

INSTALLATION COMPLETE

