



GRILLES

Torch Series Light Kit

Tools Required


- 10mm Socket
- 13mm Socket
- 14mm Socket
- Ratchet and Extensions

PARTS LIST 6399381

- (2) 3" LED Light Cube
- (2) LED Light Cradles
- (1) Driver Light Mount Bracket
- (1) Passenger Light Mount Bracket
- (4) M6 Nylock Nuts
- (4) M6 Socket Head Screw
- (2) M8 Lock Nuts
- (2) M8 Lock Washers
- (2) M8 Bolts

PARTS LIST 6399381-BK

- (1) Driver Light Mount Bracket
- (1) Passenger Light Mount Bracket

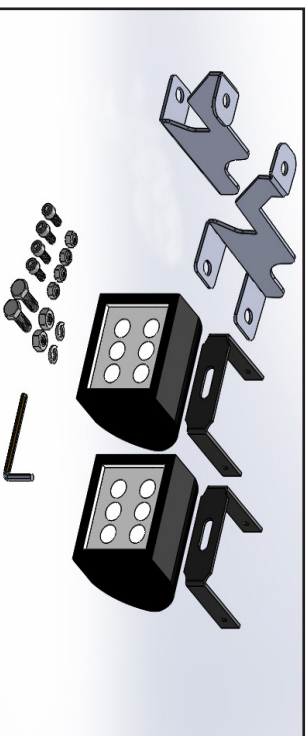

63999381
63999381-BK
2012-2014 Toyota Tacoma

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct, our tech department can be contacted at tech@traxlight.com to verify, fitment or assist with tech questions. All other inquiries can be directed to info@traxlight.com. In the event you do not have internet access please call 1-800-287-5900. NOTE: We recommend painting all areas exposed behind grille black prior to installing for best results.



Step 1

Begin by opening the hood and marking the relation between the hinge and hood. Use a piece of tape so you can ensure proper hood alignment when installation is complete.



Step 3

Secure the LED Light into the bracket. Loosely secure the assembly to the bracket.



Step 2

Loosen the two bolts securing the hood hinge.



Step 4

Secure bracket to hood hinge with factory bolts. Repeat on opposite side of vehicle.



Torch Series Light Kit

6399381

6399381-BK

2012-2014 Toyota Tacoma

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct, our tech department can be contacted at tech@trexillet.com to verify, fitment or assist with tech questions. All other inquiries can be directed to info@trexillet.com. In the event you do not have internet access please call 1-800-287-5900. NOTE: We recommend painting all areas exposed behind grille black prior to installing for best results.



Step 5

Wire LED Light via our T-Rex optional wiring harness kit (part# 639HAR1) or custom wiring harness. T-Rex recommends Torch Lights be wired with our optional wiring harness kit (part#639HAR1). To adjust the angle of your Light Bar, rotate the Light Bar to adjust the angle, then tighten the hardware once the desired angle is achieved (please be careful not to over tighten the mounting hardware). It is best to adjust the angle with the vehicle on level ground with lights facing a wall, garage door or other solid barrier. We recommend checking from a distance of 25'. Your installation is now completed.