



NISSAN FRONTIER CLAMP INSTALLATION

Item	Part #	Description	Qty
1.	1118236	Corner Cab Seal	2
2.	1705392	Clamps, End	4
3.	1705580	Clamps, Middle	2

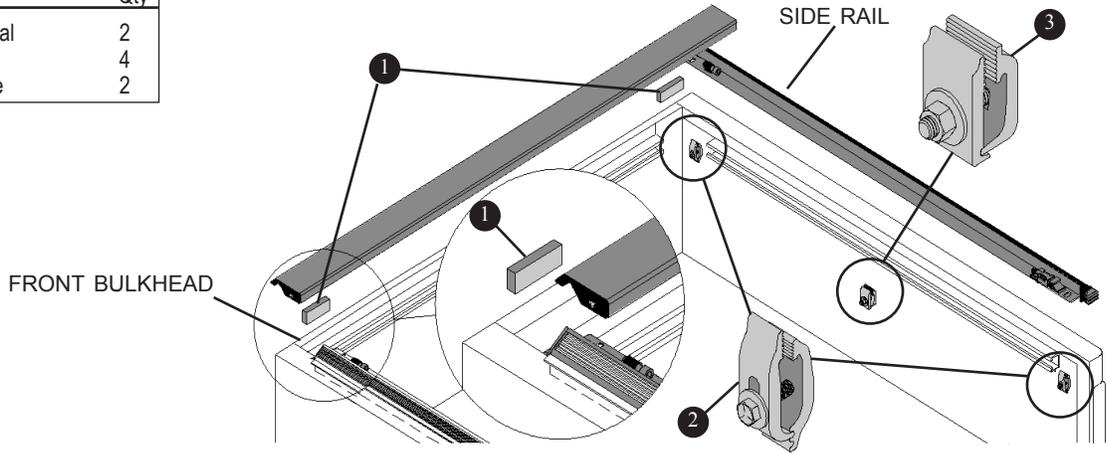


Follow these instructions to install cab corner weather seals and side rail clamps on your 2005 or newer Nissan Frontier pickup. Refer to Owner's Manual for complete installation instructions.

STEP 1: Installing Corner Cab Weather Seals: Install cab weather seals to the inside front bulkhead corners, (see below). Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead to bond adhesive.

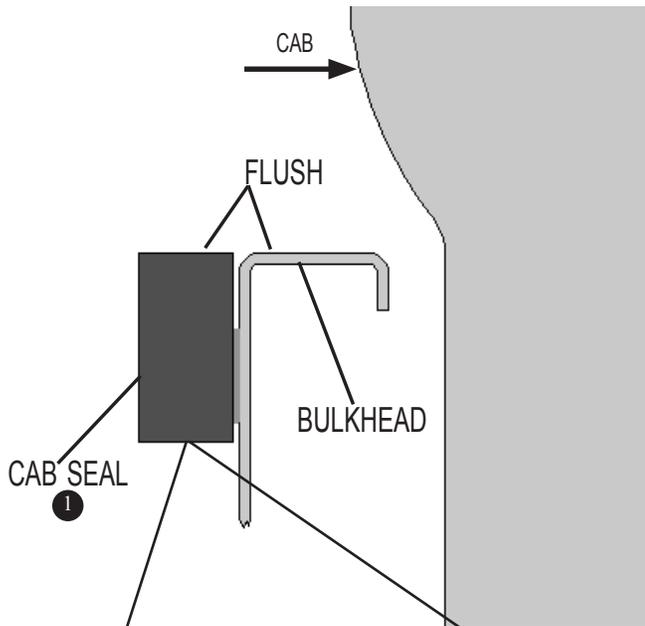

STEP 2: Side Rail Clamps: Install three clamps on each side rail as shown. Note the different clamp designs.

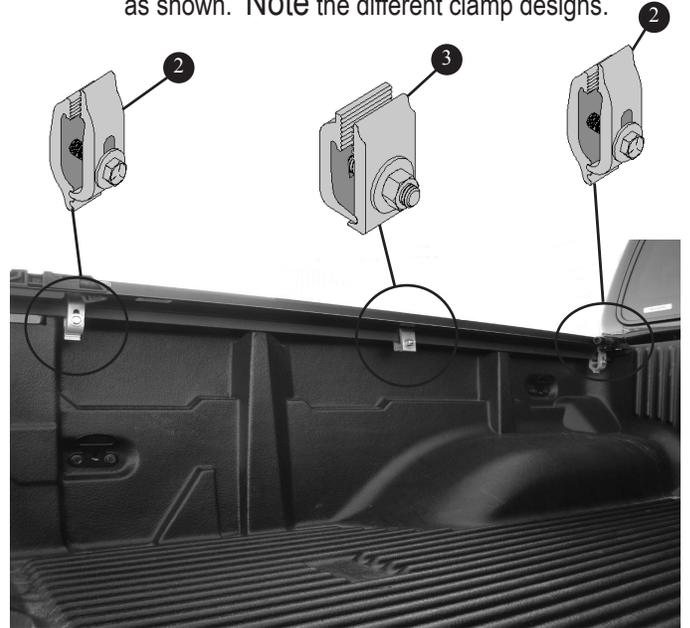

Clamp Configuration For Trucks With Utility-Tracks

