



MODEL SPECIFIC GUIDE

D-Ring Hinge Version

Model 5010 Nissan Titan Crew Cab
5.5' Short Bed 2004-2012 (without Utili Trac System)




If your truck is equipped with the Utili Trac System, you will need to purchase the Utili Trac Adapter kit - RSPT1360IK



MODEL SPECIFIC GUIDE D-Ring Hinge Version Model 5010 Nissan Titan 5.5' Short Bed 2004-Current

RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 42" from the back side of the bulkhead to the front edge of the bracket.

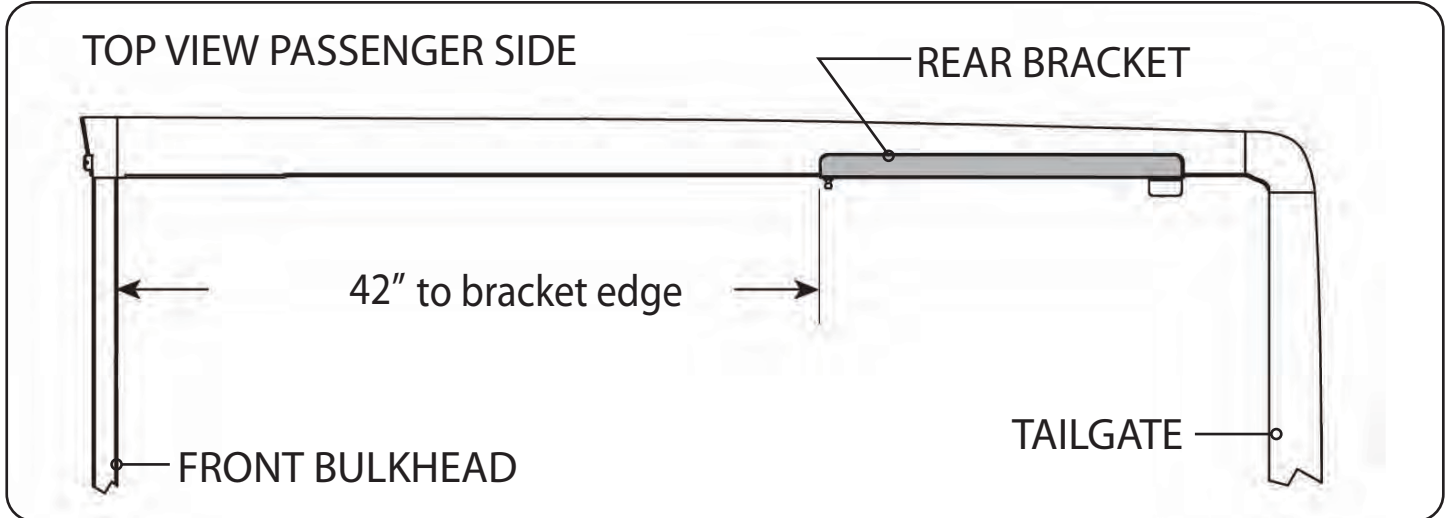

RE: Step 3 on the Quick Start Guide

Mount the front edge of the front mounting bracket flush to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

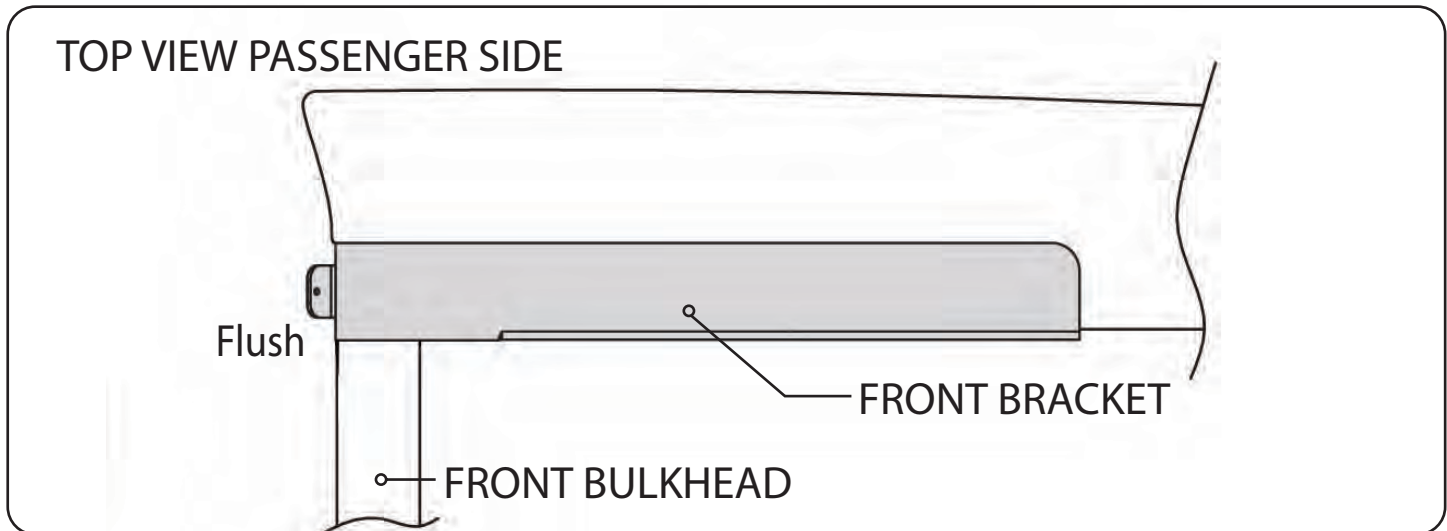

UnderCover, Inc.
P.O. Box 620
Rogersville, MO 65742
(417) 753-8000
(866) 900-8800

www.undercoverinfo.com
sales@undercoverinfo.com

© 2010 UnderCover, Inc.
All rights reserved.