



INSTALLATION INSTRUCTIONS


RECEIVER KIT for Ford Full Size Part Number 28070

NOTE: Please read these instructions thoroughly before starting the installation of this kit.

Minor modifications may be required due to variations between vehicles.

1. Remove bumper from vehicle as shown in **Figure 1** **DO NOT REMOVE** factory bumper bracket.

FIGURE 1

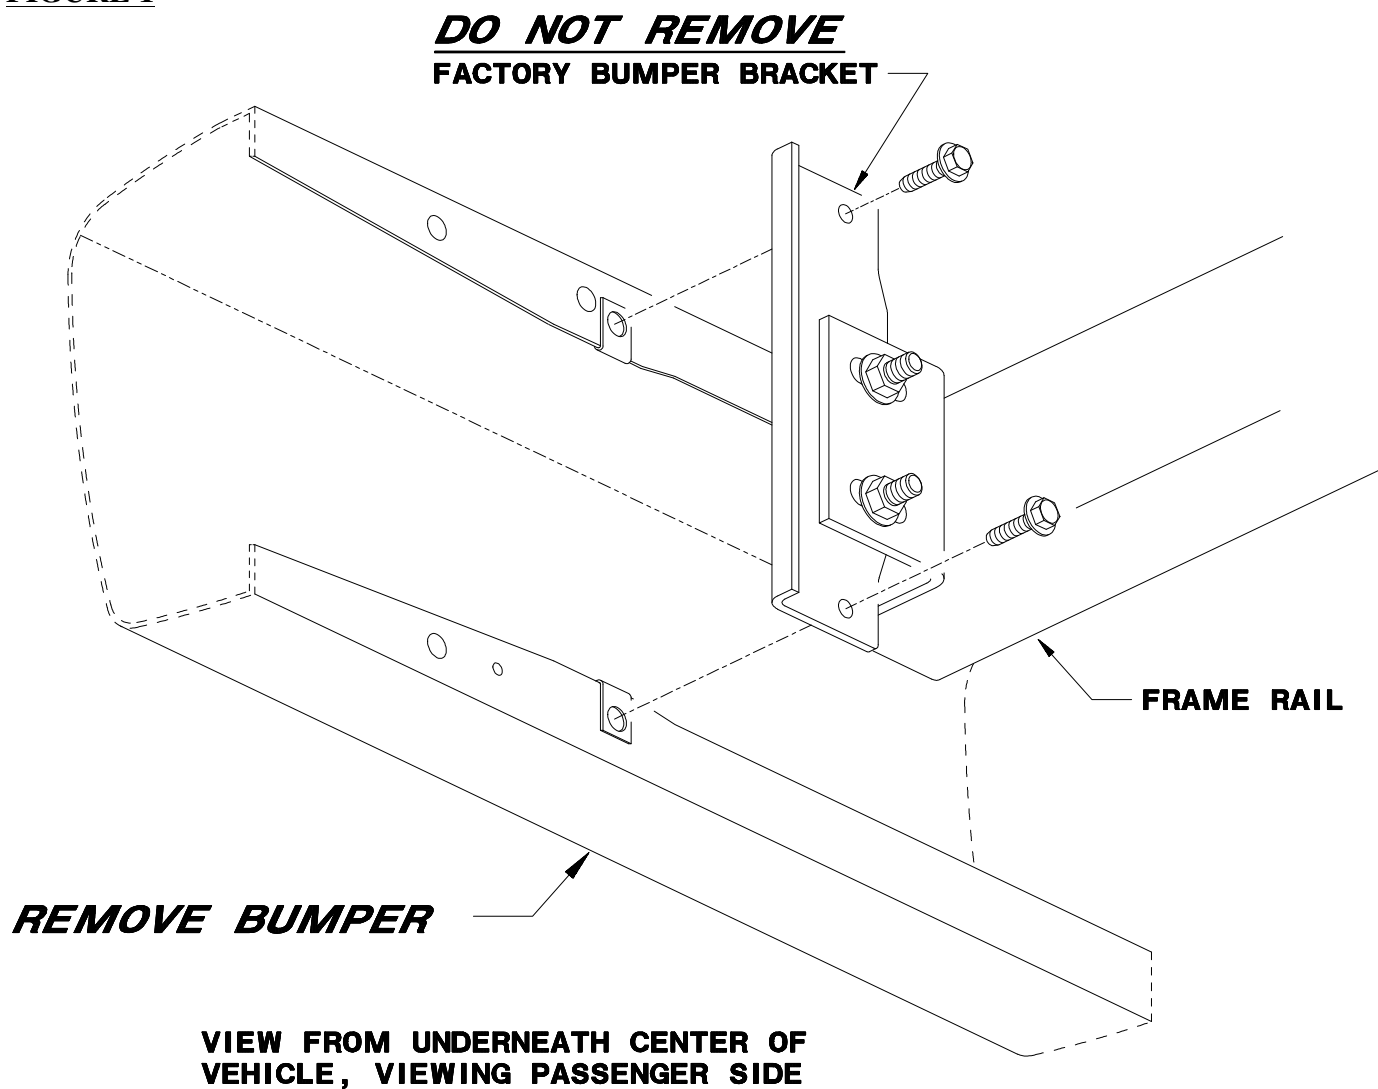

2. Install the Receiver **in front of** the factory bumper bracket as shown in **Figure 2**.
3. Using the holes in the Receiver as guides, drill a 1/2" hole thru the frame in all locations shown in **Figure 2** and secure with supplied fasteners. Use spacer washers between Receiver and frame rail if necessary.
4. Now reinstall bumper and secure all fasteners.

FIGURE 2

