



INSTALLATION INSTRUCTION ATV WINCH MOUNT

Mount Kit: PN 60891

Application: POLARIS SCRAMBLER 500 4X4, 400 4X4, 400 2X4,
TRAIL BLAZER

As you read these instructions, you will see **NOTES**, **CAUTIONS** and **WARNINGS**. Each message has a specific purpose. **NOTES** are additional information to help you complete a procedure. **CAUTIONS** are safety messages that indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. A **CAUTION** may also be used to alert against unsafe practice or possible equipment damage. **WARNINGS** are safety messages that indicate a potentially hazardous situation, which, if not avoided could result in serious injury. **CAUTIONS** and **WARNINGS** identify the hazard, indicate how to avoid the hazard, and advise of the probable consequence of not avoiding the hazard.
PLEASE WORK SAFELY!

WARNING

SEVERE INJURY OR DEATH MAY RESULT IF YOU IGNORE ANY OF THE FOLLOWING.


- **Read the Winch Operator’s Manual, ATV Operator’s Manual, and all warning labels before operating the winch and ATV.**
- **Stay clear of moving parts and cable. Keep others away when operating the winch.**
- **Inspect the winch mechanism, fasteners, and cable, before operating. Replace all worn or damaged parts before operating.**
- **Make sure the winch is deactivated when leaving the ATV unattended.**

PARTS LIST:


<u>PART NO.</u>	<u>QUANTITY</u>	<u>DESCRIPTION</u>
60792	1	Mounting plate
13612	4	Capscrew, hex, 5/16-18 X 1 3/4"
2002	4	5/16" Nylock Nuts

INSTRUCTIONS:



STEP 1: Remove the rear storage compartment and the two rear side reflectors. Be sure to keep the reflectors intact, as you will be reapplying them after the kit has been installed. (Note: not all bikes have storage compartments)

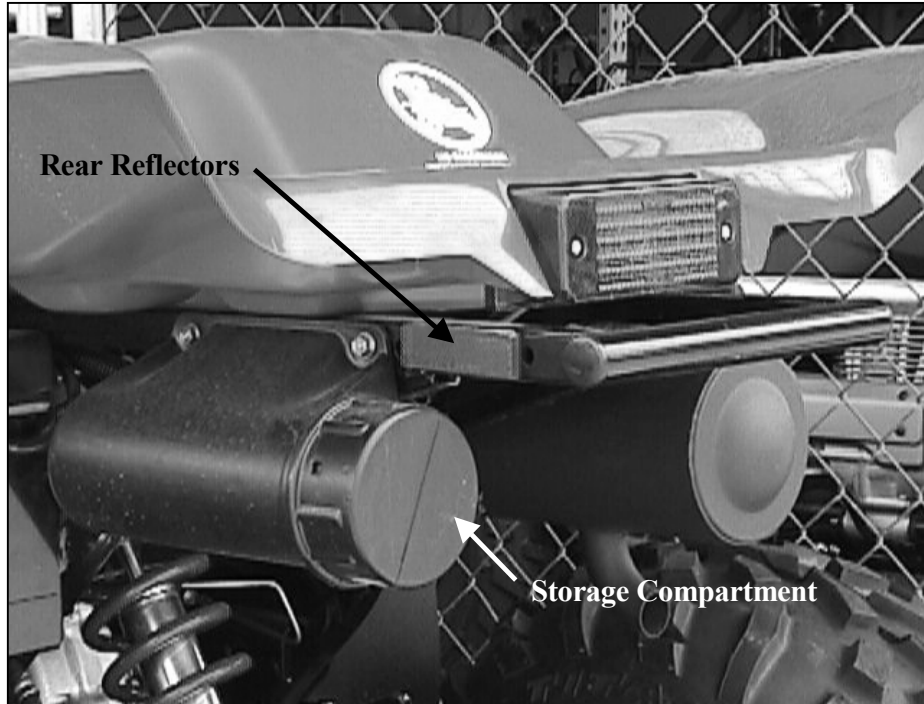

STEP 2: Drill out holes with a 5/16" drill bit as needed to clear any excess paint and/or weld debris.

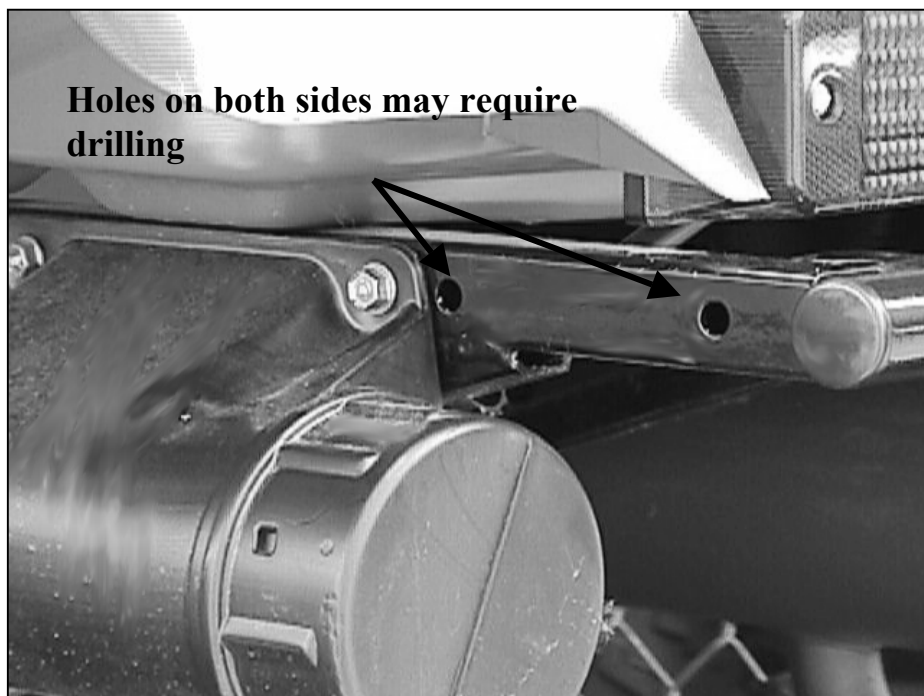

STEP 3: Install mounting plate using the 5/16"-18 bolts and lock nuts provided. After installation, re-attach reflectors to the sides of the mounting kit.

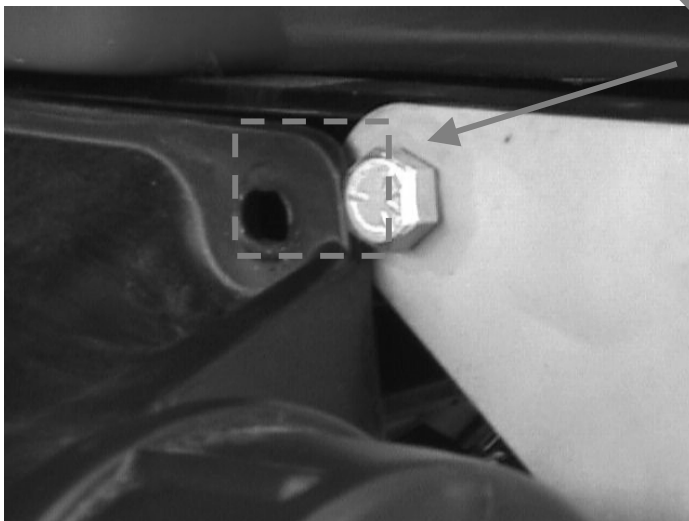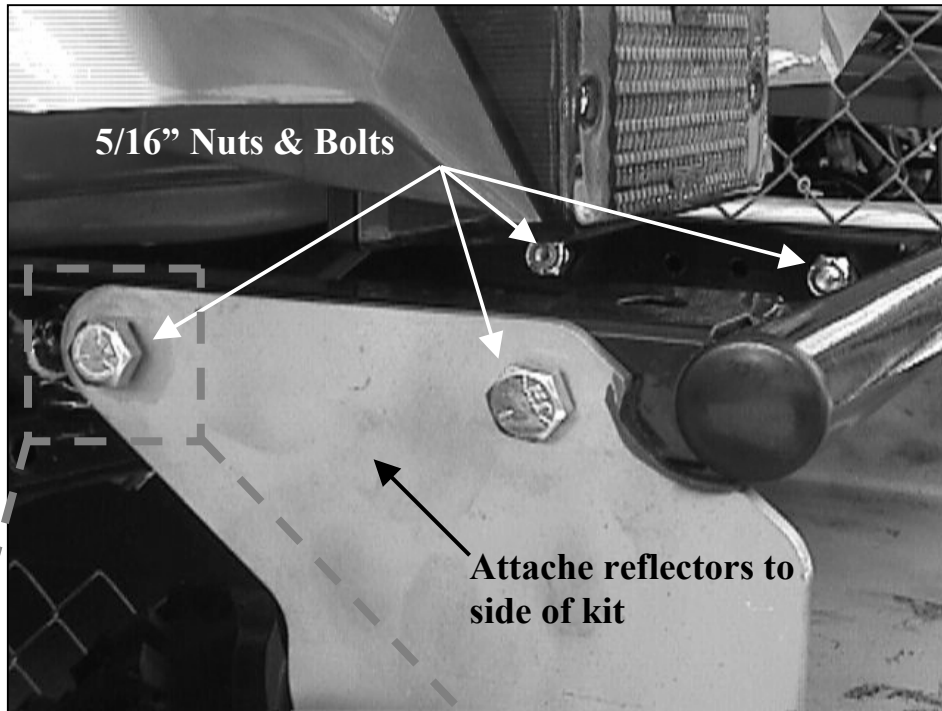

STEP 4: When re-installing storage compartment trim as needed to fit around mounting kit.

STEP 5: Place the winch on the mounting kit as shown below, secure with bolts provided with winch.

