



# INSTALLATION INSTRUCTIONS ATV BUMPER

Mount Kit: PN 62319

Application: YAMAHA GRIZZLY '98-'01

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

**CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.**

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death.

**WARNING** and **CAUTION** are signal words that identify the level of hazard. These signal words mean:

**WARNING** signals a hazard that could cause serious injury or death, if you do not follow recommendations.

**CAUTION** signals a hazard that may cause minor to moderate injury, if you do not follow recommendations.

This guide uses **NOTICE** to call attention to important mechanical information, and **Note**: to emphasize general information worthy of special attention.

## TOOLS REQUIRED

Ratchet & 7/16" Sockets

Phillips Screwdriver

## PARTS LIST:

<u>PART NO.</u>	<u>QUANTITY</u>	<u>DESCRIPTION</u>
62902	1	Fastener Kit, Bumper, Yamaha
62265	1	Bumper Mounting Bracket, R, Grizzly
62266	1	Bumper Mounting Bracket, L, Grizzly
62203	1	Grizzly Bumper
62018	Sold Separately	WARN Trail Lights

### 1. Install Trail Lights (Optional):


**NOTE: WARN Trail Lights are sold separately and are not included in this kit.**

Warn ATV Trail Lights (PN 62018) should be installed at this time.

Use the fasteners supplied with the bumper to secure the lights (Figure 1). The light mounting bracket shown is supplied with the WARN Trail Lights. Insert two (2) 1/4-20 x 1-1/4" Hex Bolts into the bumper from the top. Place a spacer and flat washer on both bolts. More washers can be used if needed for spacing. Install the Light Bracket and Light on to the bolts and secure with 1/4" Nylock Nuts.

The Lights can be repositioned after the Bumper is installed on the vehicle.

**FIGURE 1: Install Light with Fasteners shown**

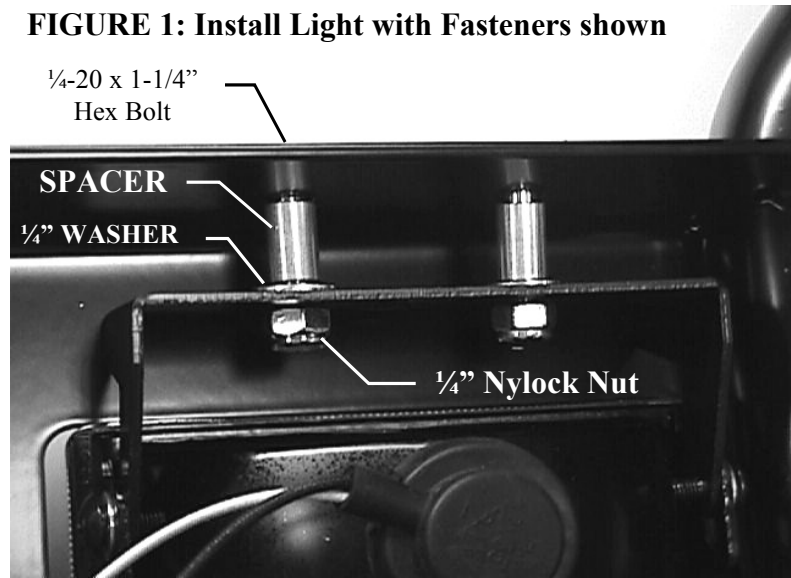

**2. Install Front Bumper:**

Put the WARN Bumper in position over the front Grab Bar. The tabs on the back of the bumper should be positioned on top of the Grab Bar tubes.

Secure the WARN Bumper to the Grab Bar with the Bumper Mounting Brackets and 1/4" Hex Bolts provided (Figure 2).

**NOTICE: The Bumper Mounting Brackets are cut specifically for the Right and Left Grab Bar Tubes of this vehicle.**

**Torque 1/4" Bolts: 5 ft. lb. (7 N m)**



**FIGURE 2: Install Bumper as shown**

See Light Installation instructions, if equipped, to complete installation.