



# INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

AUTOMOTIVE PRODUCTS, INC.

APPLICATION: 2012– UP HONDA CRV  
APP PART #28-21000,28-21005  
STYLIZED RUNNING BOARDS

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	STEP BARS	13MM SOCKET
2,3	2	FRONT MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	RATCHET
4,5	2	REAR MOUNTING BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE	TORQUE WRENCH
6	8	SUPPORT STRAPS (4) left, (4) right	16MM SOCKET
7	12	M8 HEX HEAD BOLTS	16MM WRENCH
8	12	M8 SMALL FLAT WASHERS	
9	12	M8 LOCK WASHERS	
10	4	M10 HEX HEAD BOLTS	
11	8	M10 FLAT WASHERS	
12	4	M10 LOCK WASHERS	
13	4	M10 HEX NUTS	
14	8	M8 SQUARE HEAD BOLTS	
15	8	M8 FLAT WASHERS	
16	8	M8 NYLOCK NUTS	

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Determine driver and passenger Mounting Brackets. NOTE: the running board mounting surface will face towards the rear of the vehicle.
3. Hang the inner side of the driver front Mounting Bracket into position by partially threading (1) M8 Hex Head Bolt, (1) M8 Lock Washer, and (1) M8 small Flat Washer into factory threaded hole on the frame (Figure 1). NOTE: There are two threaded holes by the front mounting location on the frame, use the one towards the rear of vehicle.
4. Take (2) support straps and loosely attach them to the threaded holes in the floor pan using (2) M8 Hex Head Bolts, (2) M8 Lock Washers, and (2) M8 small Flat Washers (Figure 2). Take the drivers side front mounting bracket and place it in between the previously installed support straps. Align the attachment holes in the support straps to the hole in the mounting bracket and attach them together using (1) M10 Hex Head Bolt, (2) M10 Flat Washers, (1) M10 lock washer, and (1) M10 hex nut (Figure 3). Do not fully tighten at this time
5. Locate and cut out the openings in the driver and passenger side trimming templates with a pair of scissors (Page 3 & 4)
6. Fit the driver's side template onto its respective side plastic rock shields. Position them using two each of the M8 bolts that will later be used to mount the side bar brackets. Transfer the openings in the templates onto the plastic cover using a magic marker.
7. Now remove the rock shield from the undercarriage of the car. The three front screws can be removed with a 10MM socket. The plastic retainer plugs can be removed with a flat blade screwdriver.
8. Using a sharp knife or pair of shears, cut out the shields as marked using the templates (Figure 4).
9. Insert the inner side of driver rear Mounting Bracket through previously cut out hole on the plastic cover. Hang Mounting Bracket by partially threading (1) M8 Hex Head Bolt, (1) M8 Lock Washer, and (1) M8 small Flat Washer into factory threaded hole on the frame . NOTE: There are two threaded holes on the frame, use the one towards the rear of vehicle.
10. Repeat step 4
11. Take the stylized running board and insert (4) M8 square head bolts into the running board channels (2 in each channel) (Figure 5). Take the running board and place it onto the mounting bracket, align the previously installed square head bolts with the mounting holes in the brackets and attach using (4) M8 flat washers, and (4) M8 nylock nuts. Do not fully tighten at this time
12. Level and adjust running board; then tighten all hardware at this time. Torque all M8 fasteners to 25-30 ft lbs, and M10 to 35 ft lbs
13. Re-install the rest of fastener on the rock shield.
14. Repeat steps 2-13 for passenger Side Bar.





## CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER



Westin Automotive Products, Inc.  
320 W Covina blvd  
San Dimas, CA 91773


Thank You for choosing Westin products  
For Additional installation assistance please call  
Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

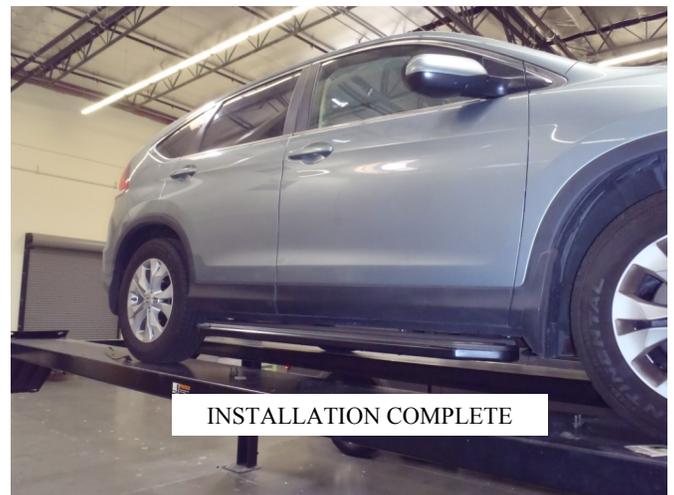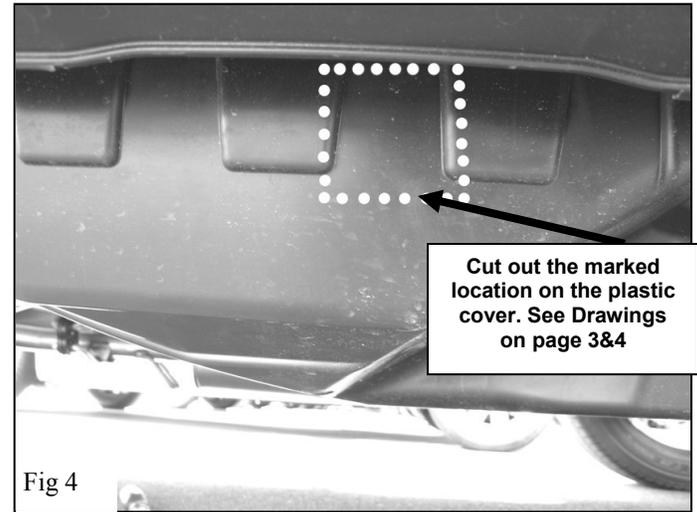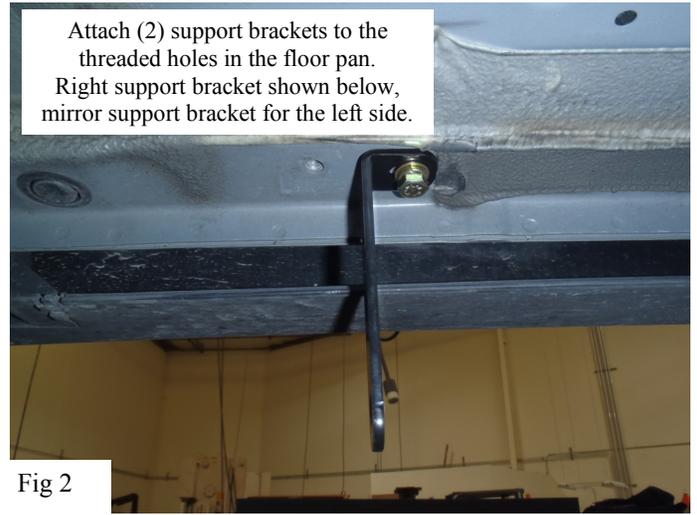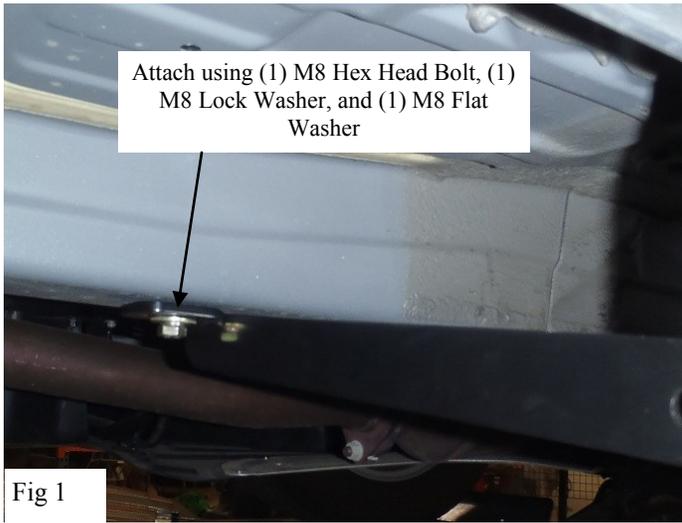

Westin Automotive Products, Inc.  
320 W Covina blvd  
San Dimas, CA 91773


6/4/2013 P.N.: 75-0132 w13-0015

Thank You for choosing Westin products  
For Additional installation assistance please call  
Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

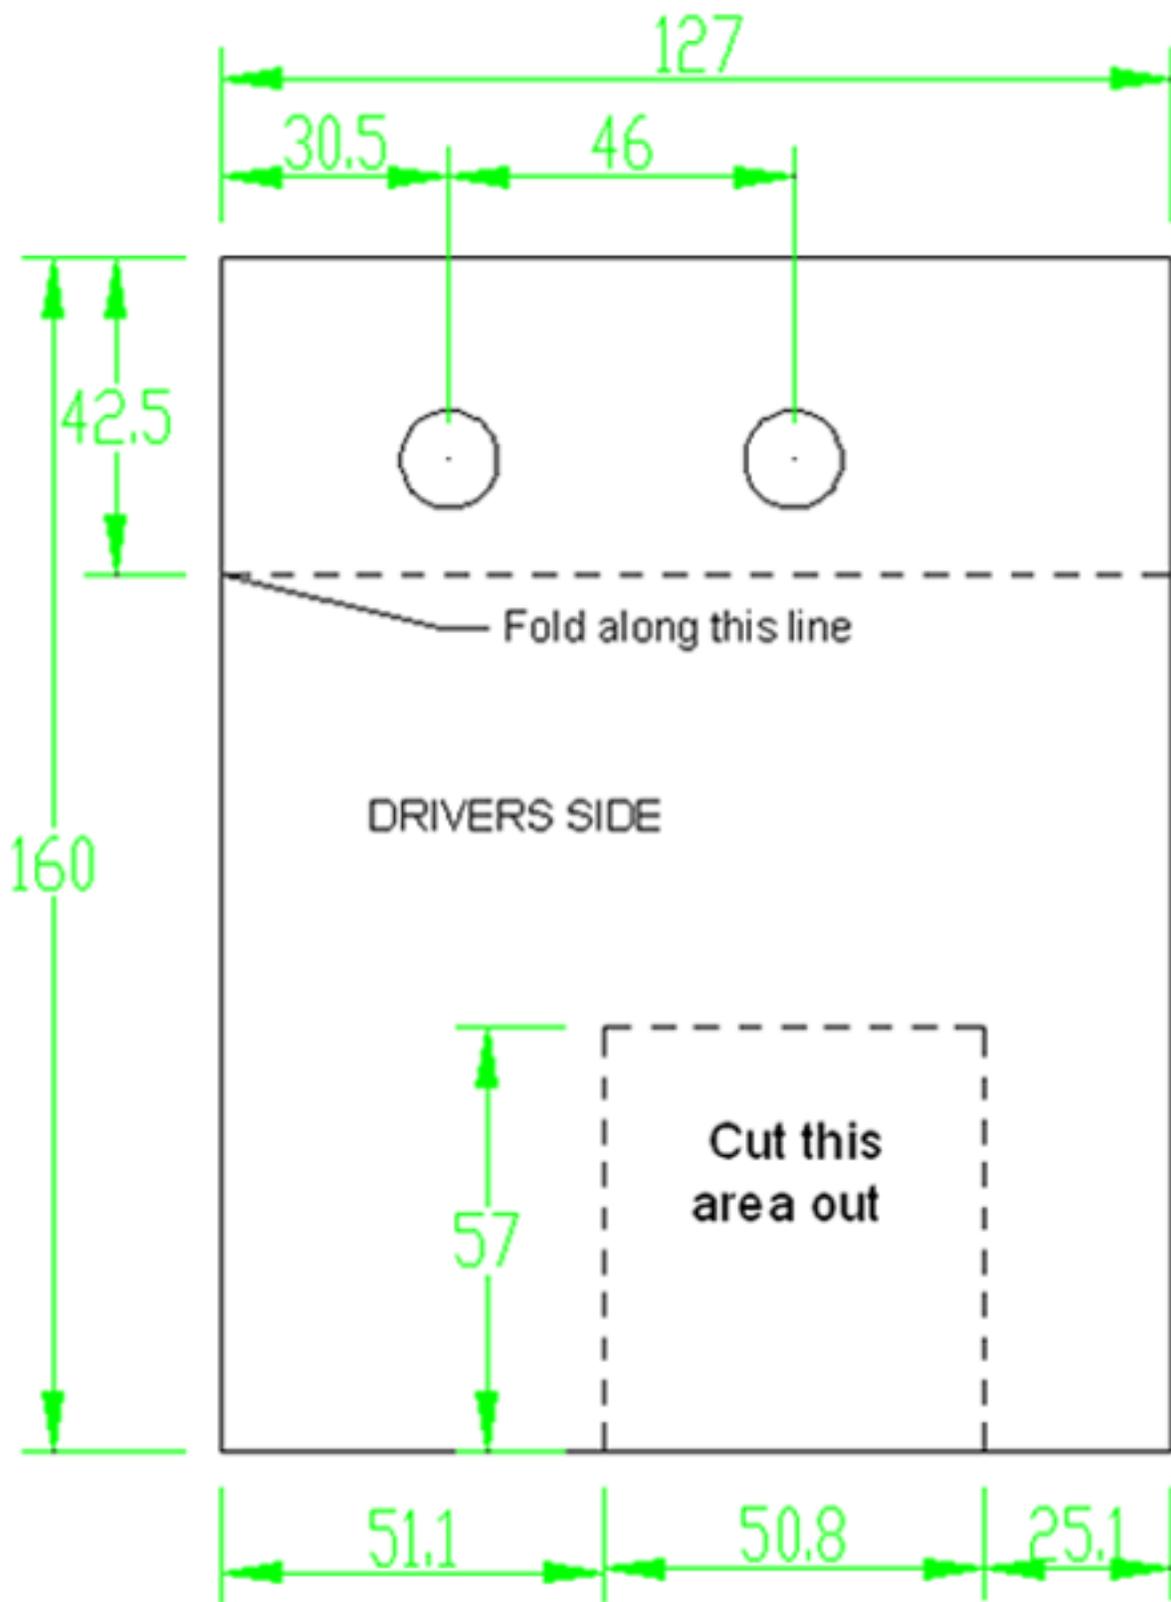

Westin Automotive Products, Inc.  
 320 W Covina blvd  
 San Dimas, CA 91773

Thank You for choosing Westin products  
 For Additional installation assistance please call  
 Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

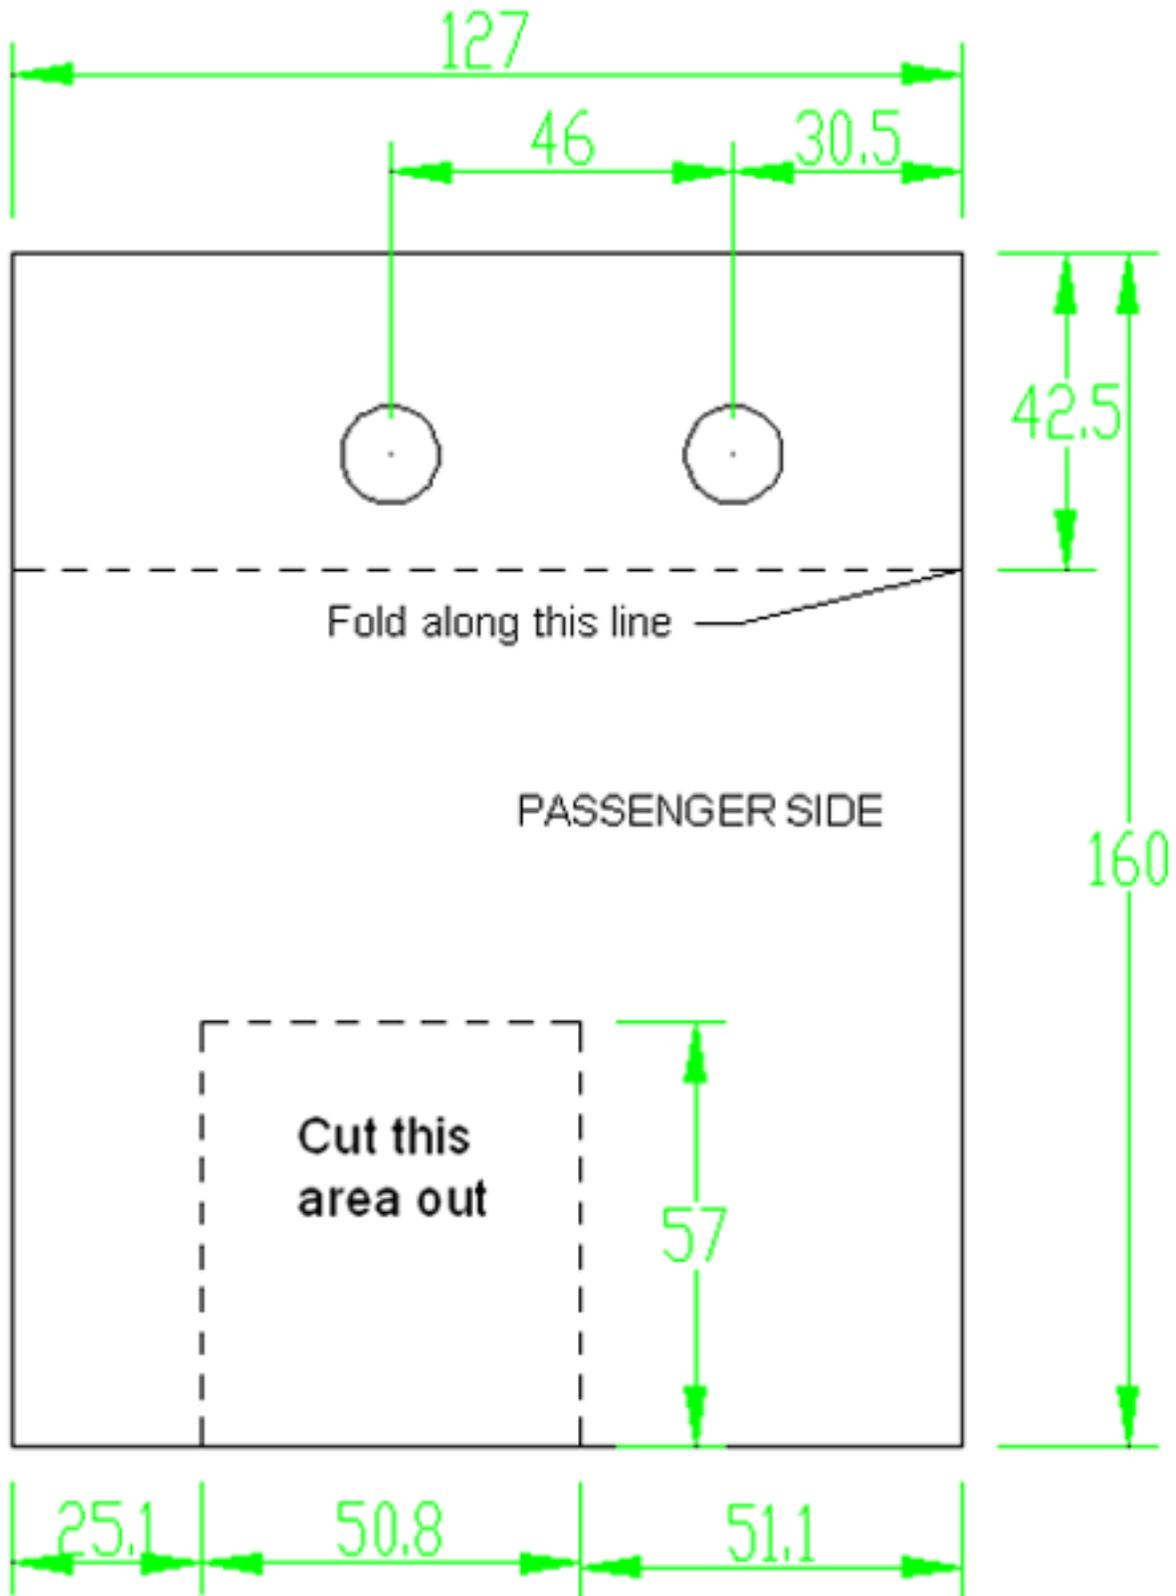

Westin Automotive Products, Inc.  
 320 W Covina blvd  
 San Dimas, CA 91773

Thank You for choosing Westin products  
 For Additional installation assistance please call  
 Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)