


INSTALLATION INSTRUCTIONS

APPLICATION: 2000 & UP CHEVY SUBURBAN/ GMC YUKON XC/ YUKON

AUTOMOTIVE PRODUCTS, INC.

SPORTSMAN TAIL LIGHT GUARD CHROME BLACK 39-3180 39-3185	QTY	PART KIT CONTENTS DESCRIPTION
	1 1 2	TAIL LIGHT GUARD - DRIVER TAIL LIGHT GUARD - PASSENGER PLASTIC RETAINER CLIPS

- STEP 1. Remove the contents from the box and check for any damage. Verify all parts against parts list. Read and understand instructions completely before beginning installation.
- STEP 2. Snap plastic retainer clips onto third wire from top of driver side and passenger side taillight guards.
- STEP 3. Lift rear hatch to access taillight mounting screws located in the hatch jamb. Remove (but do not discard) the two factory screws (one upper and one lower) that attach the taillight.
- STEP 4. Center taillight guard over taillight and adjust bracket so that retainer clip rests snugly against lens. Loosely secure taillight guard to vehicle, re-using factory screws previously removed. Carefully close hatch and make sure taillight guard does not interfere with operation of hatch opening and closing. Adjust brackets as necessary. Tighten screws snugly using caution to avoid cracking taillight housing assembly.
- STEP 5. Remove backing tape from base of retainer clip and press firmly against taillight lens.
- STEP 6. Repeat installation for opposite side.

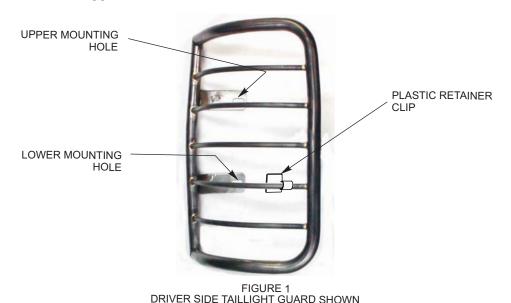

Finish protection - Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax (pure carnauba, for example) on a regular basis. The use of cleaner wax or any compound which contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

