



SIGNATURE OF QUALITY

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 07 CHEVY SUBURBAN ¾" TON 4x4
PART NUMBER: 32-2150, 32-2155, 31-5150

AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	BULL BAR	18MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4	2	M12 NUT PLATES	RATCHET
5	4	M12 X 35MM HEX HEAD BOLTS	TORQUE WRENCH
6	4	M12 FLAT WASHERS	
7	4	M12 LOCK WASHERS	
8	4	M12 X 30MM HEX HEAD BOLTS	
9	4	M12 NYLOCK NUTS	
10	8	M12 FLAT WASHERS	
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	BULL BAR	18MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4	2	M12 NUT PLATES	RATCHET
5	4	M12 X 35MM HEX HEAD BOLTS	TORQUE WRENCH
6	4	M12 FLAT WASHERS	
7	4	M12 LOCK WASHERS	
8	4	M12 X 30MM HEX HEAD BOLTS	
9	4	M12 NYLOCK NUTS	
10	8	M12 FLAT WASHERS	
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	BULL BAR	18MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4	2	M12 NUT PLATES	RATCHET
5	4	M12 X 35MM HEX HEAD BOLTS	TORQUE WRENCH
6	4	M12 FLAT WASHERS	
7	4	M12 LOCK WASHERS	
8	4	M12 X 30MM HEX HEAD BOLTS	
9	4	M12 NYLOCK NUTS	
10	8	M12 FLAT WASHERS	



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Ste 220
Irwindale, Ca 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 07 CHEVY SUBURBAN ¾" TON 4x4
PART NUMBER:

1. Remove all contents from box. Verify that all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. From the underside of the vehicle remove the tow hooks. The tow hooks may be used in conjunction with the bull bar.
3. Insert driver side mounting bracket into front of frame. Align holes on the mounting brackets with holes on the frame. Partially thread (1) M12 x 35MM hex head bolt, (1) M12 lock washer, and (1) M12 flat washer through factory front hole on the frame and into welded nut on the mounting bracket. Do not fully tighten at this time
4. Insert (1) M12 nut plate through larger center hole on the frame and onto rear factory hole. Align nut plate with rear factory hole.
5. Secure rear side of mounting bracket by inserting (1) M12 x 35MM hex head bolt , (1) M12 lock washer, and (1) M12 flat washer through rear factory hole and into nut plate. Do not tighten at this time.
6. Repeat steps 2-4 for passenger side.
7. Position bull bar on the inner side of mounting brackets. Attach bull bar to mounting brackets using the included (4) M12 X 30 MM hex head bolts, (4) M12 nylock nuts, and (8) M12 flat washers. Do not fully tighten at this time.
8. Level and adjust bull bar as desired, then tighten all hardware at this time.

1. Remove all contents from box. Verify that all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. From the underside of the vehicle remove the tow hooks. The tow hooks may be used in conjunction with the bull bar.
3. Insert driver side mounting bracket into front of frame. Align holes on the mounting brackets with holes on the frame. Partially thread (1) M12 x 35MM hex head bolt, (1) M12 lock washer, and (1) M12 flat washer through factory front hole on the frame and into welded nut on the mounting bracket. Do not fully tighten at this time
4. Insert (1) M12 nut plate through larger center hole on the frame and onto rear factory hole. Align nut plate with rear factory hole.
5. Secure rear side of mounting bracket by inserting (1) M12 x 35MM hex head bolt , (1) M12 lock washer, and (1) M12 flat washer through rear factory hole and into nut plate. Do not tighten at this time.
6. Repeat steps 2-4 for passenger side.
7. Position bull bar on the inner side of mounting brackets. Attach bull bar to mounting brackets using the included (4) M12 X 30 MM hex head bolts, (4) M12 nylock nuts, and (8) M12 flat washers. Do not fully tighten at this time.
8. Level and adjust bull bar as desired, then tighten all hardware at this time.

1. Remove all contents from box. Verify that all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. From the underside of the vehicle remove the tow hooks. The tow hooks may be used in conjunction with the bull bar.
3. Insert driver side mounting bracket into front of frame. Align holes on the mounting brackets with holes on the frame. Partially thread (1) M12 x 35MM hex head bolt, (1) M12 lock washer, and (1) M12 flat washer through factory front hole on the frame and into welded nut on the mounting bracket. Do not fully tighten at this time
4. Insert (1) M12 nut plate through larger center hole on the frame and onto rear factory hole. Align nut plate with rear factory hole.
5. Secure rear side of mounting bracket by inserting (1) M12 x 35MM hex head bolt , (1) M12 lock washer, and (1) M12 flat washer through rear factory hole and into nut plate. Do not tighten at this time.
6. Repeat steps 2-4 for passenger side.
7. Position bull bar on the inner side of mounting brackets. Attach bull bar to mounting brackets using the included (4) M12 X 30 MM hex head bolts, (4) M12 nylock nuts, and (8) M12 flat washers. Do not fully tighten at this time.
8. Level and adjust bull bar as desired, then tighten all hardware at this time.



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Ste 220
Irwindale, Ca 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846



Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 07 CHEVY SUBURBAN ¾" TON 4x4
PART NUMBER:

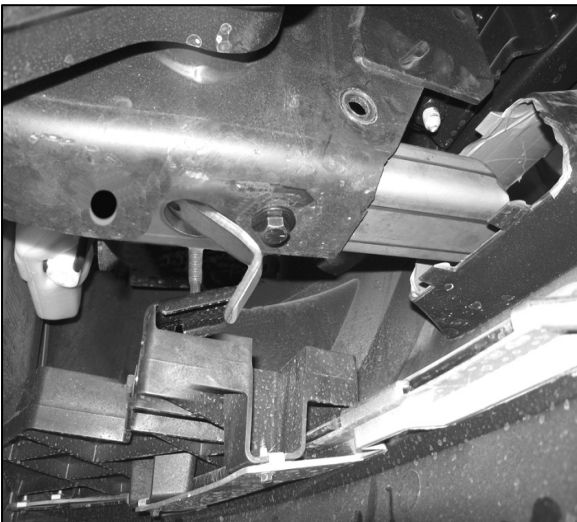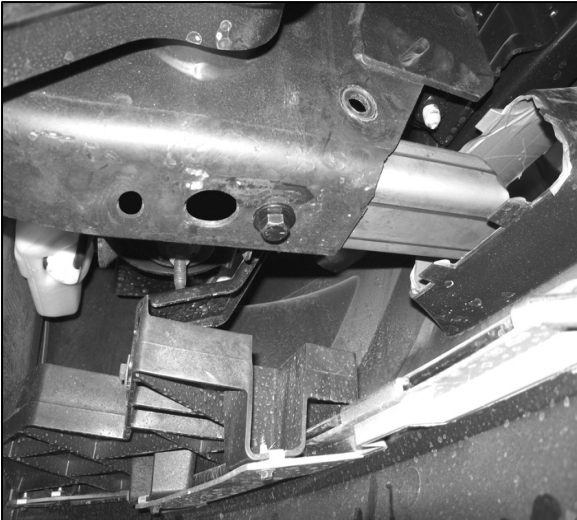

Westin

SIGNATURE OF QUALITY

Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Ste 220
Irwindale, Ca 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846