



AUTOMOTIVE PRODUCTS,

INSTALLATION INSTRUCTIONS

HDX GG LED LIGHT BAR BRACKET

APPLICATION:


HDX Grille Guard 20" or 30" LED Light Bar

PART NUMBER:

57-0010, 57-0015

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	LIGHT BAR BRACKET	13.MM SOCKET
2	2	SUPPORT BRACKET	13MM WRENCH
3	4	M8 HEX HEAD SOCKET BUTTON SCREW	RATCHET
4	4	M8 THICK FLAT WASHER	TORQUE WRENCH
5	4	M8 SERRATED FLANGE NUT	ALLEN WRENCH

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

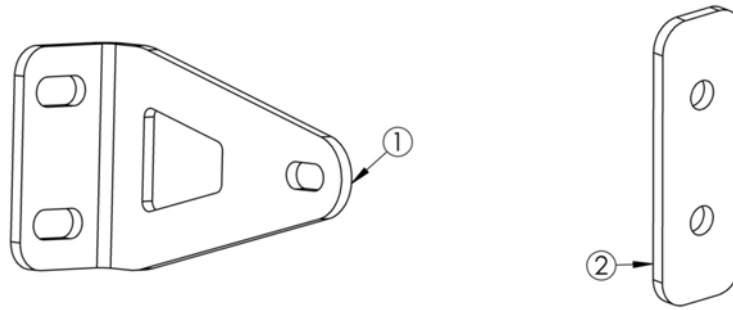

PROCEDURE


1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Start by installing light bar bracket (Item 1) onto LED light bar.
3. Align LED light bar onto the HDX grille guard onto desired position and make sure that both brackets slots/holes align the with grille guard holes. Mark location of mounting. **Note:** Installation of light bracket and support bracket maybe simplified with removal of light bar.
4. Loosely attach light bar bracket (Item 1) in the front of grille guard and the support bracket (Item 2) on the back using the provided hardware. **See Figure 1.**
5. Align and adjust light bar and as necessary then tighten hardware: M8 to 16 - 20 ft-lbs.




Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846

Bracket to HDX Grille Guard Installation

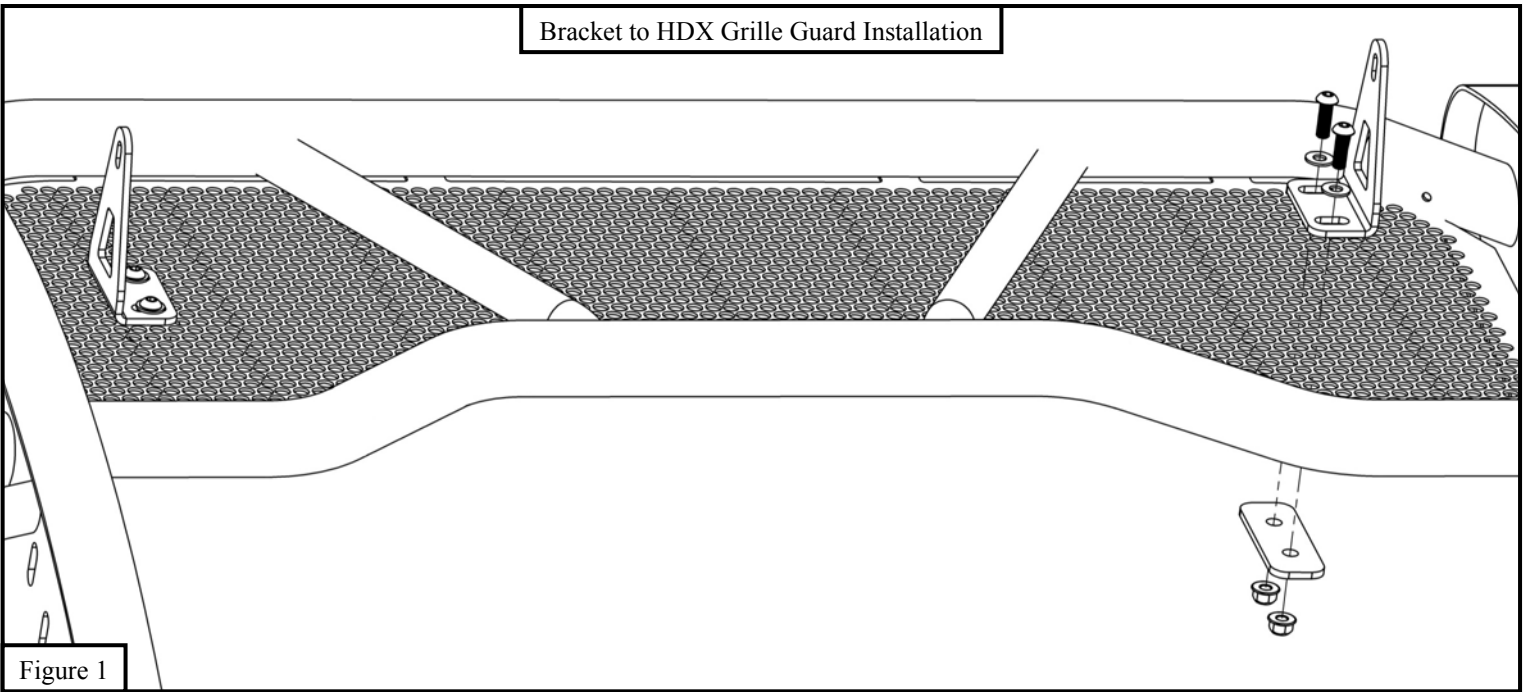

INSTALLATION COMPLETE

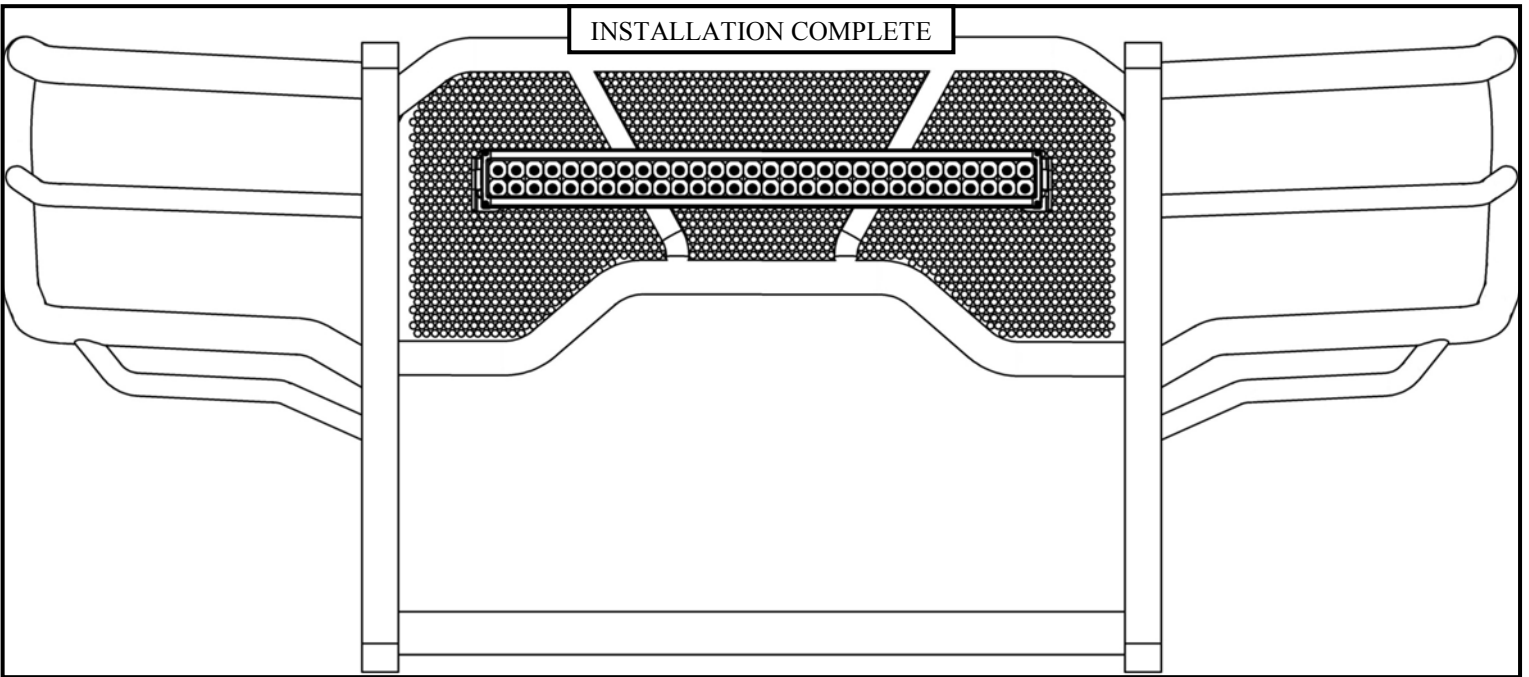

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

Westin Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773
SIGNATURE OF QUALITY

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773