



Installation Support

Monday - Friday


7am - 4pm PST

800-345-8476

INSTRUCTION GUIDE

Model Series 57-7000 thru 57-7025

Cross Over Tool Boxes

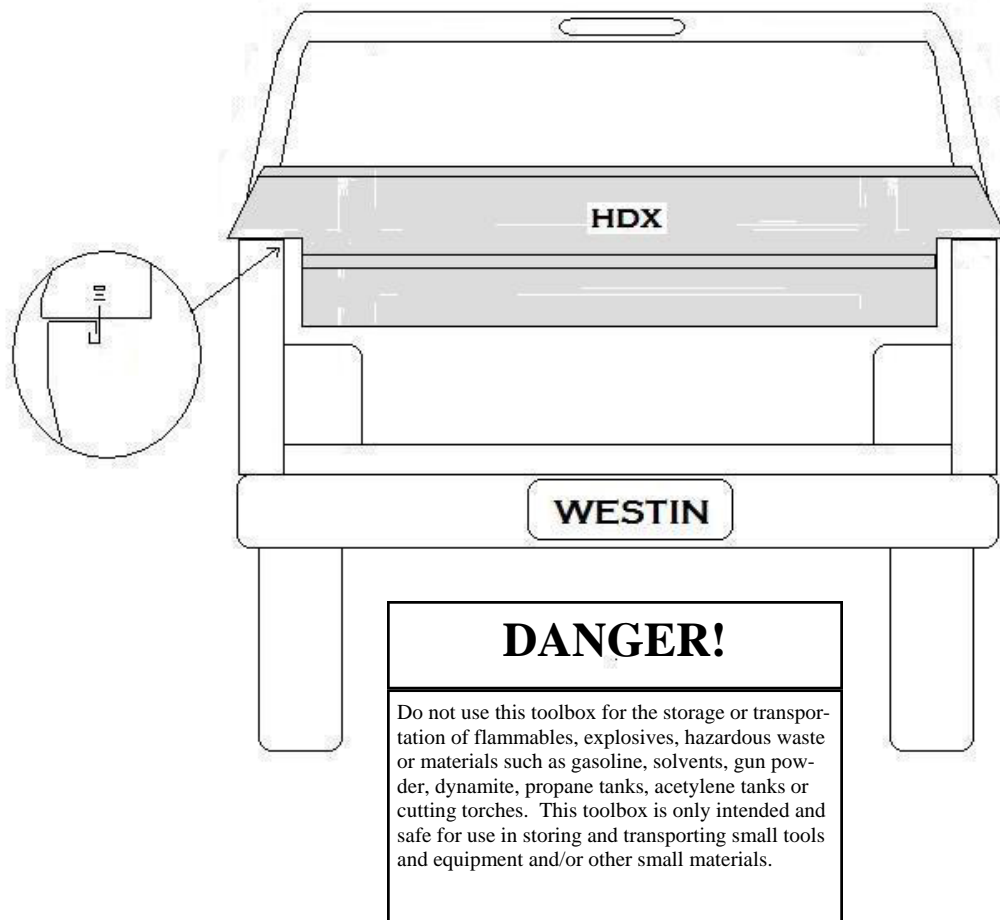

Step 1: Place foam tape (provided) under each end of the box that sits on the bed rail.

Step 2: Place tool box in the front of the truck bed and center it from side to side, be sure to have window clearance when opening the lid.

Step 3: Open the lid, there are two pre-punched slots on each inside end of each side. Push threaded end of the "J" hook (provided) up from the bottom and into the slot. Be sure to hook the bent end of the hook under the bed rail pinch weld. Secure using the flat washer, lock washer, and nut provided.

Step 4: Repeat in the remaining three slots.