



INSTALLATION INSTRUCTIONS

OUTLAW SKID PLATE

APPLICATION:


2015-2019 Ford F-150 (Excl. 2018-2019 Eco Boost)

PART NUMBER:

58-71015

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	SKID PLATE	5 MM ALLEN
2	1	DRIVER REAR BRACKET	13MM WRENCH
3	1	PASSENGER REAR BRACKET	19MM SOCKET
4	1	DRIVER FRONT BRACKET	15MM SOCKET
5	1	PASSENGER FRONT BRACKET	RATCHET
6	2	M12 NUT PLATE	TORQUE WRENCH
7	8	M10 SPLIT LOCK WASHER	
8	16	M10 FLAT WASHER	
9	8	M10 SERRATED FLANGE NUT	
10	8	M10 BUTTON HEAD BOLT	
11	4	M12 FLAT WASHER	
12	4	M12 LOCK WASHER	
13	4	M12 HEX HEAD BOLT	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

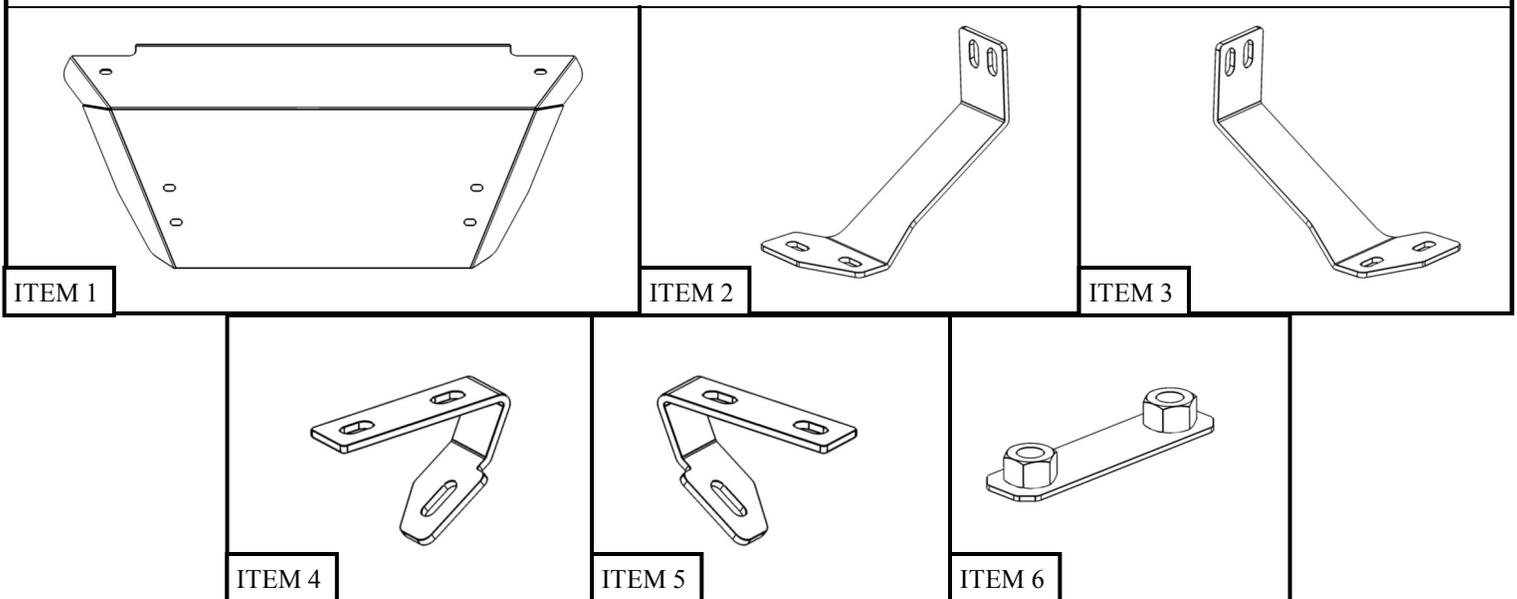

PROCEDURE



1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.

Failure to identify damage before installation could lead to a rejection of any claim.



2. **If using the Outlaw Skid Plate with the OEM Bumper:** Refer to **Figures 1-3** to remove the OEM Front Bumper.
3. **If using the Outlaw Skid Plate with the Pro-Mod or Outlaw Bumper:** Remove the small valance to gain access to the inside of the frame rail. Skip to **Step 7**.





4. Remove plastic caps from stock bumper. See **Figure 1**.
5. Remove the three bolts indicated in **Figures 2 & 3** from each side of the vehicle.
6. Remove original bumper making sure to disconnect any electrical connections to the bumper.

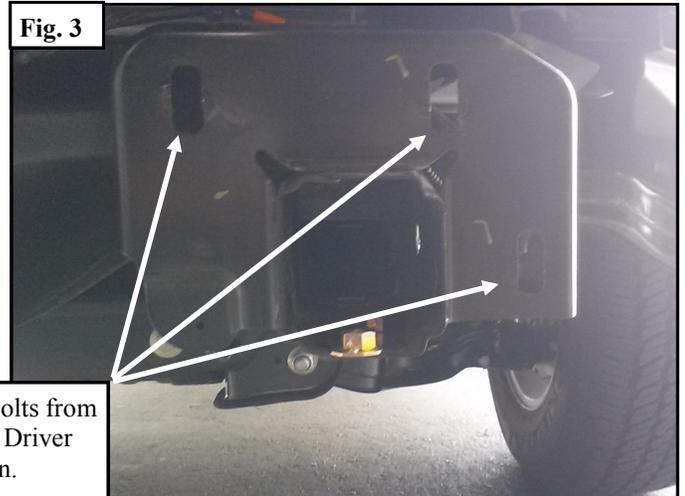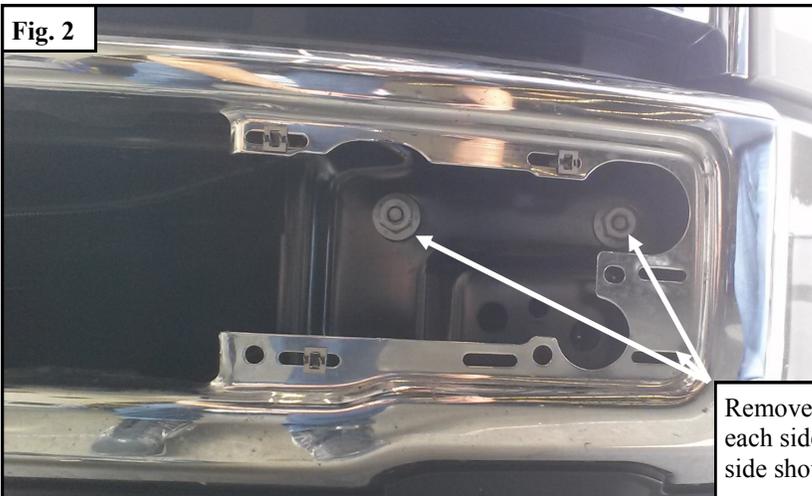

- If using the factory tow hooks, use the factory tow hook hardware to attach the Front Brackets (4,5) to the frame. See **Figures 4 & 5**.
- If factory tow hooks will not be used, use the supplied M12 Nut Plate (6) and M12 Hardware to attach the Front Brackets (4,5) to the frame. See **Figures 4 & 5**.

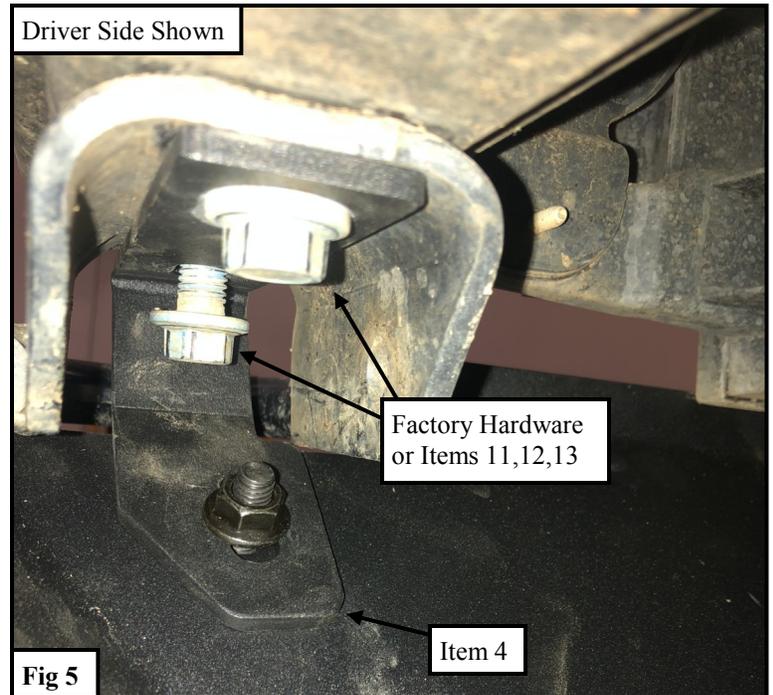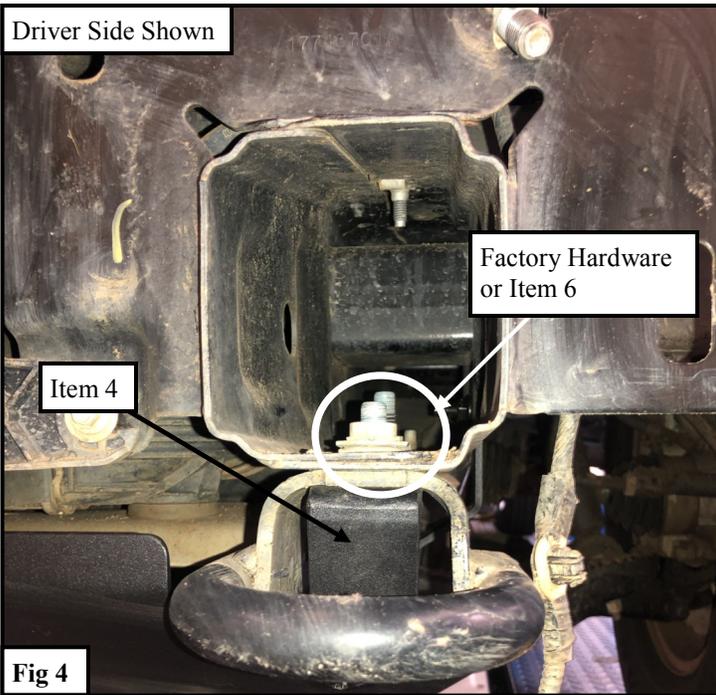

- Use the supplied M10 Hardware to loosely attach the Rear Brackets (2,3) to the frame. See **Figure 6**. *Note: there are two slots on each bracket; only the rear-most slot will be used.*
- Use the supplied M10 Hardware to attach the Skid Plate (1) to the pre-installed brackets. See **Figure 7**.

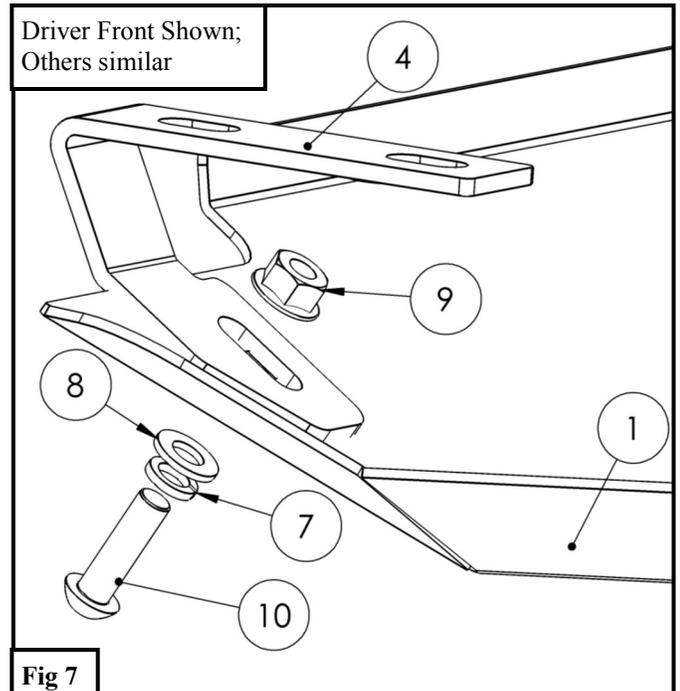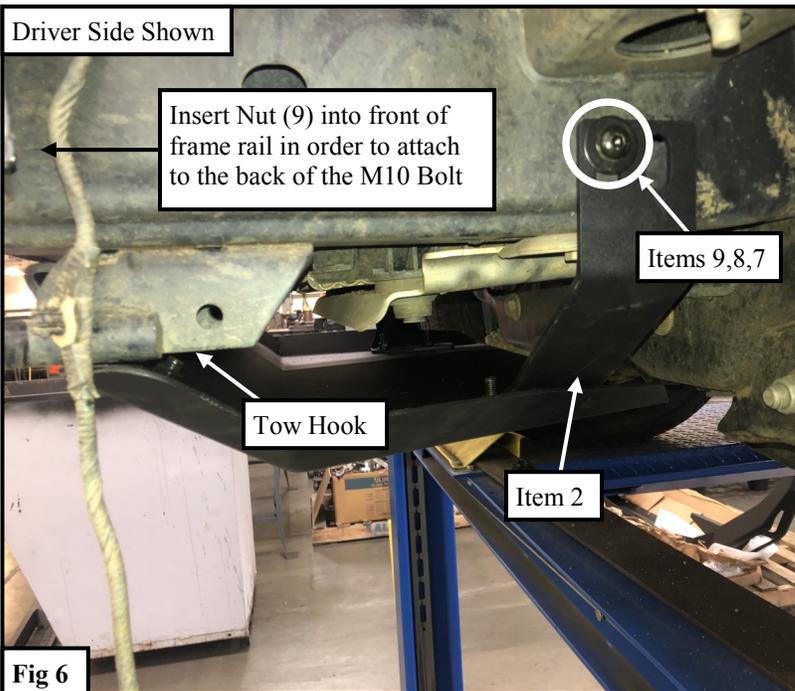

11. Align the Skid Plate as desired, then torque all hardware as specified: M10 to 38 ft-lbs, M12 to 60 ft-lbs.
12. Reinstall the OEM Bumper (if reusing) as removed in **Steps 2-6**. Also reinstall any Pro-Mod or Outlaw Valances.

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov