
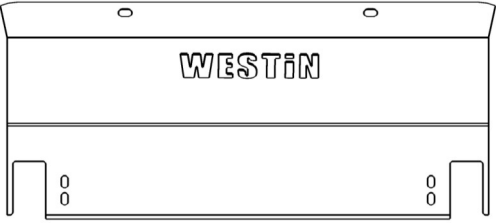
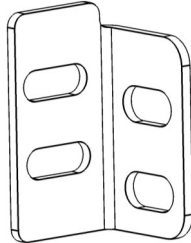


INSTALLATION INSTRUCTIONS

OUTLAW BUMPER SKID PLATE

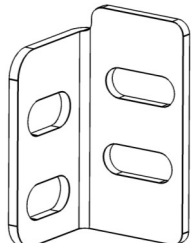



APPLICATION:
2015-2019 Chevrolet Colorado
PART NUMBER:
58-71055

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	SKID PLATE	16MM SOCKET
2	1	DRIVER FRAME BRACKET	16MM WRENCH
3	1	PASSENGER FRAME BRACKET	13MM SOCKET
4	4	M10 HEX HEAD CAP SCREW	13MM WRENCH
5	8	M10 FLAT WASHER	RATCHET
6	4	M10 SPLIT LOCK WASHER	TORQUE WRENCH
7	4	M10 SERRATED FLANGE NUT	
8	4	M8 SPLIT LOCK WASHER	
9	4	M8 FLAT WASHER	
10	4	M8 BUTTON HEAD BOLT	
11	4	M8 U-CLIPS	
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING			
			
ITEM 1		ITEM 2	
		ITEM 3	



PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.


2. Begin by installing the Frame Brackets (2-3) to the Skid Plate (1) using the supplied M10 Hardware. See **Figure 1**.
3. Remove the two nuts on either side of the vehicle that fasten the factory tow hooks to the frame. See **Figure 2**.

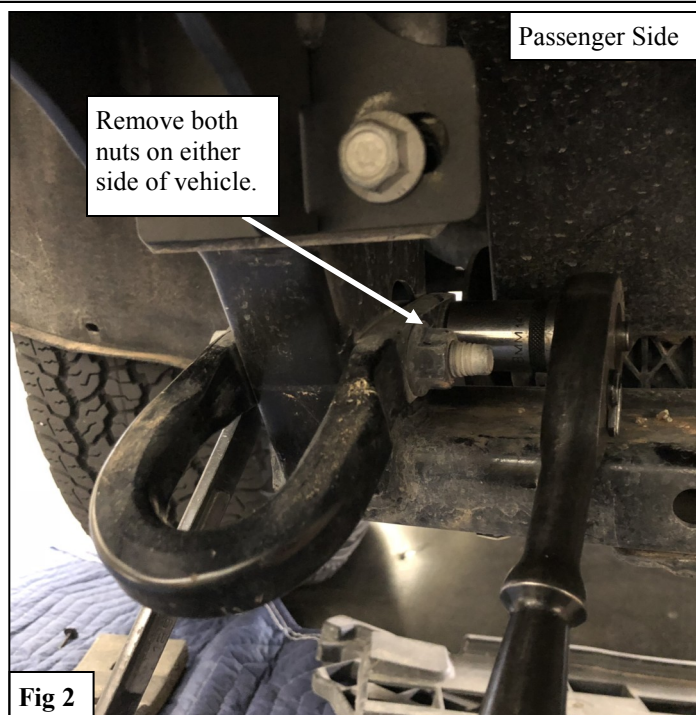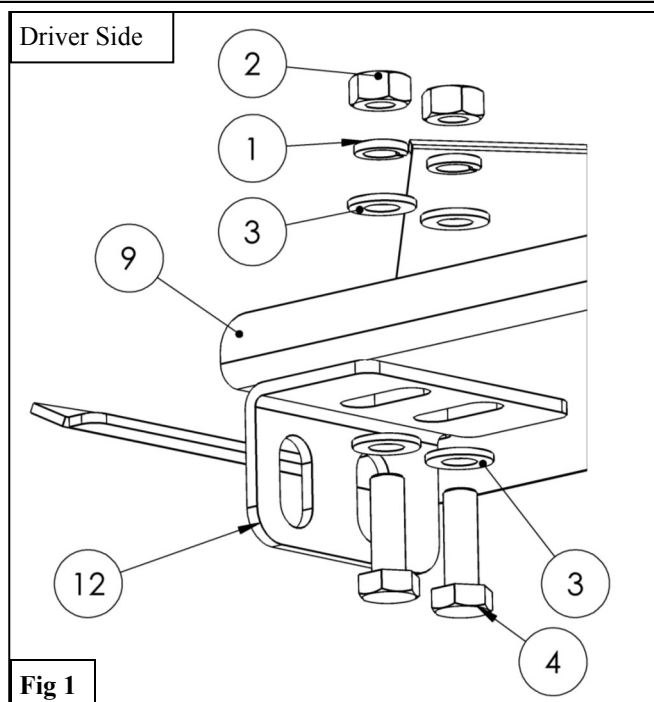

4. Place the supplied U-Clips on the tabs of the Outlaw Bumper. See **Figure 3**
5. Position the Skid Plate so that the factory tow hook bolts line up with the slots in the Frame Brackets (2-3). Reattach the factory nuts. See **Figure 4**.

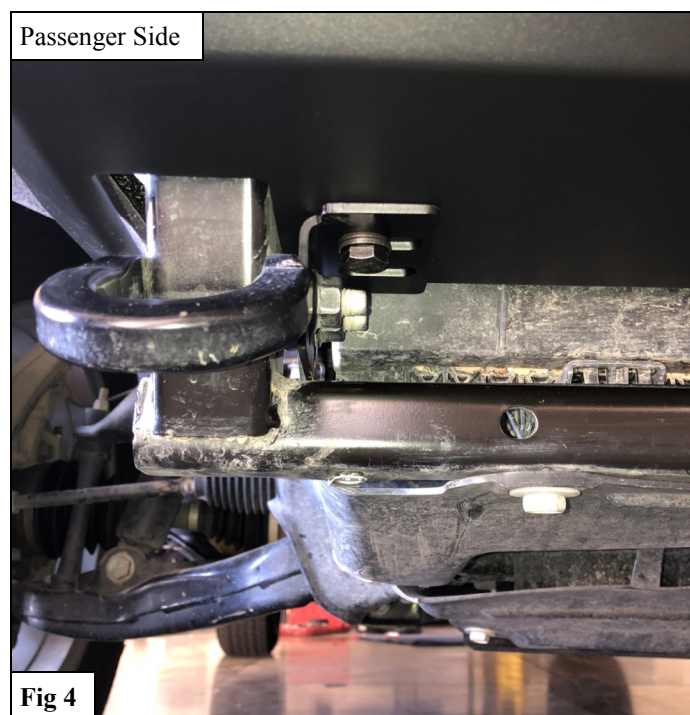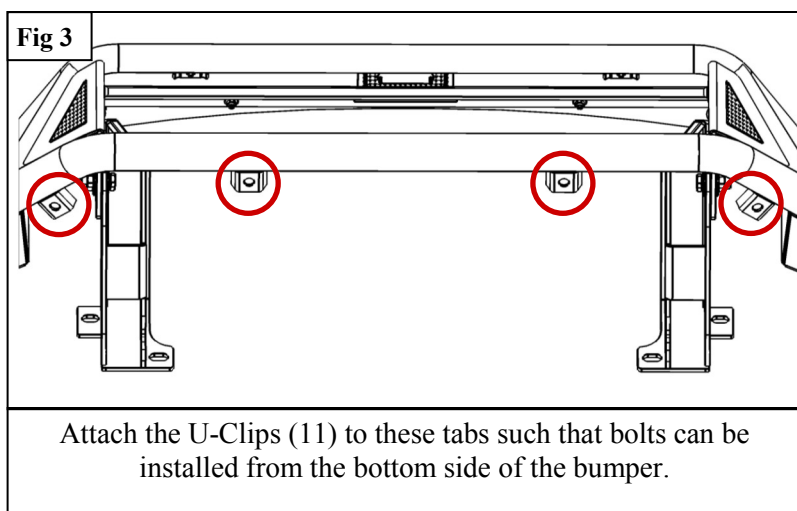

6. Use the supplied M8 Hardware to attach the skid plate assembly (1) to the Outlaw Bumper (sold separately). See **Figure 5**.
7. Tighten all hardware to spec: M10 to 40 ft-lbs, M8 to 20 ft-lbs.

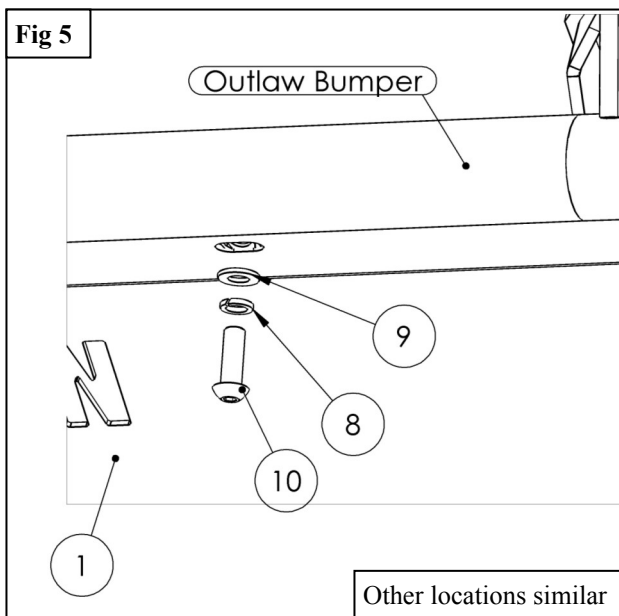

Installation Complete

Bumper and Lights sold separately



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773