



**INSTALLATION INSTRUCTIONS**  
**2008 Ford Superduty**  
**Part # 45-2360, 40-2365**

**PART LIST**

1	Grille Guard
2	Mounting Brackets
1	Driver Side Top Bracket
1	Passenger Side Top Bracket
4	M10 Flat Washer, Stainless Steel
2	M10 Hex Nut, Stainless Steel
2	M10 Lock Washer, Stainless Steel
2	M10*25 Button Head Bolt, Stainless Steel
8	M12 Flat Washer, Stainless Steel
4	M12 Hex Nut, Stainless Steel
4	M12 Lock Washer, Stainless Steel
4	M12*30 Hex Head Bolt, Stainless Steel


**Note:** Westin Automotive advises the installer to use a thread lubricant on all stainless steel fasteners.

**PROCEDURE:**


1. Remove contents from the box and verify all parts are present. Read instructions completely before beginning.
2. From front of vehicle remove the passenger side bumper mount bolts. **WARNING!** Do not remove passenger and driver bumper mount bolts at the same time. Remove one side at a time.
3. Place Mounting Bracket onto vehicle and line it up against the gusset bend on the frame. Leave about 1/8" clearance between bottom of Mounting Bracket and bumper. Secure Mounting Bracket to vehicle using the factory bolts (Figure 1). Tighten these bolts at this time.
4. Once the passenger side Mounting Bracket is fully tightened, repeat steps 2 & 3 for driver side Mounting Bracket. Tighten driver side Mounting Bracket before going to the next step.
5. Open the hood and determine the Top Bracket mounting location. Remove the passenger side inner factory bolt located by the latch release. Place Top Bracket and attach it to vehicle using the factory bolt (Figure 2). Do not tighten at this time.
6. Repeat step 5 for driver side Top Bracket installation.
7. With help, position Grille Guard on the outer side of Mounting Brackets. Attach Grille Guard to Mounting Brackets using the included M12\* 30 Hex Head Bolts, M12 Hex Nuts, M12 Flat Washers, and M12 Lock Washers. (Figure 3). Do not tighten at this time.
8. Attach Grille Guard to Top Brackets using the included M10\* 25 Button Head Bolts, M10 Hex Nuts, M10 Flat Washers, and M10 Lock Washers (Figure 4). Do not tighten at this time.
9. Level and adjust Grille Guard as desired, then tighten all hardware at this time.

- Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**(Passenger Side Mounting Bracket Installation Shown)**

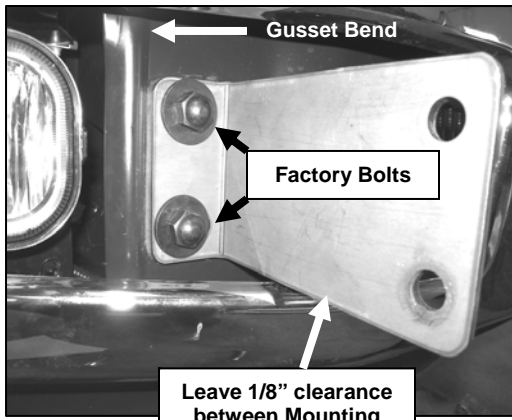

**Figure 1**

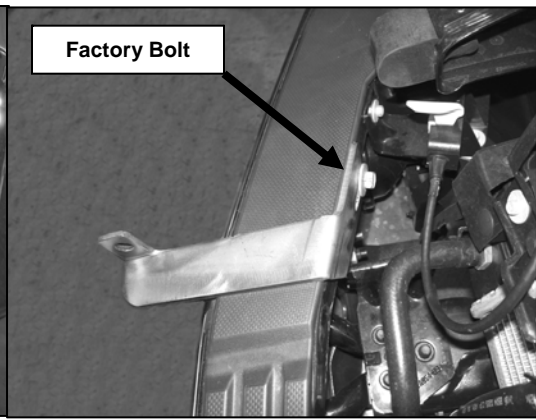


**Figure 2**

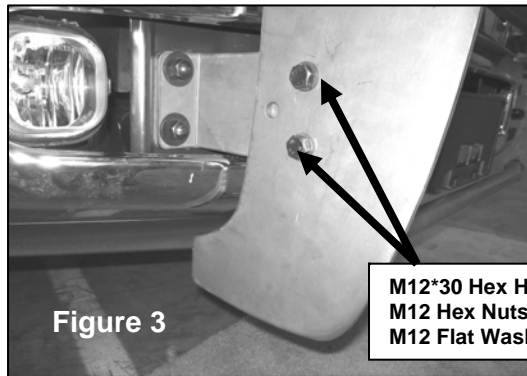

**Figure 3**

**M10\*25 Button Head  
M10 Hex Nut,  
M10 Lock Washer  
M10 Flat Washer**

**Installation Complete**

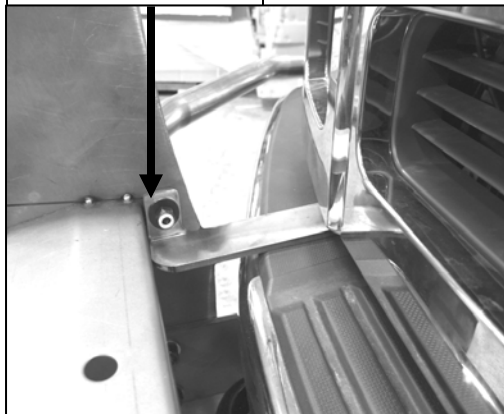

Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Suite 220  
Irwindale, Ca. 91706

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer service (800) 793-7846 or (507) 375-3559