## 88-89 HONDA PRELUDE


## 12/14/2012

11584

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 1,500 LBS. TRAILER WEIGHT & 150 LBS. TONGUE WEIGHT. \*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS. \*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

## HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

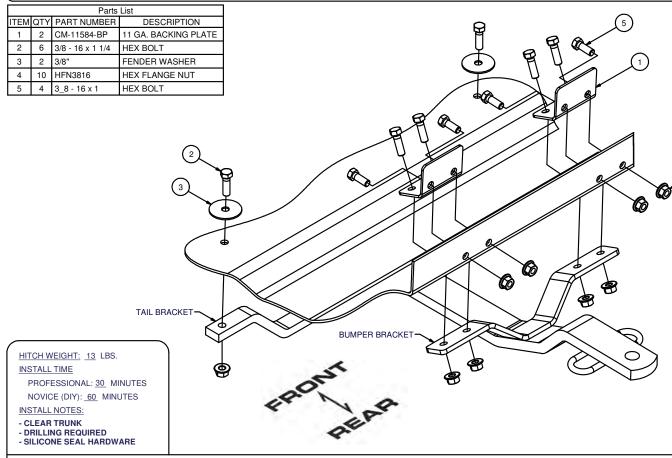

## **INSTALLATION STEPS**

- 1. This hitch mounts to the vehicle's trunk floor with backing plates placed inside the trunk opposite the bumper bracket and through drilled holes using fender washers.
- 2. Clear trunk of contents. Mark vehicle's centerline on underside of trunk pan. Raise hitch into position under the vehicle. Center and square hitch with vehicle. Be sure that the hitch ball to bumper clearance is adequate.
- 3. Using hitch as a template, mark and drill (6) holes in trunk floor for 3/8" hardware.
- 4. Secure hitch to vehicle using 3/8" x 1 1/4" hex bolts, CM-11584-BP backing plates, fender washers and hex flange nuts as shown. Be sure to use fender washers inside of trunk floor.
- 5. Using the CM-11584-BP backing plates as templates, mark and drill (4) holes in rear section of trunk floor for 3/8" hardware. Install 3/8" x 1" hex bolts and hex flange nuts as shown.
- 6. Torque 3/8" hardware to 45 lb-ft.
- 7. Use silicone sealant to seal hardware installed through trunk floor.
- 8. Reinstall items removed from trunk in Step 1. **PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.