PART NO. **5447**

# REAR LOGO READY MUD GUARD INSTALLATION INSTRUCTIONS

***Please read instructions thoroughly before installation.***

**Tools Required**
- 1/8” drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment

**Package Contents**
- Driver & passenger side rear mud guard
- #10 screw (8)
- Washers (8)
- U-clip (8)
- Instruction sheet

**NOTE:** It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean the mud guard location area on the fender before installation.
2. Align mud guard with contour of inside lip of rear fender and temporarily clamp in place.
3. Standing behind vehicle, check and adjust mud guard for fit and parallel.
4. Using mud guard as a template, mark and drill a 1/8” hole at location C.
5. Install mud guard to rear fender with #10 screw and washer.
6. Check fit and parallel and adjust accordingly before tightening.
7. Drill and install #10 screws and washers at remaining locations.
8. U-clips are included to install behind fender if you prefer, or in case a hole is drilled to large. See Figure 2

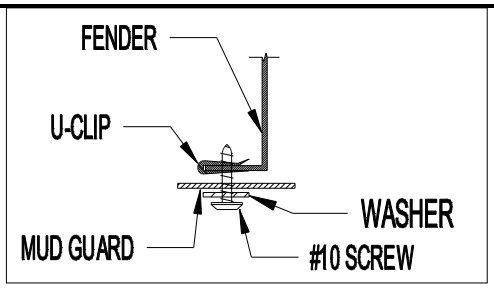


Figure 2

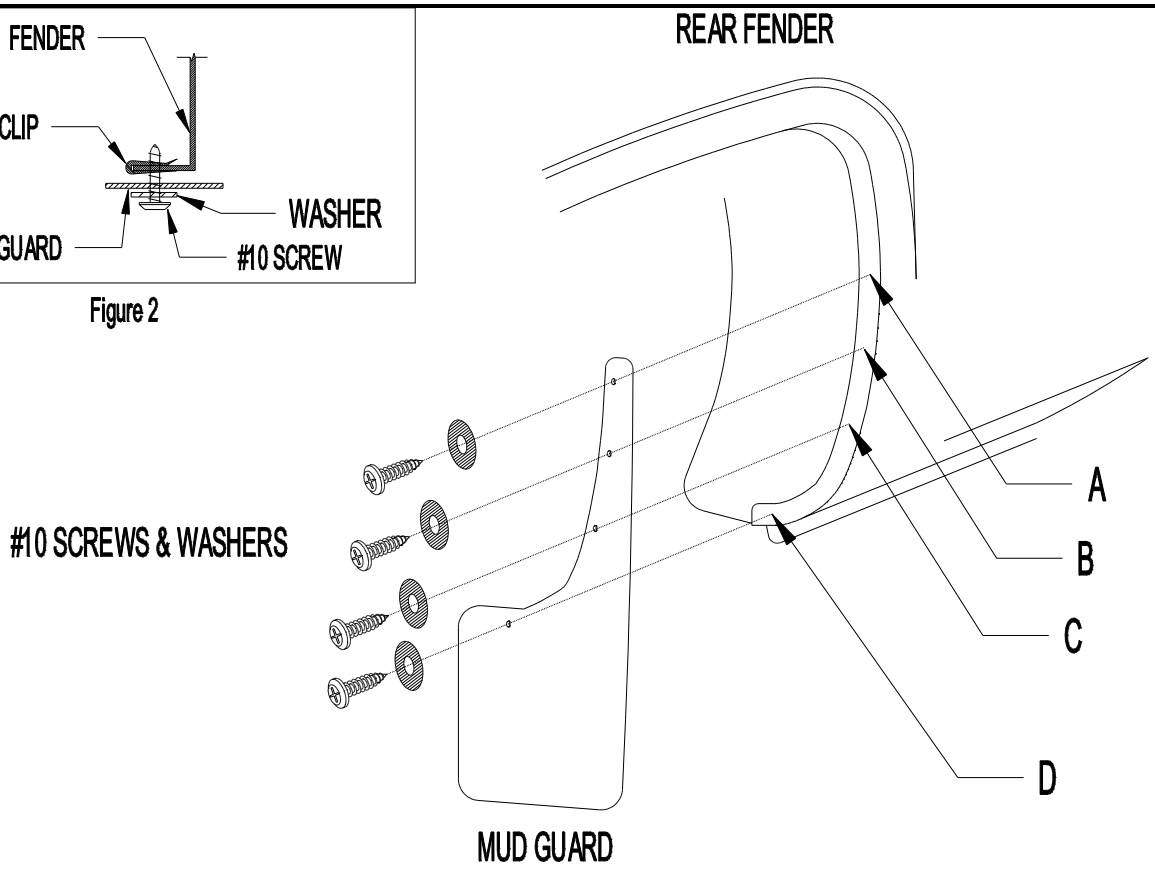


Figure 1

*NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR “EMBLEM” ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.*