T-REX Billet Grilles

25932

07-08 TOYOTA

FJ CRUISER

BUMPER INSERT

25932

07-08 TOYOTA

FJ CRUISER

BUMPER INSERT

2007-08 TOYOTA FJ CRUISER

BUMPER INSERT

Tools Required:
Phillips screwdriver

Hardware / Parts Included:
1 Billet Insert (9 bars)
2 #8 x 1.25" Screws (#6 Head)
2 #8 U-Nuts
2 2" Flange Brackets

Read and understand instructions before attempting installation

Step 1.
Test fit the billet in front of the factory bumper opening.

Step 2.
Slide the u-nuts over the hole in the flange brackets.
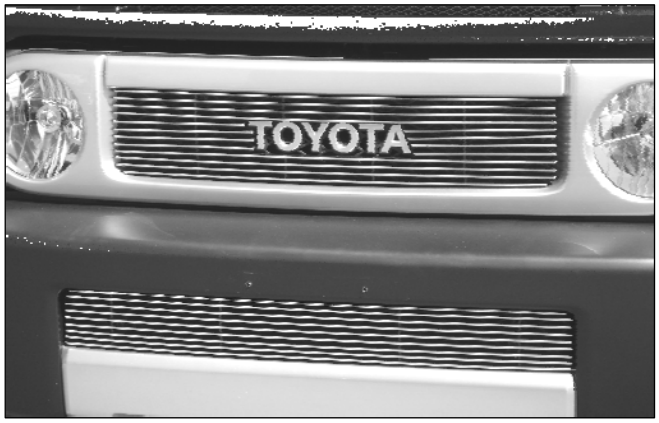
Step 3.
Insert the screws into the tabs welded to the billet. Secure the flange brackets from behind the bumper. Secure the hardware (do not over-tighten). ***Thank you for purchasing a T-Rex Billet Grille.*** **9/1/06**