



P/N
49-43006
49-13006

**FORD
POWER STROKE**
2008-UP V8-6.4L (td)

DIESEL EXHAUST



Features:

- High performance
- 4" mandrel-bent
- 409 SS or aluminized
- Lowers EGT's
- OE style clamps and hangers
- Intercooled tailpipe

Benefits:

- + 37 lbs. x ft. torque
- + 2 H.P.
- + 11% flow increase



aFepower.com






Installation Instructions for: FORD POWER STROKE 2008-UP V8 6.4L (td)



49-43006 (409SS) DPF-Back



49-13006 (Aluminized) DPF-Back

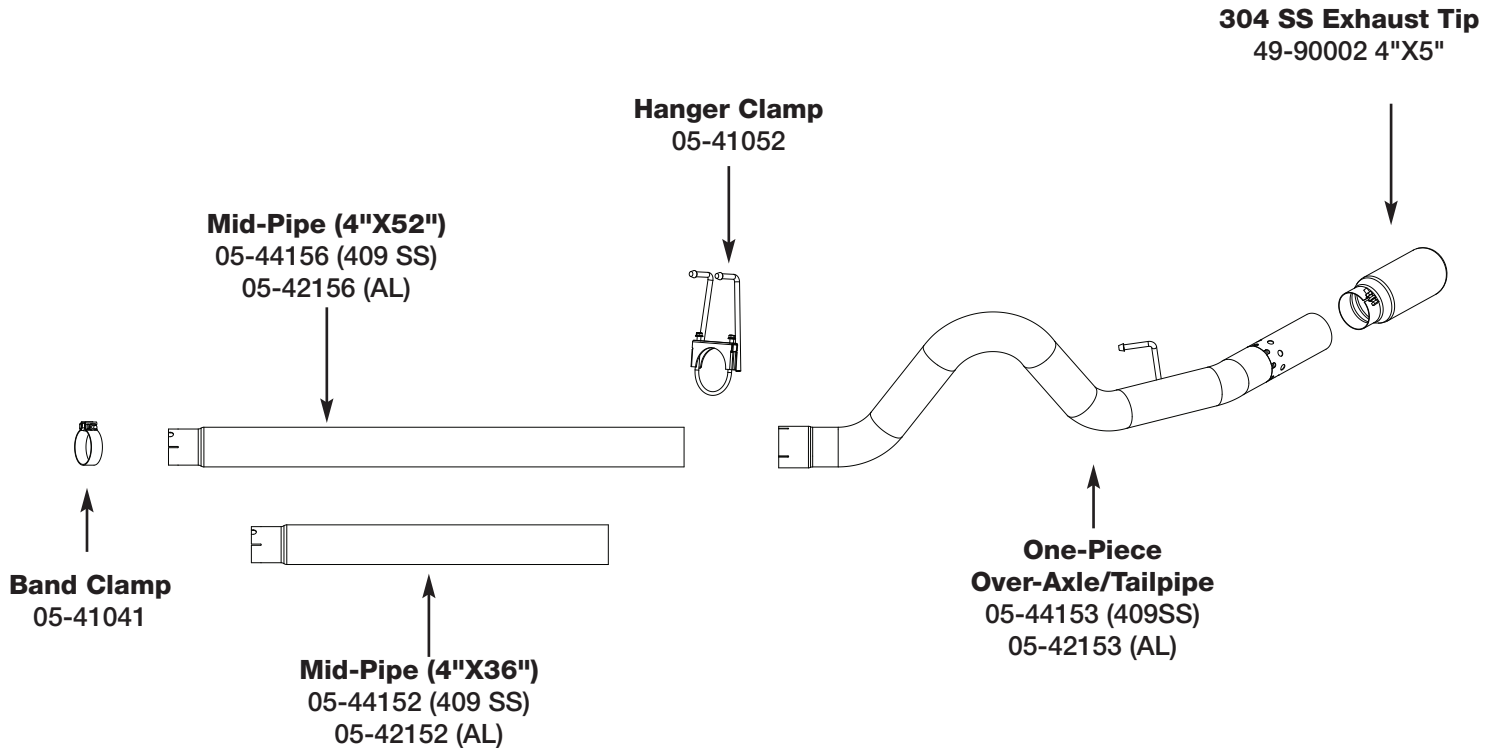

Step 1: (Read Instructions prior to installation) Remove your stock exhaust from the rear of your truck working your way forward. The spare tire and heatshield will need to be removed for exhaust replacement. Take caution not to damage the factory isolation mounts as they will be reused. *It is recommended to not fully tighten the clamps until the entire system has been installed.*

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install over-axle/tailpipe, utilizing the factory isolation mounts. Now slip the middle hanger clamp over the front end of over-axle/tailpipe.

Step 4: Install the Mid-pipe. Regular cab and quad cab short bed will require the short Mid-Pipe. Crew Cab long bed will use the long mid-pipe.

Step 5: Install the exhaust tip making sure not to cover the vent holes. Now tighten all connections and reinstall the spare tire and heatshield. The valve on the spare tire should be pointing down to allow for better access. Your installation is now complete. It is recommended to re-tighten all parts after 50-100 miles.

NOTE:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. aFe recommends professional installation on our products.