

STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only** approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

Chevrolet Extend-A-Fender® Fender Flares Set of 4

Set Part #40925-02

Rev-5 9/5/2013

For complete fitment info visit : www.bushwacker.com

TOOLS FOR EASY INSTALLATION:

- 7mm Socket
- Phillips Screwdriver
- Grease Pencil

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Included in Hardware Kit:

- | | | | | |
|---|---|---|---|--|
| 1. | 2. | 3. | 4. | 5. |
|  |  |  |  |  |
| CL1-0005,
Dacromet "U"
Spring Clip,
12 pcs | GP1-0005,
Large Wiper Style
Edge Trim,
332 inches | SW1-0050,
10 x 5/16 Phillips
Truss Screw,
12 pcs | MT1-0002,
1" x1" x.017"
Black Tab,
12 pcs | ET1-0002,
Edge Trim Tool,
1 pc |

STEP 2 - EDGE TRIM INSTALLATION

- Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0008) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).
- Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.




Front Flare Installation Procedures (Driver's Side):



Using a 7mm socket, remove four factory screws. Keep screws for later use.



Position flare on fender and reinstall the four factory screws removed in Step 1, be sure to not tighten.

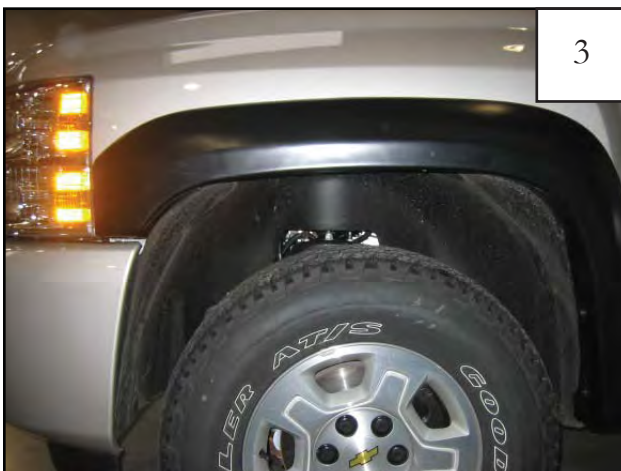


Verify fit and tightened all screws. Follow steps 1-3 for passenger side installation.

Rear Flare Installation Procedures (Driver's Side):



Holding flare in position on fender, use a grease pencil to mark six hole locations.

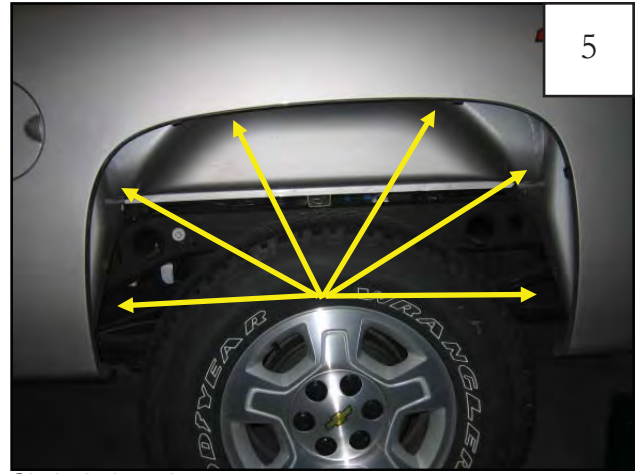

Six hole locations.




Center a supplied black plastic tab over each mark made in Step 3, aligning edge of tab with inside of fender lip (tab may extend over outside of fender).



Slide a supplied clip over each black tab. Clips may need to be adjusted to align with holes in flare.




Reposition flare on fender. Start a supplied serrated-flange screw through the hole in the flare, and into each clip.

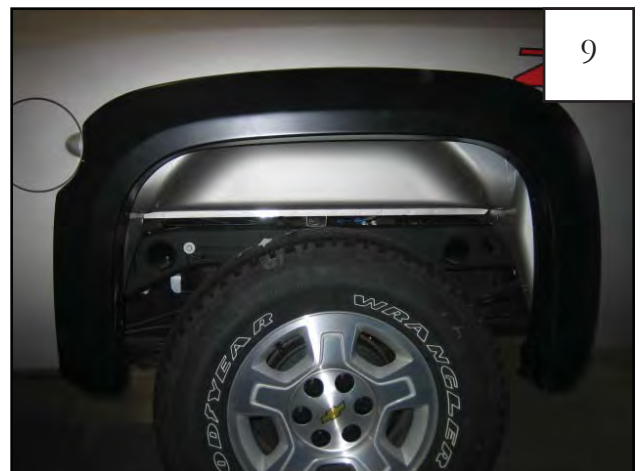

Verify fit and tighten all screws.

Edge Trim Tool Procedures:

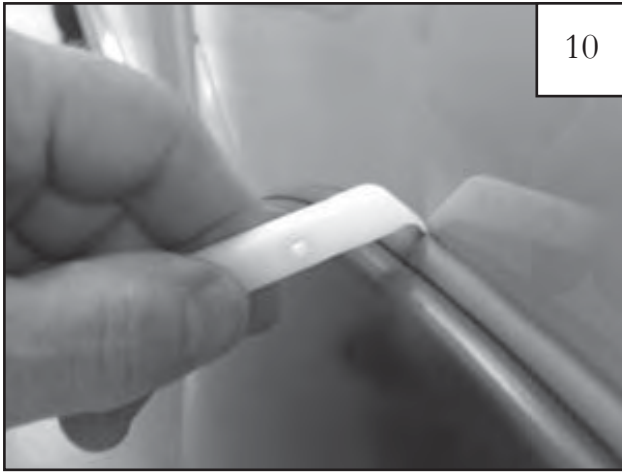

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.