

2360 Boswell Road
Chula Vista, CA 91914
Phone 619.216.1444
Fax 619.216.1474
E-Mail tech@explorerprocomp.com



PRO COMP SUSPENSION

Suspension Systems that Work!

**Part # 52097 4''
Suspension System
97'-03' Ford F/S 4WD
IFS F150-F250 4.2L,
4.6L and 5.4L w/ AOD or
4R70W Transmission**

This document contains very important information that includes warranty information and instructions for resolving problems you may encounter. Please keep it in the vehicle as a permanent record.

INSTALLATION INSTRUCTIONS

NOTE: 99-03 F150 4WD MODELS EQUIPPED WITH A 4R70W TRANSMISSION REQUIRE P/N 52097 OR KIT REFERENCE # K4050. 97-01 MODELS WITH A E40D REQUIRE P/N 52098 OR KIT REFERENCE # K4051. THE 4R70W TRANSMISSION CAN BE IDENTIFIED BY A 13"x 13" PAN AND THE E40D TRANSMISSION HAS A 13"X 26" PAN.

PARTS LIST:

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ILLUST.</u>
<u>Box 1 of 3</u>			
90-1402	Front Crossmember	1	19,22,24
90-1460	Rear Crossmember	1	
90-1461	Crossmember Support Bracket (Driver)	1	23,26
90-1462	Crossmember Support Bracket (Passenger)	1	23,26
90-1463	Differential Drop Bracket	2	17,18,22
90-2181	Bumpstop Bracket	2	13, 29 ²⁶
90-6164	Hardware Pack		
70-0625501800	5/8" x 5-1/2" USS GR8 Hex Bolt	4	Inst. 5
70-0506001800	1/2" x 6" USS GR8 Hex Bolt	1	24
72-06200100816	5/8" USS Stover Nut	4	Inst. 5
72-05000100512	1/2" USS Nylock Nut	1	24
73-06200034	5/8" SAE Hardened Flat Washer	8	Inst. 5
73-05000030	1/2" SAE Flat Washer	2	24
90-6165	Hardware Pack		
90-1216	Load Washer - 1.50" O.D. x .532" I.D.	3	24,27
90-1539	Brake Line Extension - F150	2	30
90-2089	Sway Bar Spacer Tube	2	28
90-2215	Spacer - 1.0" x .219" Wall x 3.75"	1	24

THIS INSTRUCTION PACKET CONTAINS WARRANTY INFORMATION AND SHOULD BE KEPT IN THE VEHICLE AS A PERMANENT RECORD.

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ILLUST.</u>
90-6189	Hardware Pack		
90-2216	Vent Tube Extension	1	21
90-2217	Hose Nipple - 5/16" Brass	1	21
90-6166	Hardware Pack		
70-03711002800	3/8" x 11" SAE GR8 Hex Bolt	2	28
70-0431251800	7/16" x 1-1/4" USS GR8 Hex Bolt	4	23
72-03700100817	3/8" SAE GR8 Stover Nut	2	28
72-04300100816	7/16" USS GR8 Stover Nut	4	23
73-03700030	3/8" SAE Flat Washer	8	28
73-04300034	7/16" SAE Hardened Flat Washer	8	23
90-6167	Hardware Pack		
70-0503751800	1/2" x 3-3/4" USS GR8 Hex Bolt	1	17
71-121001501090	12MM x 1.50 x 100MM GR10.9 Bolt	1	18
72-05000100816	1/2" USS Stover Nut	1	17
73-12150816	12MM x 1.50 GR10.9 Stover Nut	1	18
73-05000034	1/2" SAE Hardened Flat Washer	4	17,18
90-6183	Hardware Pack		
70-0310751500	5/16" x 3/4" USS GR5 Hex Bolt	2	30
70-0501251800	1/2" x 1-14" USS GR8 Hex Bolt	2	29
72-03100100512	5/16" USS Nylock Nut	2	30
72-05000100512	1/2" USS Nylock Nut	2	29
73-03100030	5/16" SAE Flat Washer	4	30
73-05000031	1/2" SAE Flat Washer	4	29
<u>Box 2 of 3</u>			
90-4025	Front Spindle (Driver)	1	25
90-4024	Front Spindle (Passenger)	1	25
<u>Box 3 of 3</u>			
90-4032	Torsion Bar Drop Bracket	2	27
90-1407	Compression Strut Rear Mount Bracket	1	26
90-2229	Compression Strut	1	26

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ILLUST.</u>
90-6201	Compression Strut Pack		
15-11148	Differential Mount Bushing	6	26
90-2109	Compression Strut Sleeve	2	26
90-2112	Compression Strut Sleeve	1	26
90-2110	Sleeve	2	27
90-6202	Hardware Pack		
70-0504001800	1/2" x 4" USS GR8 Hex Bolt	2	26
70-0505501800	1/2" x 5-1/2" USS GR8 Hex Bolt	1	26
73-05000030	1/2" SAE Flat Washer	6	26
72-05000100512	1/2" USS Nylock Nut	3	26
70-0431251800	7/16" x 1-1/4" USS GD8 Hex Bolt	1	26
73-04300030	7/16" SAE Flat Washer	2	26
72-04300100816	7/16" USS Top Lock Nut	1	26
90-6185	Hardware Pack Torsion Drop		
70-0503501800	1/2" x 4" USS GR8 Hex Bolt	4	27
70-0505001800	1/2" x 5" USS GR8 Hex Bolt	2	27
73-05000030	1/2" SAE Flat Washer	12	27
72-058000100816	1/2" USS Stover Nut	6	27

**** The following parts are used in conjunction with this kit. They must be ordered separately. ****

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
320510	ES 3000 Shocks (Front)	2
329510	ES 3000 Shocks (Rear)	2
13132	Add-A-Leaf Kit	2
22259	U-Bolt Rear Kit	1
MX6006	MX-6 Shocks (Front)	2
MX6007	MX-6 Shocks (Rear)	2

BEFORE YOU BEGIN:


- ◆ **This installation requires a professional mechanic!**
- ◆ We recommend that you have access to a factory service manual for your vehicle to assist in the disassembly and reassembly of your vehicle. It contains a wealth of detailed information.
- ◆ Prior to installation, carefully inspect the vehicle's steering and driveline systems paying close attention to the tie rod ends, ball joints, wheel bearing preload, pitman and idler arm. Additionally, check steering-to-frame and suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition. Repair or replace all worn or damaged parts!
- ◆ Read the instructions carefully and study the illustrations before attempting installation! You may save yourself a lot of extra work.
- ◆ Check the parts and hardware against the parts list to assure that your kit is complete. Separating parts according to the areas where they will be used and placing the hardware with the brackets before you begin will save installation time.
- ◆ Check the special equipment list and ensure the availability of these tools.
- ◆ Secure and properly block vehicle prior to beginning installation.
- ◆ **ALWAYS** wear safety glasses when using power tools or working under the vehicle!
- ◆ Use caution when cutting is required under the vehicle. The factory undercoating is flammable. Take appropriate precautions. Have a fire extinguisher close at hand.
- ◆ Foot pound torque readings are listed on the Torque Specifications chart at the end of the instructions. These are to be used unless specifically directed otherwise. Apply thread lock retaining compound where specified.
- ◆ ***Please note that while every effort is made to ensure that the installation of your Pro Comp lift kit is a positive experience, variations in construction and assembly in the vehicle manufacturing process will virtually ensure that some parts may seem difficult to install. Additionally, the current trend in manufacturing of vehicles results in a frame that is highly flexible and may shift slightly on disassembly prior to installation. The use of pry bars and tapered punches for alignment is considered normal and usually does not indicate a faulty product. However, if you are uncertain about some aspect of the installation process, please feel free to call our tech support department at the number listed on the cover page. We do not recommend that you modify the Pro Comp parts in any way as this will void any warranty expressed or implied by the Pro Comp Suspension company.***

PLEASE NOTE:

Due to differences in manufacturing, dimensions and inflated measurements, tire and wheel combinations should be test fit prior to installation. Tire and wheel choice is crucial in assuring proper fit, performance, and the safety of your Pro Comp equipped vehicle. For this application, we recommend a wheel not to exceed 8" in width with a minimum backspacing of 4" must be used, additionally, a quality tire of radial design, not exceeding 35" tall X 12.5" wide is also recommended. Please note that the use of a 35" X 12.5" tire may require fender modification. Violation of these recommendations will not be endorsed as acceptable by Pro Comp Suspension and will void any and all warranties either written or implied.

- Front end realignment is neces-
- Speedometer recalibration is necessary if bigger tires (10% larger than stock diameter) are installed.
- This system utilizes the stock torsion bar which normally affords the best ride quality. If, after kit is installed, ride/handling seems too “soft”, heavier Gross Vehicle Weight Rating (GVWR) bars can be installed. Contact your local Ford dealer for more details.
- Pro Comp offers skid plates, traction bars, steering stabilizers and a full line of All Terrain and Mud Terrain Tires. Contact dealer for details.

**** The following special tools will be required for the proper removal and or installation of this kit ****

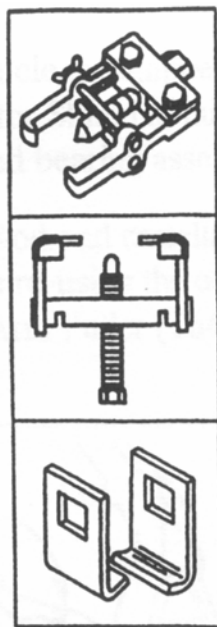

Pitman Arm Puller
T64P-3509-F


Torsion Bar Tool
T95T-5310-A

Torsion Bar Tool
Adapters
#T96T-5310-A

FRONT DISASSEMBLY


1) Put vehicle in neutral. Place floor jack under lower control arm's front crossmember and raise vehicle. Place jack stands under frame rails, behind front wheel wells and lower frame onto stands. Put vehicle in gear, set emergency brake and block rear wheels, in front and behind tires. Remove front wheels.

2) Install Torsion Bar tool (T95T-5310-A) with Adapter Plates (T96T-5310-A) **(Illustration 1)**. Tighten torsion bar tool until it touches torsion bar adjuster. Measure the depth of the adjuster bolt for replacement of torsion bar adjusters. Remove torsion bar adjuster bolt and nut. Remove torsion bar adjuster and repeat on opposite side.

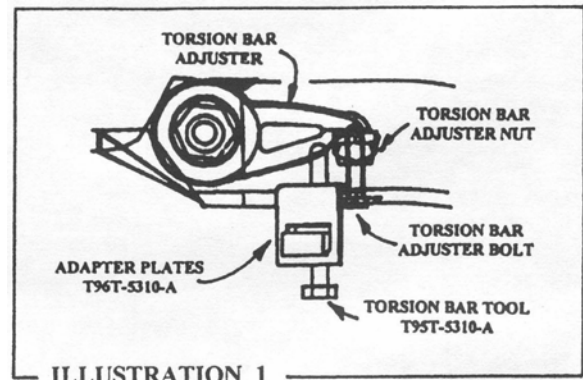


NOTE: If your vehicle is equipped with a 4-wheel anti-lock brake system, at this time disconnect the anti-lock sensor wire from brake line and reposition so not to damage ends.

3) Remove six bolts that attach torsion bar crossmember to the frame **(Illustration 2)**. Before removing torsion bars mark each side so as to install as removed. Move crossmember back one side at a time while removing torsion bar. Remove this assembly and set it aside.

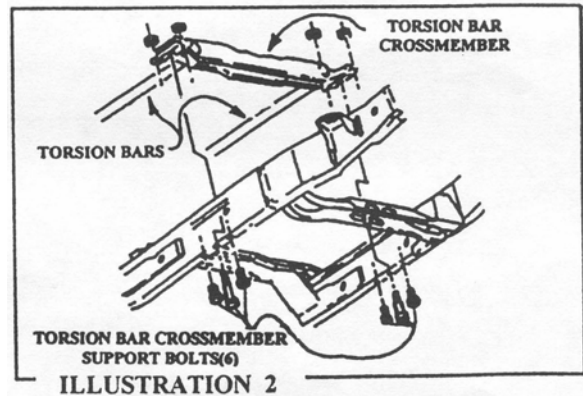

4) Locate the (two) caliper bolts on front brake calipers **(Illustration 3)**. Remove bolts and lift disc brake caliper off disc brake rotor. Position the brake calipers aside.

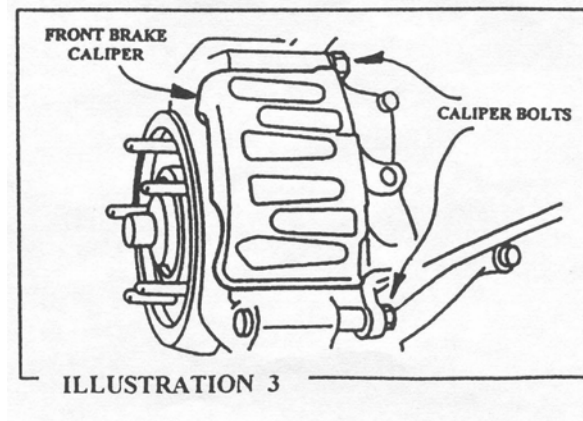

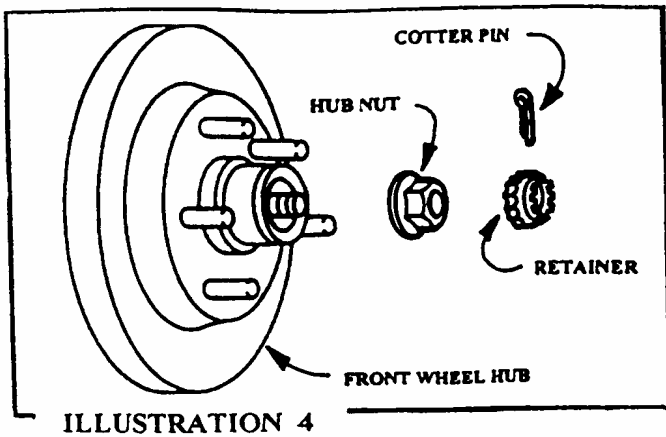


ILLUSTRATION 4

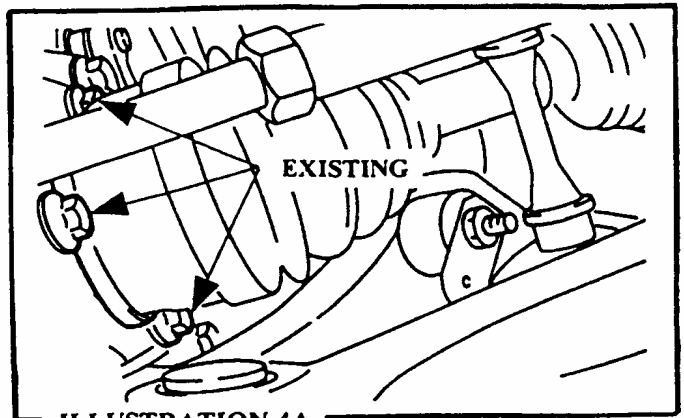


ILLUSTRATION 4A

5) Remove cotter pin, retainer and hub nut from front hub (**Illustration 4**). Remove rotor and set aside. You will not be re-using the cotter pin. A new cotter pin will be needed for assembly. Remove front bearing assembly (**Illustration 4A**) by removing the three bolts located on back side of wheel hub.

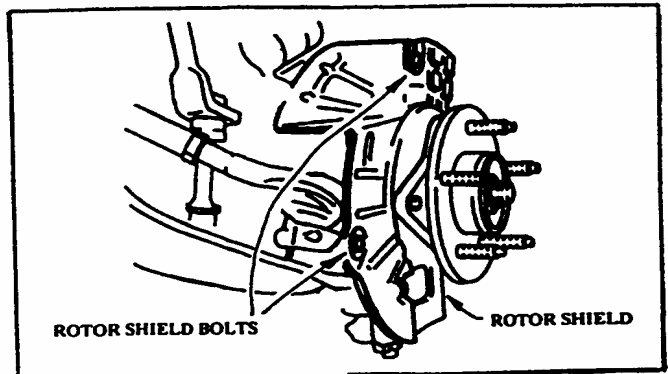


ILLUSTRATION 5

NOTE: If your vehicle is equipped with the 4-wheel anti-lock brake system remove the disc brake rotor shield at this time (**Illustration 5**). Disconnect anti-lock sensor wire from spindle and bearing assembly. Set aside so not to damage.

6) Locate tie-rod end castellated nut (**Illustration 6**). Remove the cotter pin and nut. You will not be re-using the cotter pin. A new cotter pin will be needed for assembly. Using pitman arm puller (T63P-3590-F) (**Illustration 7**), separate tie-rod end from front spindle.

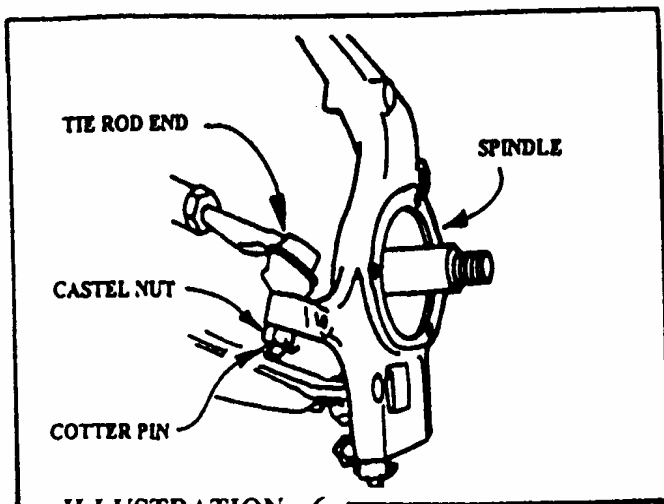


ILLUSTRATION 6



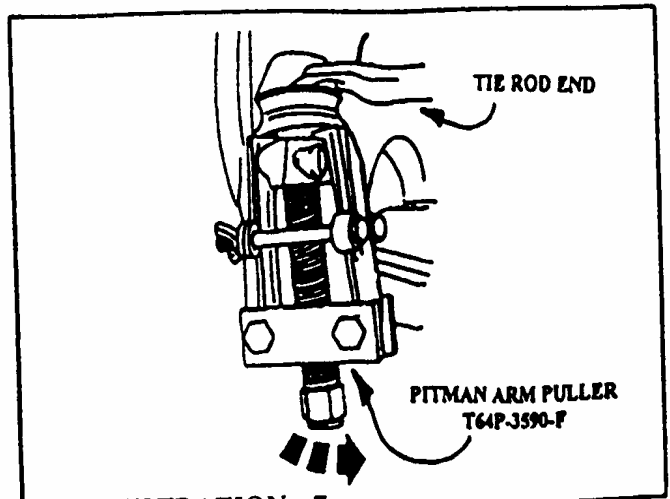


ILLUSTRATION 7




7) Locate upper ball joint castellated nut (**Illustration 8**). Remove cotter pin and nut. You will not be re-using cotter pin. A new cotter pin will be needed for assembly. Attach pitman arm puller (T64P-3590-F) (**Illustration 9**). Separate the front spindle from upper A-arm.

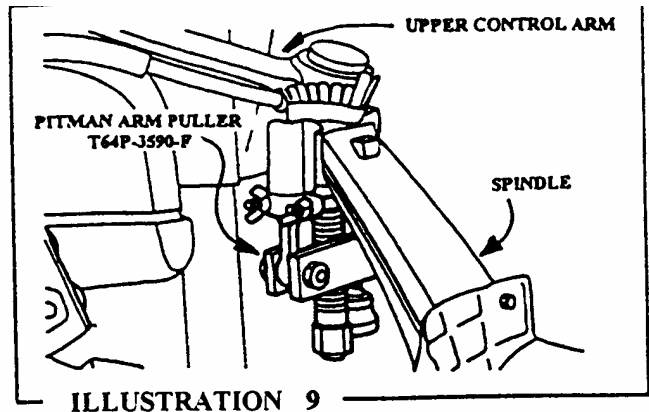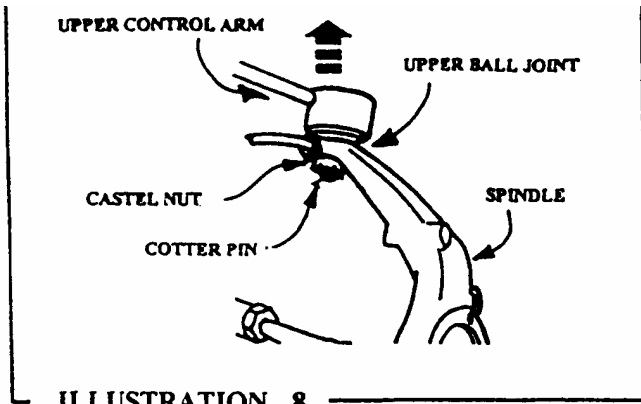

8) Remove the sway bar link nut from lower A-arms (**Illustration 10**).


9) Locate and remove front shock absorber lower mounting bolt and nut from lower A-arm.

10) Suspend front wheel half shaft using a strap or wire, so not to bind.

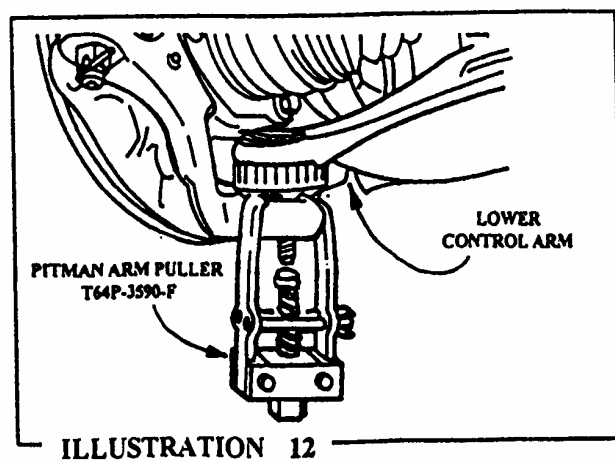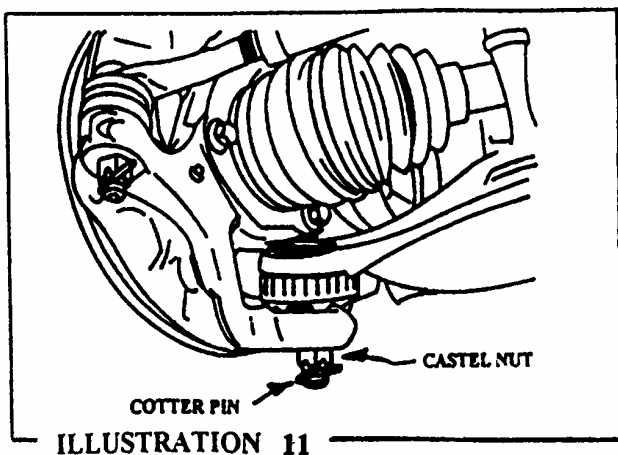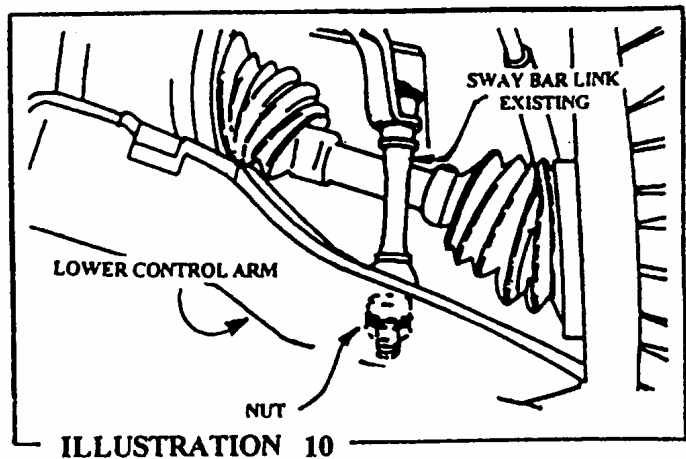


11) Locate and remove lower ball joint cotter pin (**Illustration 11**). Using pitman arm puller (T64P-3590-F) separate the front spindle from the lower A-arm. Remove the front spindle (**Illustration 12**) both sides.

12) Locate and disconnect vacuum line and front axle vent tube from front differential (**Illustration 13**). Using a floor jack, support front differential.


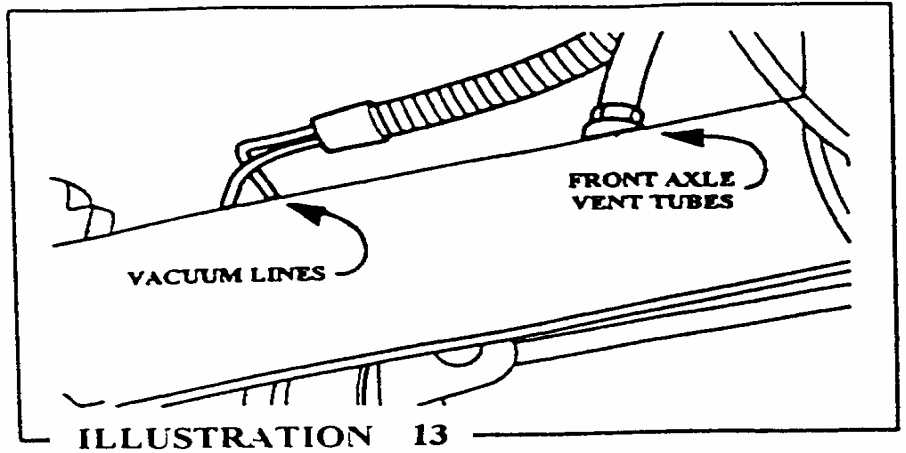


13) Locate existing differential crossmember (**Illustration 14**). Remove front bushing, hardware and the (4) differential crossmember bolts. Remove differential crossmember. You will not be re-using this item.

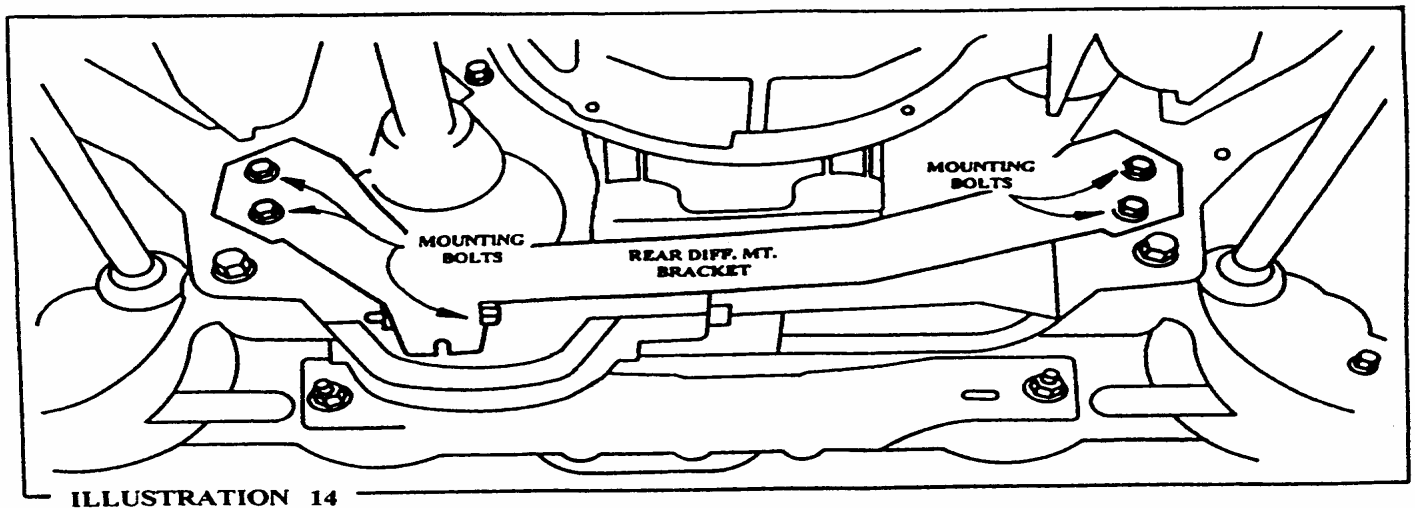


14) Locate the (2) lower A-arm mounting areas (**Illustration 15**). Remove existing hardware and lower A-arm. Repeat on opposite side.

NOTE: If your vehicle is equipped with a O.E.M. skidplate, remove it at this time. (**Illustration 16**).

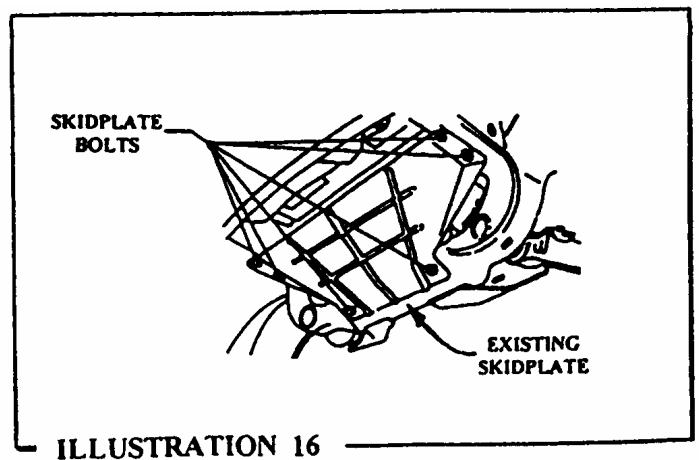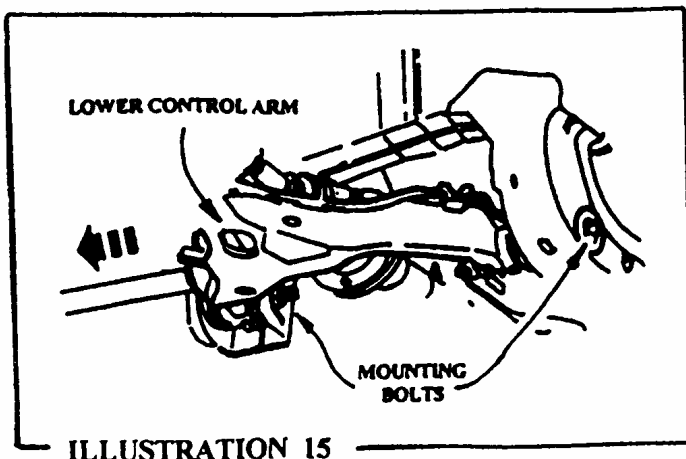


FRONT INSTALLATION


1) Making sure that front differential is well supported, remove existing hardware from both passenger and driver side differential mounting areas. Carefully lower differential enough to install differential drop bracket (90-1463) on passenger side (**Illustration 17**) using the 1/2" hardware provided. Install but do not tighten.

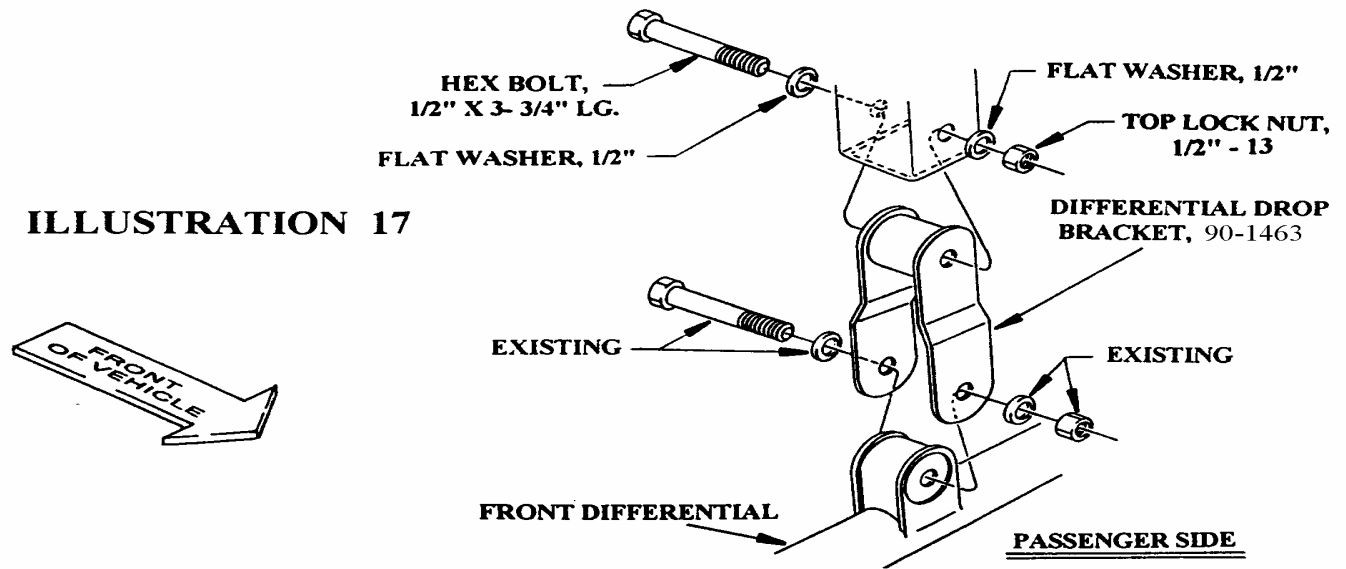


2) Install front driver side differential drop bracket (90-1463) (**Illustration 18**) using 12mm hardware provided. Make sure that the head of the bolt is located to the driver outboard side of the vehicle. Do not tighten.

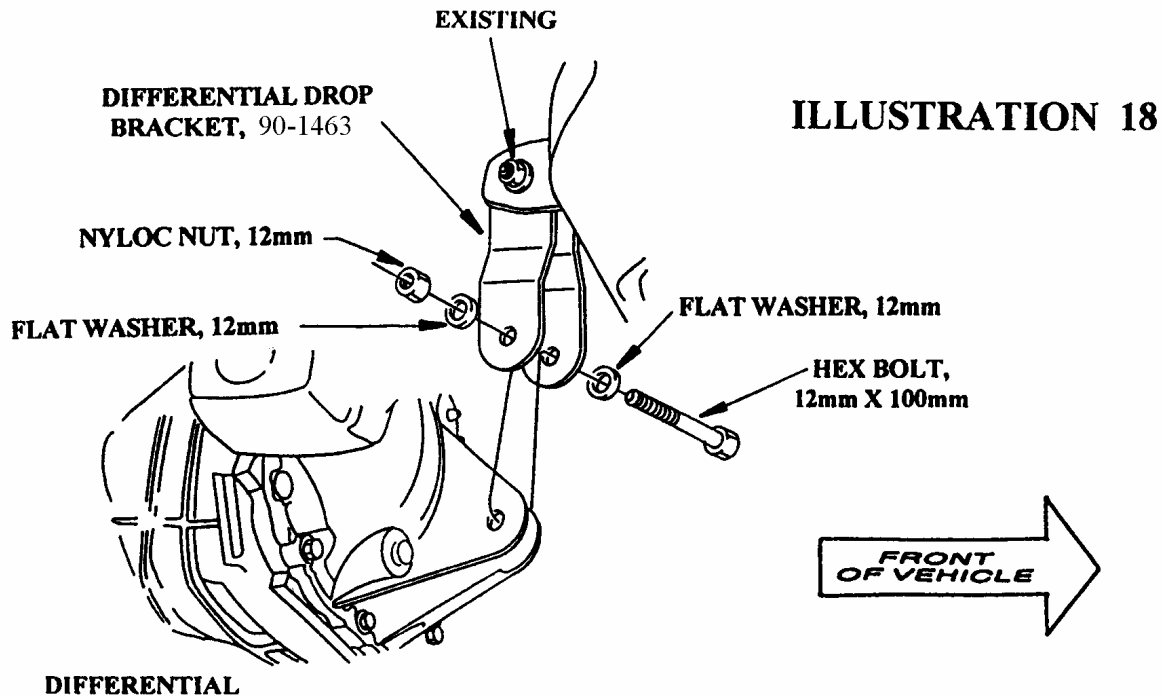


3) Install rear crossmember (90-1460) into original A-arm rear mounting locations (**Illustration 19**). Make sure differential mount sets into mounting tabs on rear crossmember (**Illustration 20**). Fasten using existing hardware previously removed. Make sure that the bolt heads are facing towards rear of vehicle. Do not tighten.

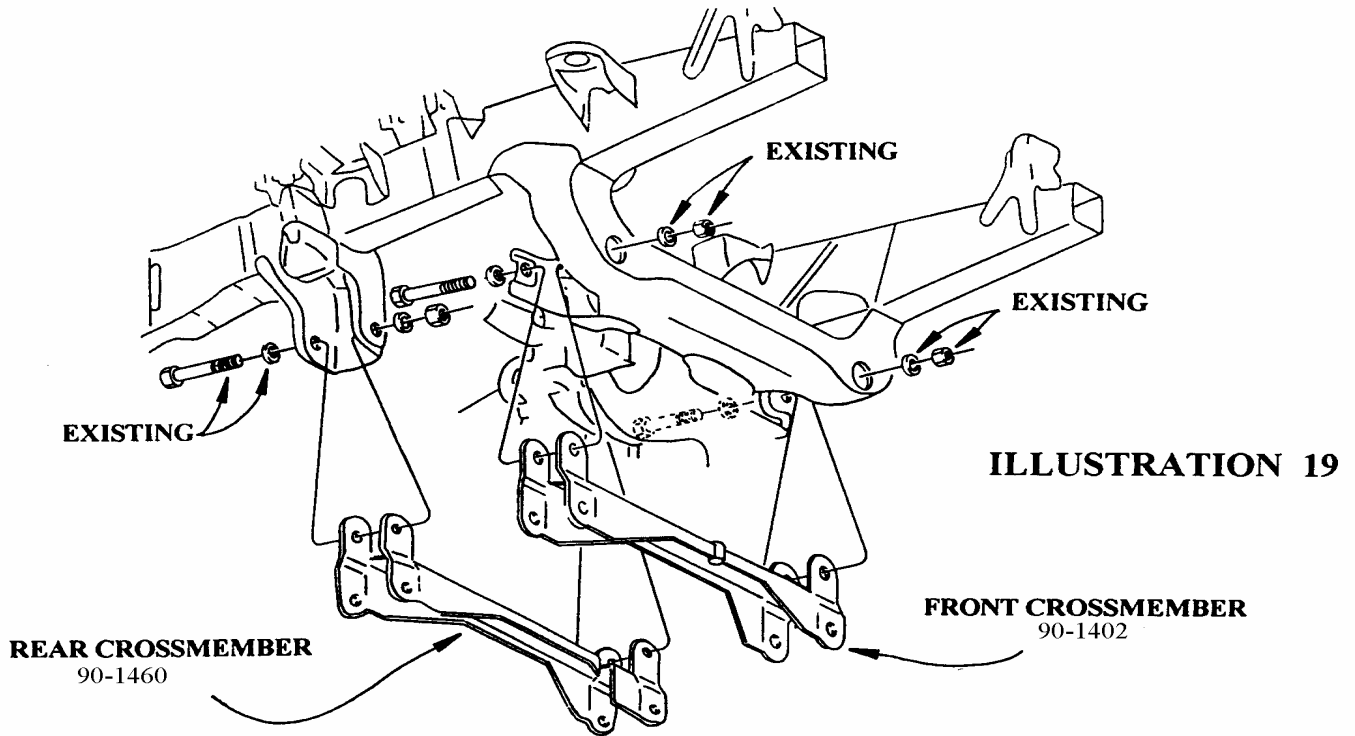


4) Install front crossmember (90-1402) (**Illustration 19**) into original front A-arm mounting locations. Unfasten and slide driver side lower differential mounting hardware back enough to align differential mount bracket with support tab on crossmember (**Illustration 22**). Fasten front crossmember, using existing hardware previously removed. Make sure that heads of the bolts are facing to the rear of vehicle. Do not tighten.

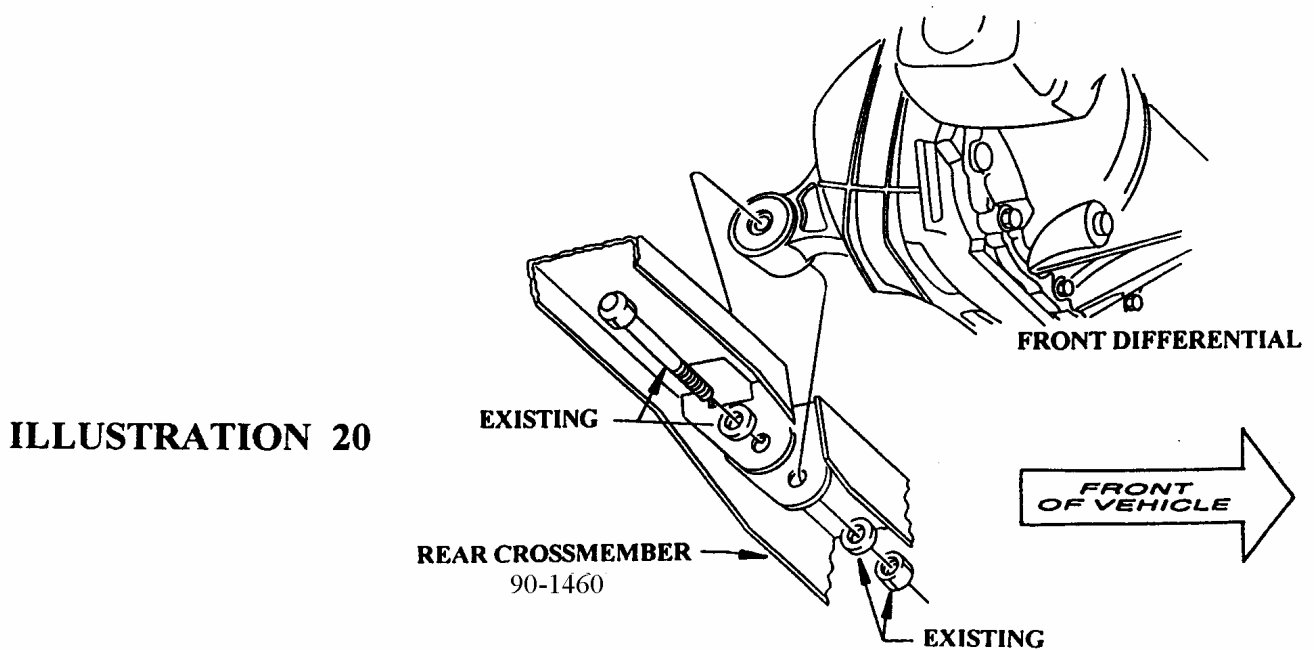

5) Install existing lower A-arms into front and rear crossmember mounting locations using the 5/8" hardware provided.

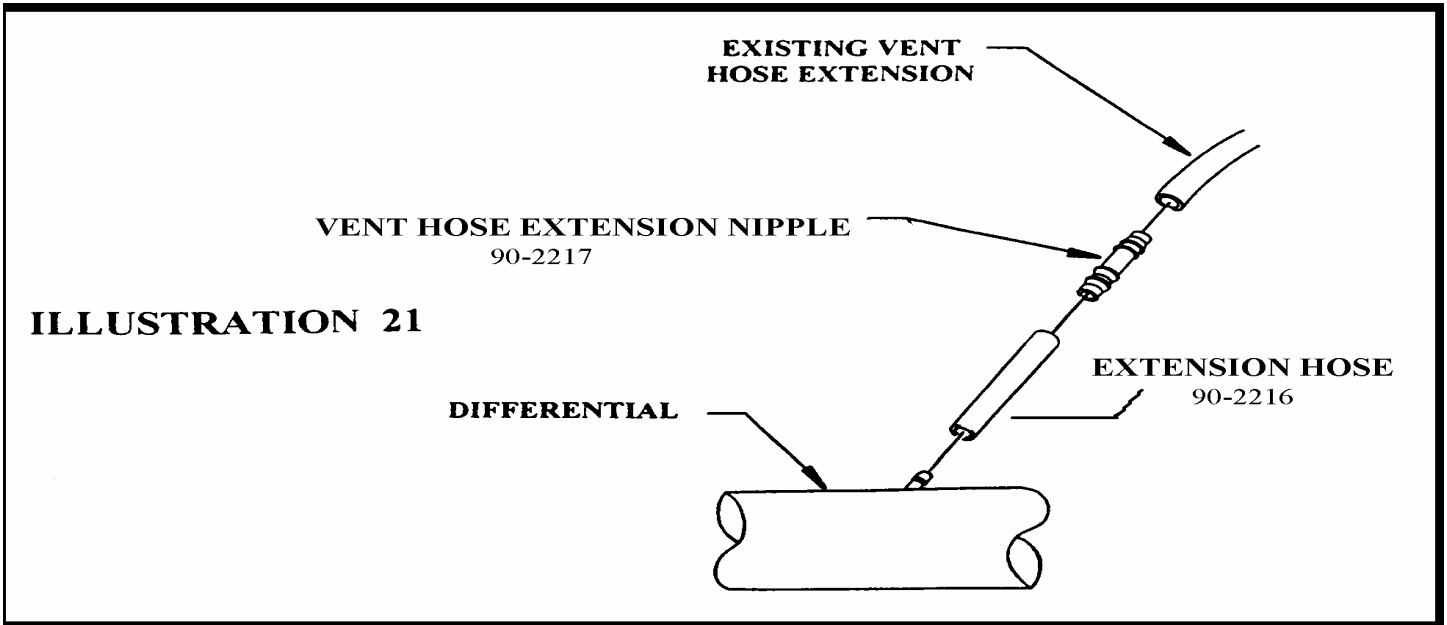

6) Install new vent hose extension (90-2216 & 90-2217) into existing vent hose (**Illustration 21**). Torque existing crossmember mounting nuts to 121-147 ft.lbs. Torque existing differential mounting nuts to 56-76 ft.lbs. Torque 12mm and 1/2" differential mount nut to 76 ft.lbs.

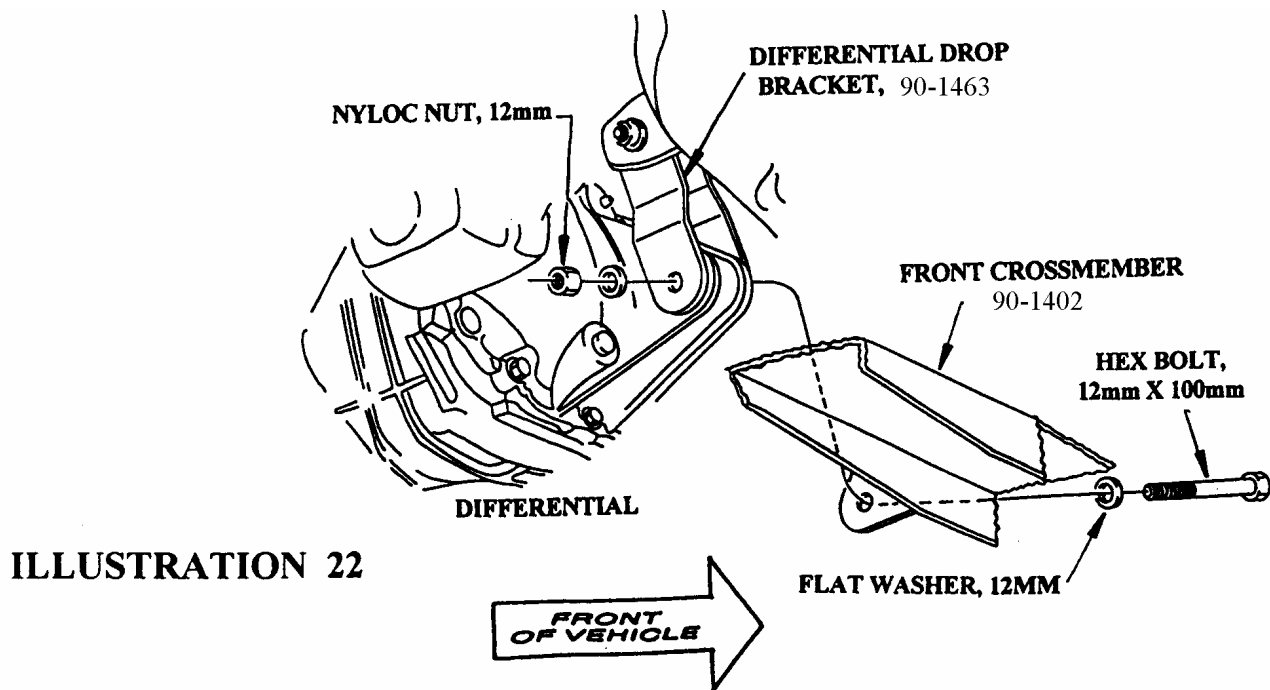

7) Referring to **Illustration 23** install crossmember support brackets (90-1461 driver) and (90-1462 passenger). Temporary fasten the upper mounts of brackets to existing rear crossmember mounting locations, using hardware previously removed. And lower mounts to rear crossmember using 7/16" hardware provided. Do not tighten at this time.

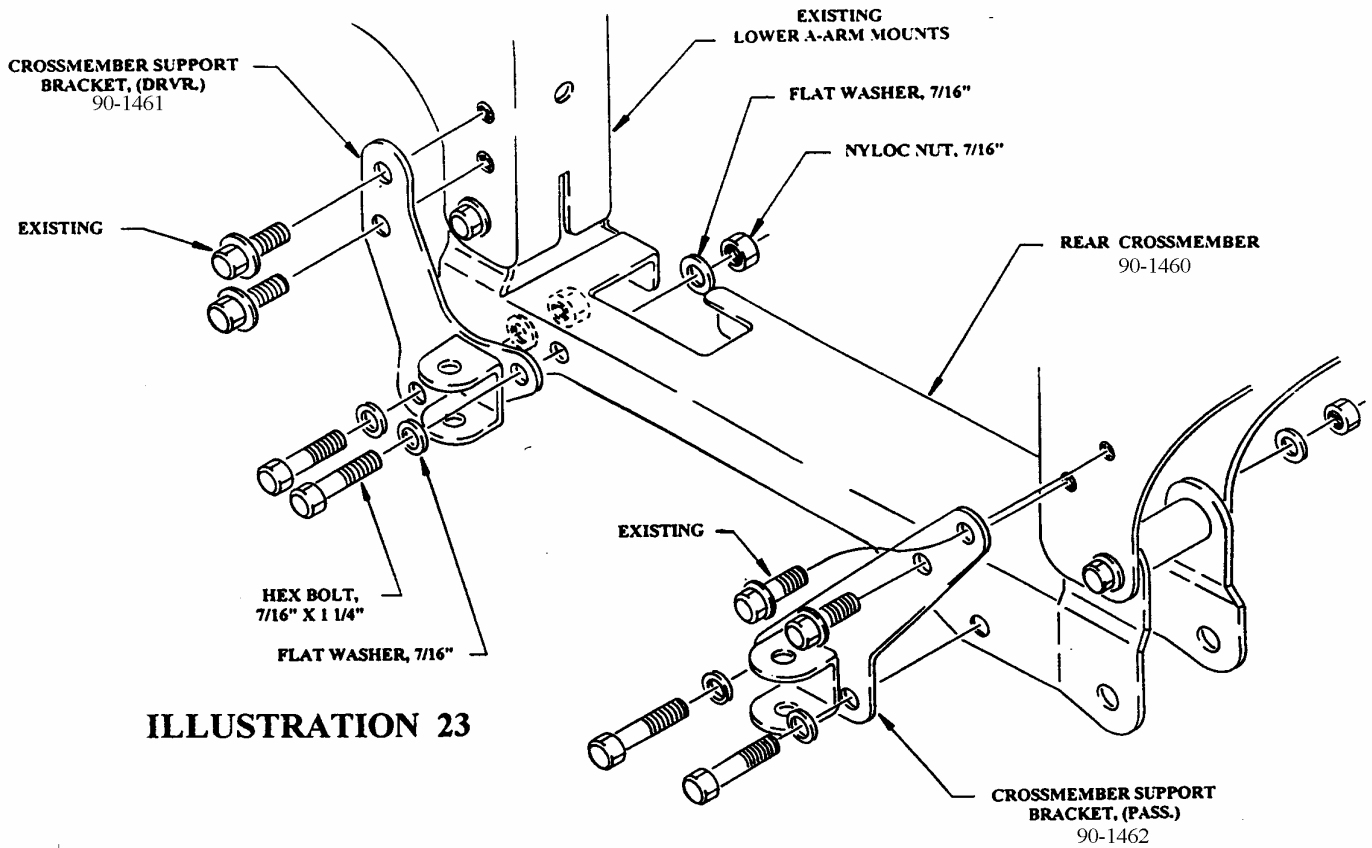


ILLUSTRATION 23

8) Install front crossmember spacer (90-2215) using 1/2" hardware and load washer (**Illustration 24**). Make sure bolt head is on the bottom. Torque nut to 76 ft.lbs.


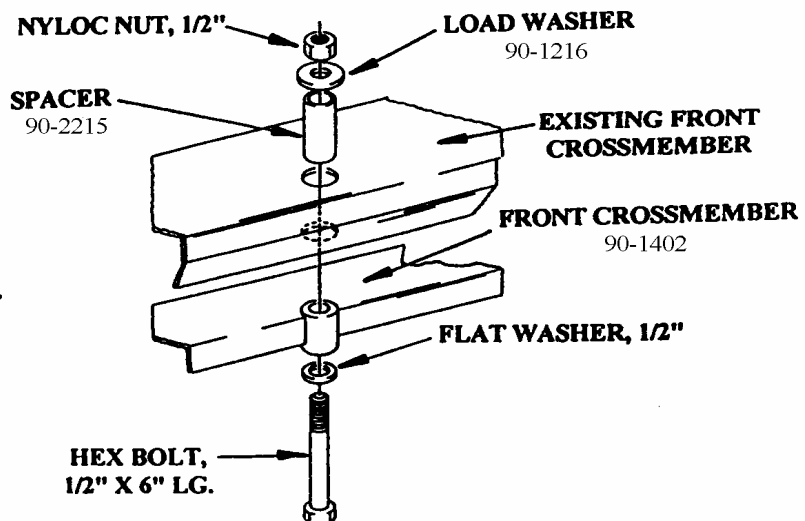



ILLUSTRATION 24

9) Remove seals from old spindles and install in new spindles. Support lower A-arms. Position new front spindles (90-4025 driver) and (90-4024 passenger) (**Illustration 25**). Attach spindle to upper ball joint. Torque nut to 57-77 ft.lbs. Attach ball joint on lower A-arm to front spindle. Torque to 83-112 ft.lbs. Apply new cotter pins at these locations. Install axle bearing assembly, apply loctite and torque the three bolts to 110-148 ft.lbs. Do not tighten hub nut at this time.

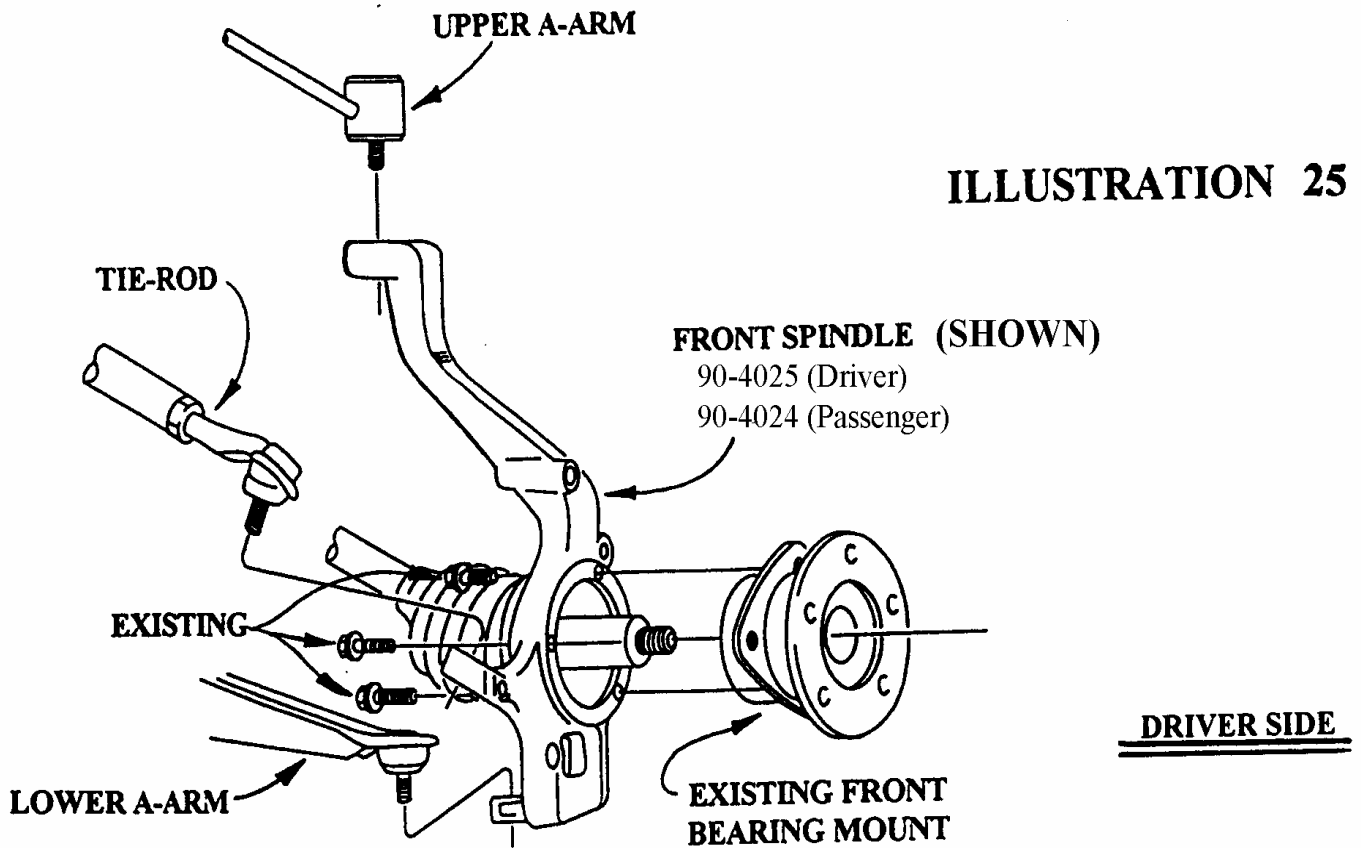

10) Locate and remove the rear transmission mounting hardware on trans-crossmember. Position compression strut bracket (90-1407) (**Illustration 26**) loosely tighten. Using the compression strut bracket as a guide, mark the area where trans-crossmember is to be drilled. Remove compression strut bracket and drill a 1/2" diameter hole in the marked area of the trans-crossmember. Remove driver side crossmember support bracket (90-1461) using the hardware provided. Install compression strut (90-2229) as shown in **Illustration 26**. Reinstall the crossmember support bracket to crossmember and existing mount. Torque existing trans-crossmember nuts to 64-81 ft.lbs. Torque 1/2" nuts to 76 ft.lbs. Torque 7/16" nut to 51 ft.lbs. And existing crossmember support bolts to 56-76 ft.lbs.


ILLUSTRATION 26

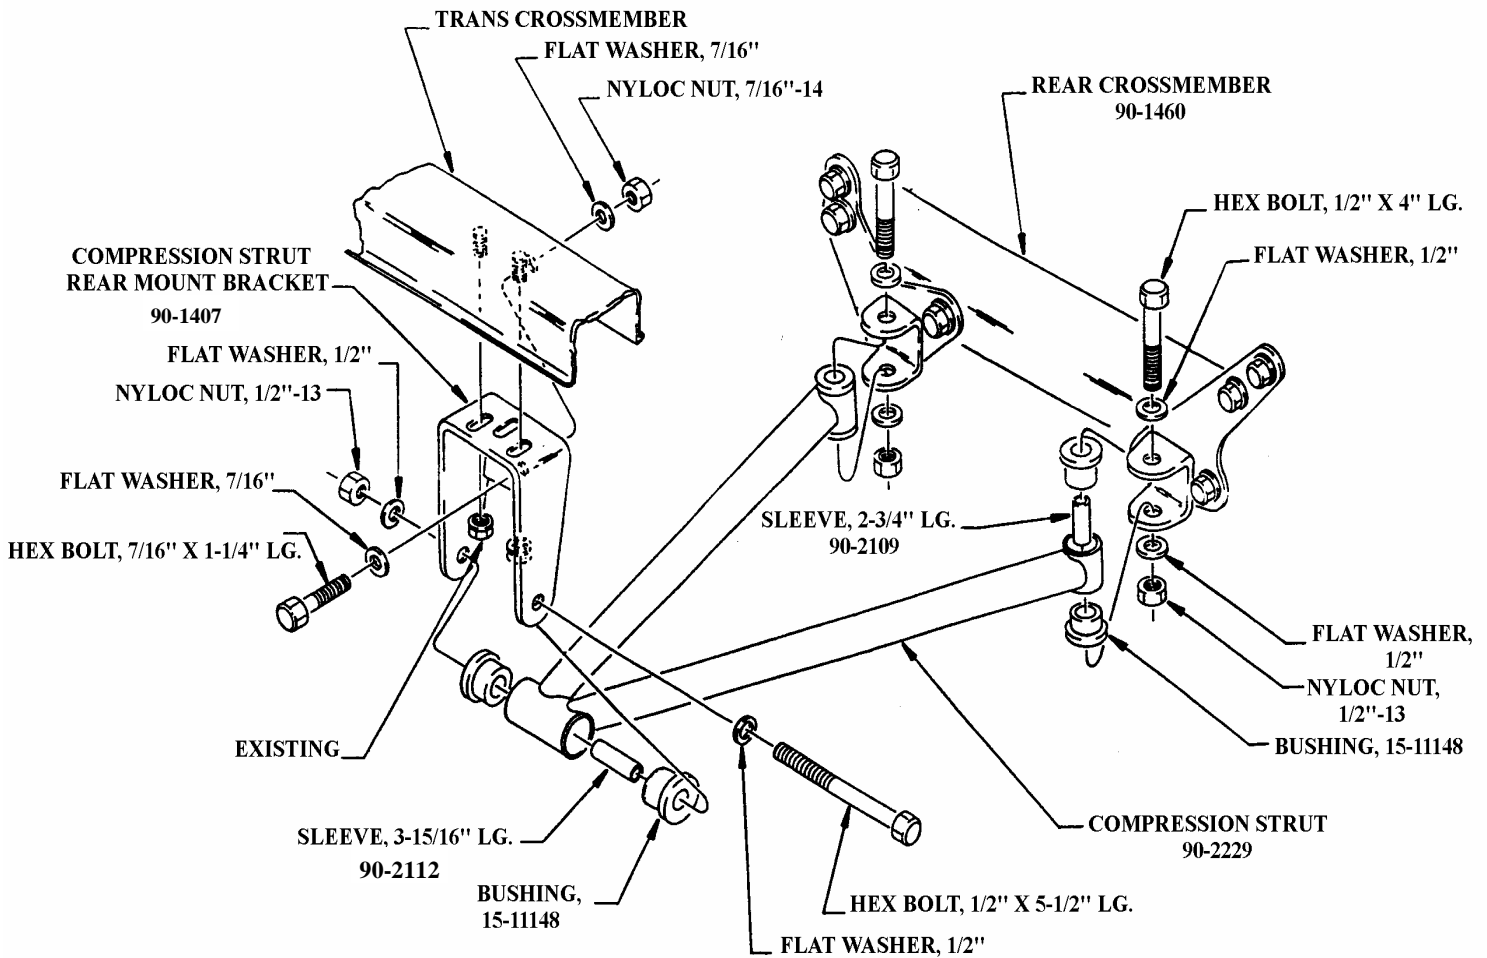

11) Locate existing torsion bar crossmember mount bracket. Remove nut clip and rubber mounting bushing, drill out center mounting hole on bracket to 9/16" diameter. Be sure to turn the mounting bushing over (inside the bracket) before mounting. Slide the bracket onto torsion bar crossmember, then insert torsion bar spacer (90-2110) (**Illustration 27**). Loosely fasten using torsion bar drop bracket (90-4032) and hardware provided as shown in **Illustration 27**. Insert existing torsion bars, then torque hardware to specification chart on back page. Set the torsion bar adjuster screw to depth previously set in **Instruction 2**.

ILLUSTRATION 27

PASSENGER SIDE

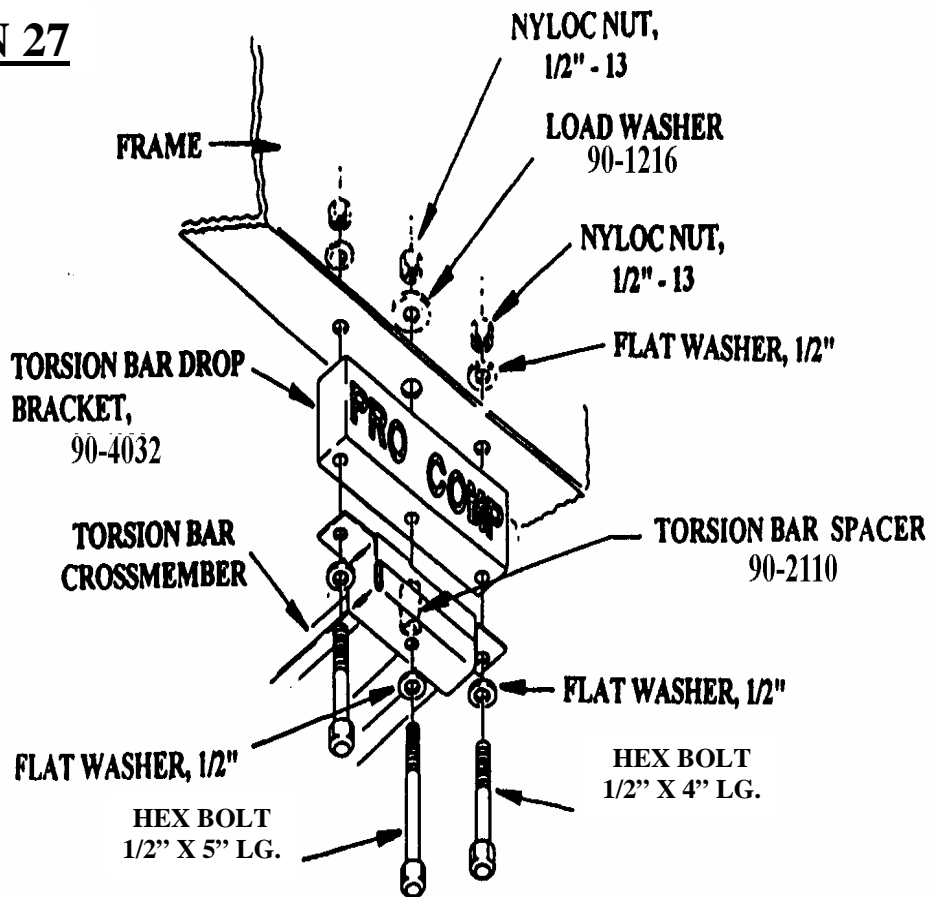


NOTE: If vehicle is equipped with 4-wheel anti-lock brake system, install wire and sensor to spindle and bearing assembly at this time.

12) Install front disc brake rotor shield, (referring back to **Illustration 5**) using existing hardware. Do not over tighten.


13) Attach tie-rods to front spindle, making sure tapers are seated. Torque existing nuts to 57-77 ft.lbs. Apply new cotter pins at these locations.

14) Re-install sway bar using sway bar link (90-2089) and hardware provided. Torque nuts to 16-21 ft.lbs. (**Illustration 28**).

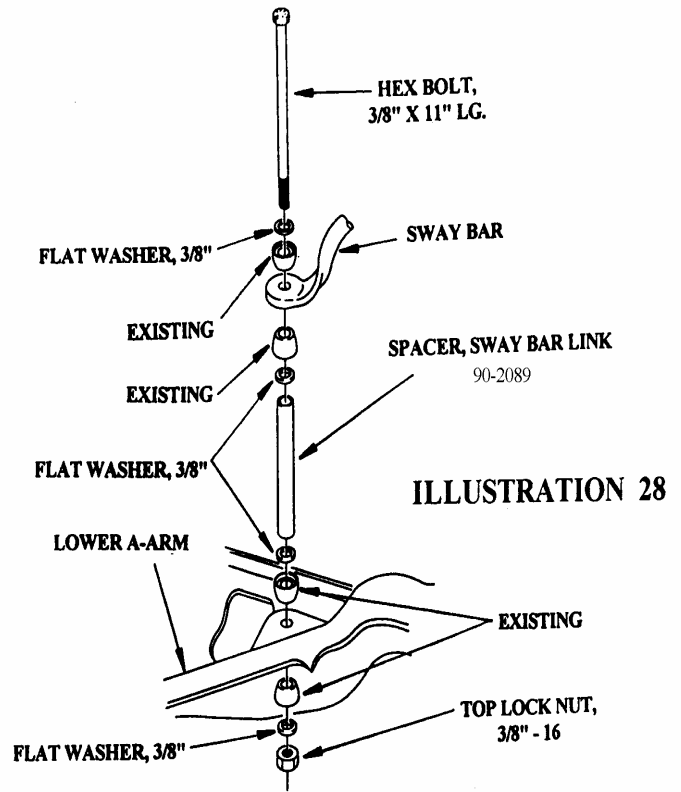

15) Locate and remove existing bumpstops on lower A-arm. Fasten existing bumpstop to bumpstop brackets (90-2181) (**Illustration 29**) using existing hardware. Install bumpstop assembly into original bumpstop locations, using 1/2\"/>

ILLUSTRATION 29

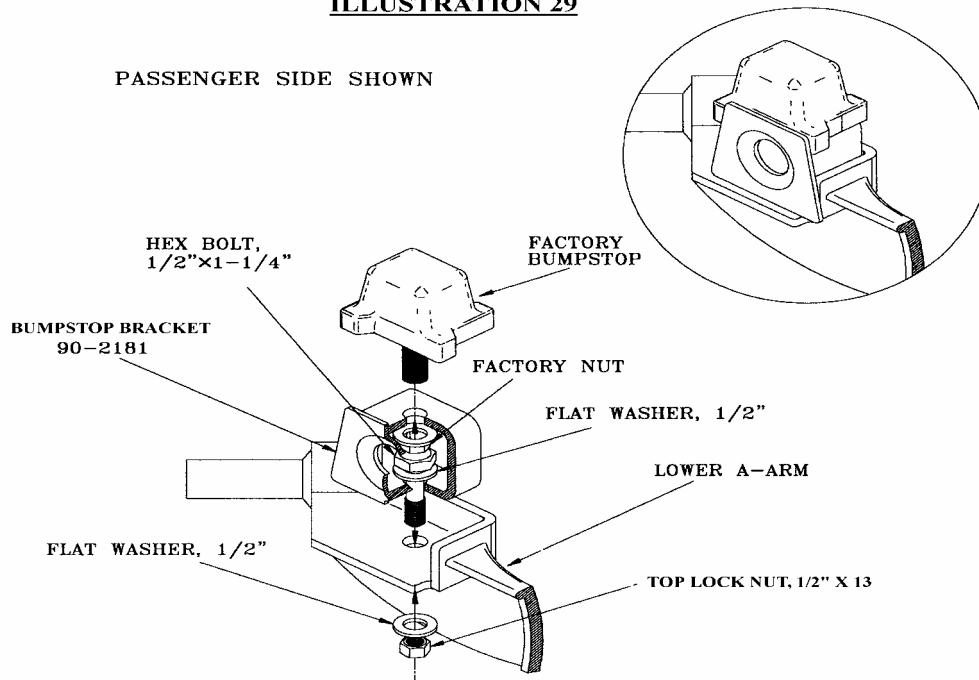


16) Install new longer front shock absorbers (Pro-Comp 320510). Torque according to specification chart on last page.

17) Install front disc brake rotors (**referring back to Illustration 4**), but do not tighten hub nut at this time.

18) Locate and remove front brake line mounting bolt on vehicle frame, both driver and passenger side. Move the brake line away from frame and attach brake line extension bracket (90-1539) to the original mounting location using existing hardware (**Illustration 30**). Do not tighten at this time. Carefully obtain enough excess steel line by straightening and bending until the brake line can be attached to the brake line extension bracket previously installed. Secure using the 5/16" hardware provided. Install the brake calipers to the front spindles using existing hardware. Torque to 21-26 ft.lbs. Cycle steering lock-to-lock and check for adequate brake line clearance. Tighten brake line extension hardware when clearance is obtained.

NOTE: Non front ABS vehicles will have a pair of steel lines that must be relocated. Be very careful not to kink the steel lines during the previous procedure.

ILLUSTRATION 30

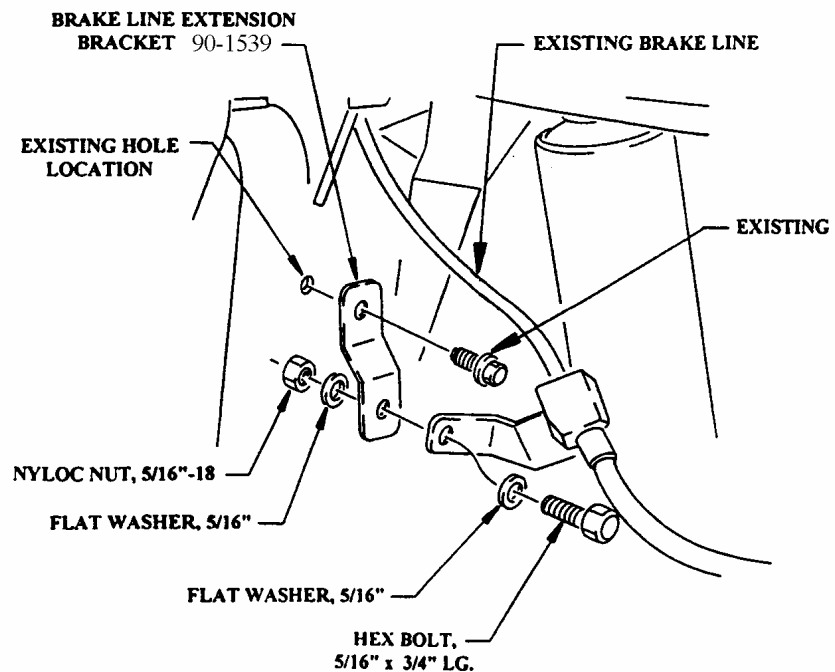


NOTE: If your vehicle is equipped with 4-wheel anti-lock brake system re-connect the sensor wire at this time.

19) Install wheels and lower vehicle to the ground. Torque axle hub nut to 187-145 ft.lbs.

REAR INSTALLATION

- To install your Add-A-Leaf (13132-1) properly you must use (2) large c-clamps or a large vise to contain the elastic potential energy stored in a leaf spring when the center bolt is removed.
- Your new Add-A-Leaf will be placed in the spring assembly in a progressive pyramid shape.
- **EXAMPLE:** If our leaf #1 is 32" long and your leaf #2 is 25" long and the new Add-A-Leaf is 28" long, place the Add-A-Leaf between leaves #1 and #2.
- Some springs will have a factory helper spring consisting of flat or nearly flat leaves installed at the bottom of the leaf pack (**Illustration 31**). Do not install your Add-A-Leaf spring in or below the helper spring assembly.

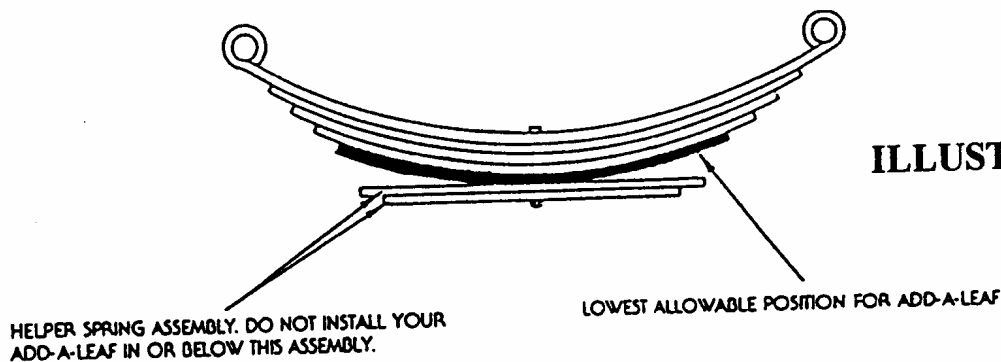

- 1) Raise the rear of the vehicle, support the frame with jackstands and remove the rear wheels.
- 2) With a floor jack, raise the rear axle enough to relieve the tension on the shock absorbers and remove them. Disconnect the axle vent hose from the axle housing.
- 3) Making sure the axle is well supported, remove the axle U-bolts and hardware. Now remove the spring eye bolts and/or shackles and remove the springs from the vehicle.
- 4) Using c-clamps or a large bench vise, hold the spring assembly securely together.
- 5) If applicable, remove any spring leaf alignment clamps. Using vise-grips to hold the head of the center bolt, loosen and remove it. If the bolt has rusted, a hammer and a drift punch may be used to drive it out.

- 6) Carefully remove c-clamps or open vise and lay unassembled spring aside.
- 7) With a small amount of grease applied to both ends of the Add-A-Leaf (13132-1), re-assemble leaf springs with Add-A-Leaf in place.
- 8) Loosely assemble the completed spring assemblies into their respective chassis mounts. Install provided U-bolts and hardware. Torque all hardware according to the factory specifications.
- 9) Re-connect axle vent hose and install the longer rear shock absorbers (329510) and torque according to the specification chart on the last page.
- 10) Install wheels and lower to ground.

SOME FINAL NOTES:

- After installation is complete, double check that all nuts and bolts are tight. Refer to the chart on the last page for torque specifications. **(Do not retighten nuts and bolts where loctite compound was applied.)**
- If new tires are installed that are more than 10% taller than original tires, the speedometer must be recalibrated for the anti-lock brake system (if applicable) to function properly. Contact an authorized Ford dealer for details on recalibration.
- Bleed brake system according to O.E. specifications (only if hoses were changed). Use Ford approved brake fluid only.
- With vehicle on floor, cycle steering lock-to-lock and inspect steering, suspension and driveline systems for proper operation, tightness and adequate clearance. Recheck brake/hose fitting for leaks. Be sure all hoses are long enough.
- Have headlights readjusted to proper setting.
- Realign front end to factory specifications. Be sure vehicle is at desired ride height prior to realignment.

Use this only as a guide for hardware without a called out torque specification in the instruction manual.

Bolt Torque and ID						
Decimal System			Metric System			
All Torques in Ft. Lbs. Maximums						
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 9.8	Class 10.9	Class 12.9
5/16	15	20	M6	5	9	12
3/8	30	45	M8	18	23	27
7/16	45	60	M10	32	45	50
1/2	65	90	M12	55	75	90
9/16	95	130	M14	85	120	145
5/8	135	175	M16	130	165	210
3/4	185	280	M18	170	240	290

1/2-13x1.75 HHCS Grade 5 Grade 8
(No. of Marks + 2)

D T L X

G = Grade (Bolt Strength)
D = Nominal Diameter (Inches)
T = Thread Count (Threads per Inch)
L = Length (Inches)
X = Description (Hex Head Cap Screw)

M12-1.25x50 HHCS

D T L X

P = Property Class (Bolt Strength)
D = Nominal Diameter (Millimeters)
T = Thread Pitch (Thread Width, mm)
L = Length (Millimeters)
X = Description (Hex Head Cap Screw)

Notice to Owner operator, Dealer and Installer:

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure your Dealer/Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

Application listings in this catalog have been carefully fit checked for each model and year denoted. However, Pro Comp reserves the right to update as necessary, without notice, and will not be held responsible for misprints, changes or variations made by vehicle manufacturers. Please call when in question regarding new model year, vehicles not listed by specific body or chassis styles or vehicles not originally distributed in the USA.

Please note that certain mechanical aspects of any suspension lift product may accelerate ordinary wear of original equipment components. Further, installation of certain Pro Comp products may void the vehicle's factory warranty as it pertains to certain covered parts; it is the consumer's responsibility to check with their local dealer for warranty coverage before installation of the lift.

Warranty and Return policy:

Pro Comp warrants its full line of products to be free from defects in workmanship and materials. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

IMPORTANT! To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty-

- Parts subject to normal wear, this includes bushings, bump stops, ball joints, tie rod ends and heim joints
 - Discontinued products at Pro Comp's discretion
- Bent or dented product
- Finish after 90 days
- Leaf or coil springs used without proper bump stops
- Light bulbs
- Products with evident damage caused by abrasion or contact with other items
- Damage caused as a result of not following recommendations or requirements called out in the installation manuals
- Products used in applications other than listed in Pro Comp's catalog
- Components or accessories used in conjunction with other manufacturer's systems
- Tire & Wheel Warranty as per Pro Competition Tire Company policy
- Warranty claims without "Proof of Purchase"
- Pro Comp Pro Runner coil over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges.
- Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance, or improper use of our products.

E-Mail: tech@explorerprocomp.com
Website: www.explorerprocomp.com
Fax: (619) 216-1474
Ph: (619) 216-1444

PLACE
WARRANTY REGISTRATION
NUMBER
HERE: _____