

**11105**91-97 FORD ESCORT SEDAN & WAGON, 98-01 FORD ESCORT  
SEDAN, 91-00 MERCURY TRACER, 98-02 FORD ESCORT ZX2


9/24/2012

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT &amp; 200 LBS. TONGUE WEIGHT.


**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*****WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.****\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\***

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1/2-13	HANDLE NUT
2	2	9/16 - 12	HEX NUT
3	2	9/16	LOCK WASHER
4	2	9/16-12 x 2	HEX BOLT
5	4	CM-SP8	.188 x 1.25 x 1.50" ROUND HOLE SPACER
6	2	1/2"	LOCK WASHER
7	2	1/2-13 x 1 1/4	HEX BOLT
8	2	9_16 WASHER	FLAT WASHER

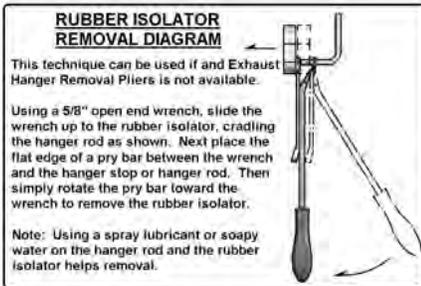

LIP TRIM DIAGRAM

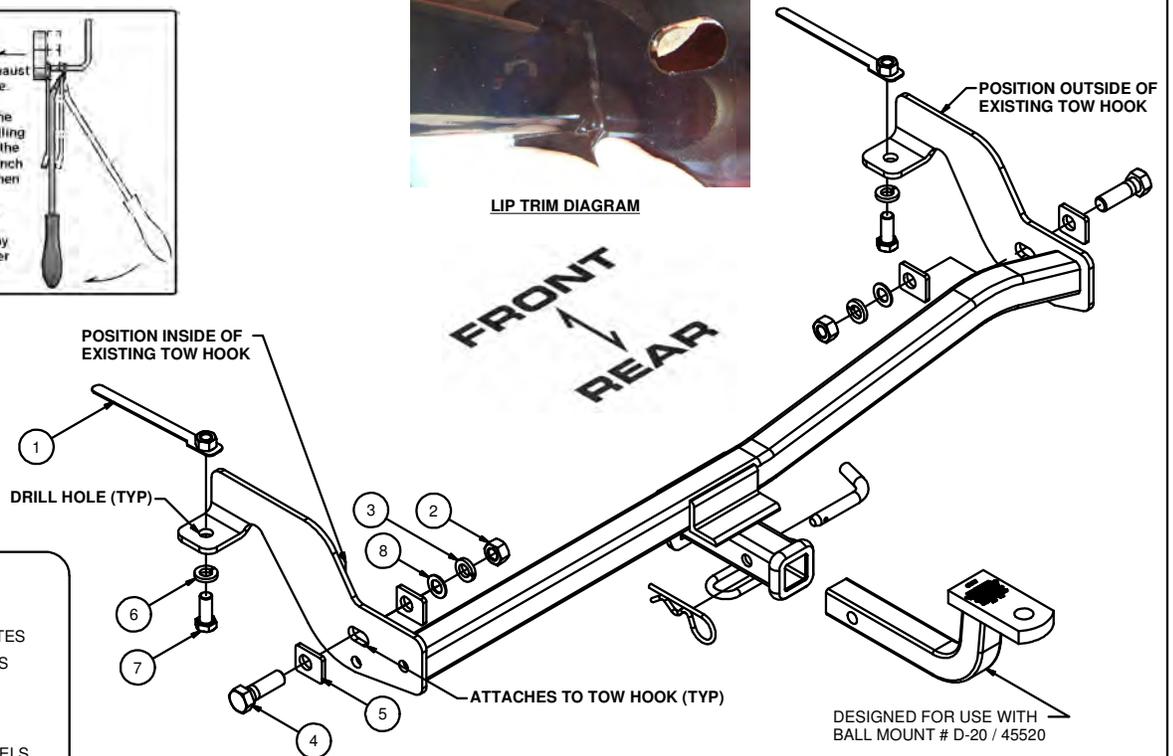

HITCH WEIGHT: 27 LBS.

**INSTALL TIME**

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

**INSTALL NOTES:**

- LOWER EXHAUST
- TRIMMING OF METAL LIP REQUIRED ON SOME MODELS

**INSTALLATION STEPS**

- Slide the two (2) rubber exhaust hangers off the exhaust hanger hooks.
- Lower the exhaust heat shield to locate access hole in frame rail. Remove the tape covering the access hole and enlarge them to provide access for handle nut.
- Remove the bolt retaining the carbon canister hoses on the drivers side frame rail.
- Raise hitch into position and loosely install the rearmost fasteners. The drivers side mounting plate should be positioned inside of tow hook and the passenger side mounting plate is positioned outside of the tow hook. Trim lip (if present) so that hitch can be raised into position. (See lip trim diagram)
- Using the hitch as a template, drill a 1/2" hole in each frame rail.  
**Note:** The existing access hole may need to be enlarged for installation of the handle nut. Determine the distance between the installation hole and the access hole. Mark this distance on the handle nut and bend it to 90 degrees.
- Install the remaining fasteners and reattach the exhaust hangers, exhaust heat shield, and carbon canister hoses.
- Torque all 1/2" hardware to 110 lb/ft. and all 9/16" hardware to 150 lb/ft.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.