



# ***BD SPEED ELIMINATOR***

## **Ford 6.0L Powerstroke Installation Instructions**

*For use on 2003-2007 Vehicles*

**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION.**

***This product will not work on the E-Series and F-450, F-550 vehicles.***

### ***Cautionary Note:***

***Please read the disclaimer before proceeding to install this unit. If you do not have the appropriate speed rated tires, then do not install this unit.***

BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9


U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)

## Installation

1. Disconnect the negative battery terminals from both batteries.
2. If utilizing the tire size calibration options you will need to locate the ABS module and connector. To locate the ABS module you will need to remove or pull back the driver side front inner plastic fender well liner. You will need to remove all the mounting bolts and lining press inserts.

### 2003-2004 Vehicles - ABS Controller Location

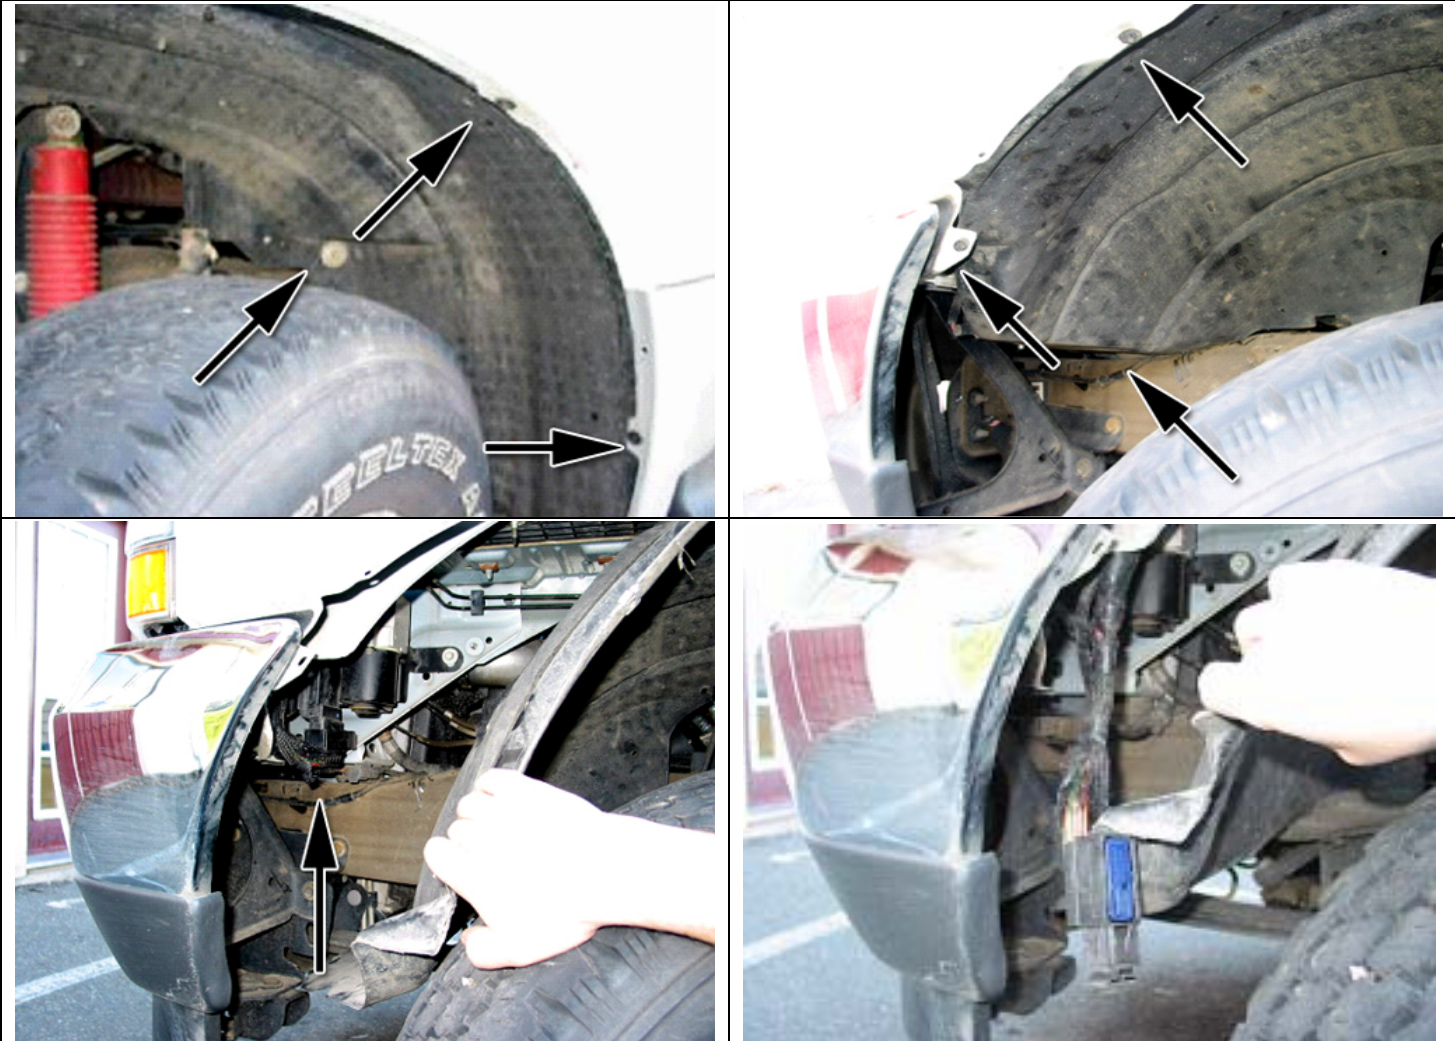

***When pulling back the fender well lining, be extra careful not to bend the steel fender lip in the process!!!***

BD Engine Brake Inc.


Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)



## **2005-2007 Vehicles - ABS Controller Location**

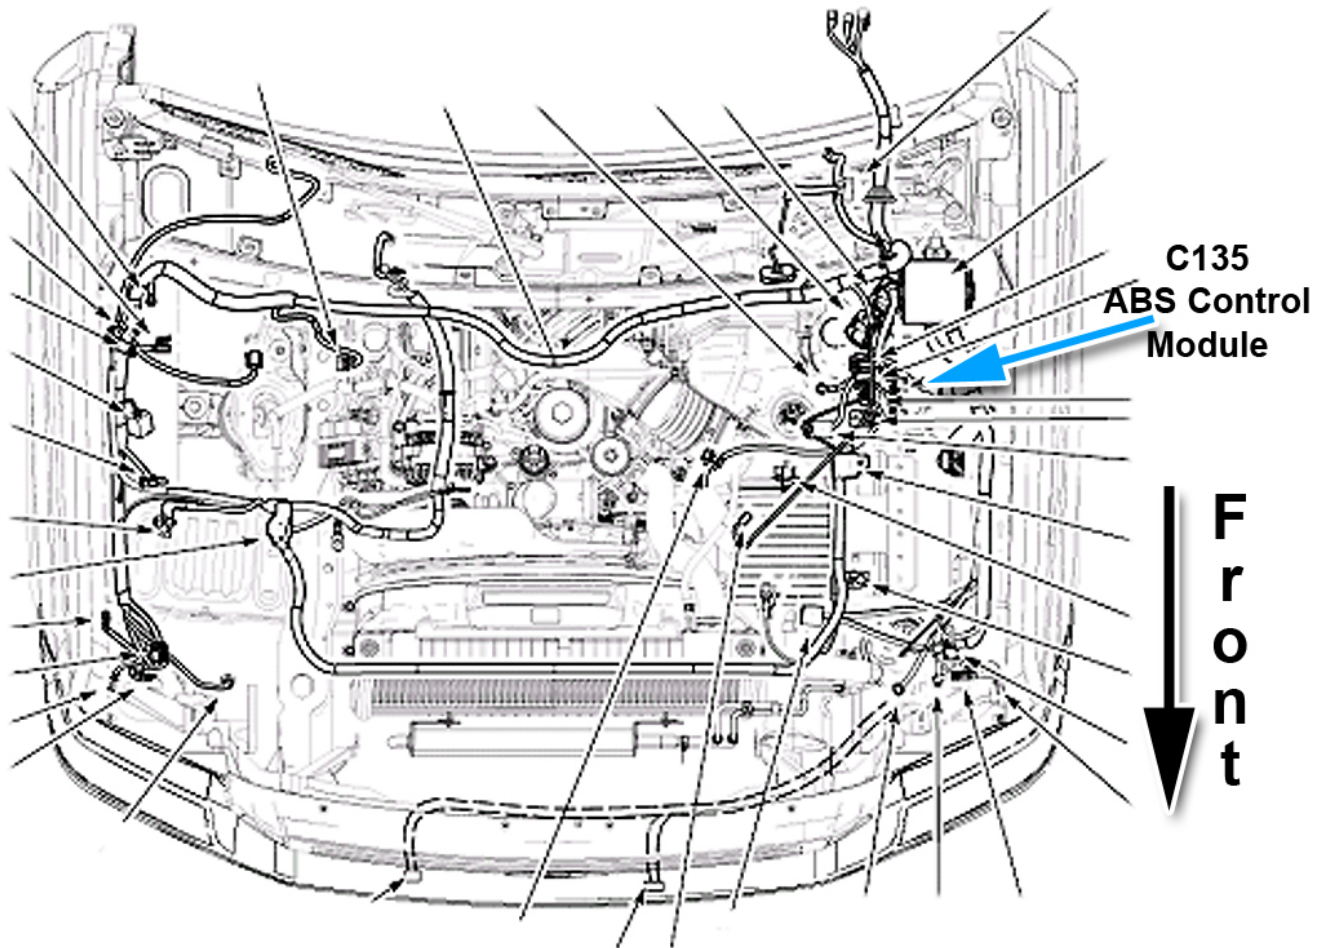

3. Locate the ABS module and quick release plug. Unlock the plug by pushing the locking mechanism towards the center of the vehicle. (The locking handle is located on the inner side of the plug)
4. Locate the Grey w/black tracer wire (2003-04 trucks Pin 11, 2005 trucks Pin #21). You will need to cut this wire and crimp the supplied female bullet connectors in place. You will then need to crimp the supplied wire into place.
5. Attach the supplied yellow wire so that it connects to the Grey w/black wire closest to the ABS connector. The light blue wire should be connected to the Grey w/black wire traveling into the factory loom. Coat the bullet connectors with either dielectric grease or another sealant to keep dirt and moisture out of the contacts.



BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)

SE Wire Color	Factory Wire Color	Location
Yellow	Grey w/ Black stripe	Coming from ABS Module Harness
Light Blue	Grey w/ Black stripe	Factory Loom to PCM

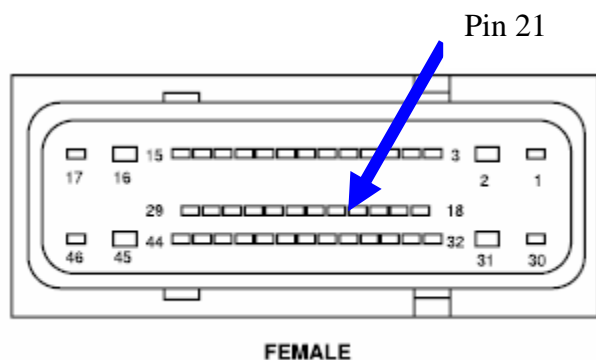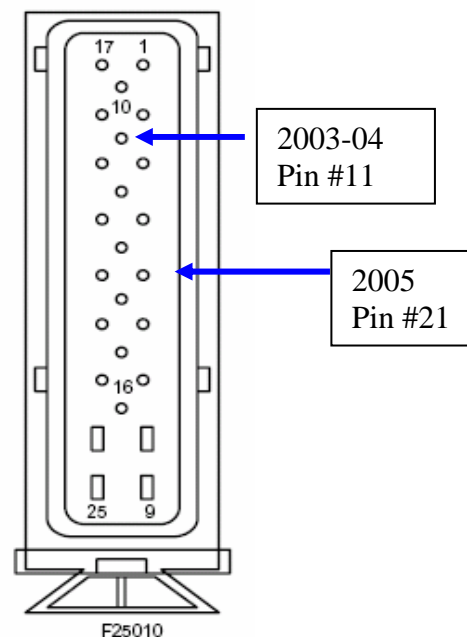

2006 Vehicles  
Pin # 21

- Route the yellow and light blue wire straight up through the opening towards the PCM. From there continue on through the firewall.
- You should mount the Speed Eliminator electronic enclosure inside of the cab in a secure location. Route the yellow and light blue wires into the VSS Input and VSS Output green connectors respectively.

Wire	Wire Color
VSS Input	Yellow
VSS Output	Light Blue

8. A fuse tap has been provided for easy access to switched 12 volt power via the fuse panel. You can connect to fuse number 29 (10A) for sufficient keyed power.
9. Route the black ground wire to a clean ground point on the firewall. There are usually many different bolts heads that make excellent ground points. Secure your installation.
10. The Speed Eliminator now has the function to adjust for tire size. You'll notice a small hole on the enclosure with a small potentiometer in side. At the 12 o'clock position, no adjustment is made for tire size. This position is also called stock. Turn the potentiometer with a small blade or Philips screw drive to adjust to the proper vehicle speed. The Speed Eliminator has the ability to adjust the speed up or down +25% or -25%.

**If you have stock tires or are not adjusting for tire size, you must ensure that the arrow is exactly vertical.**

**Note: With the Speed Eliminator installed, the speedometer will stop displaying any speeds over 85 mph, although the truck will continue to accelerate until the engine RPM will governor the vehicle speed.**




Visit our internet forums at <http://www.dieselpower.com> and share your comments or technical support questions with some of the industry's leading experts in the diesel field.

BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)

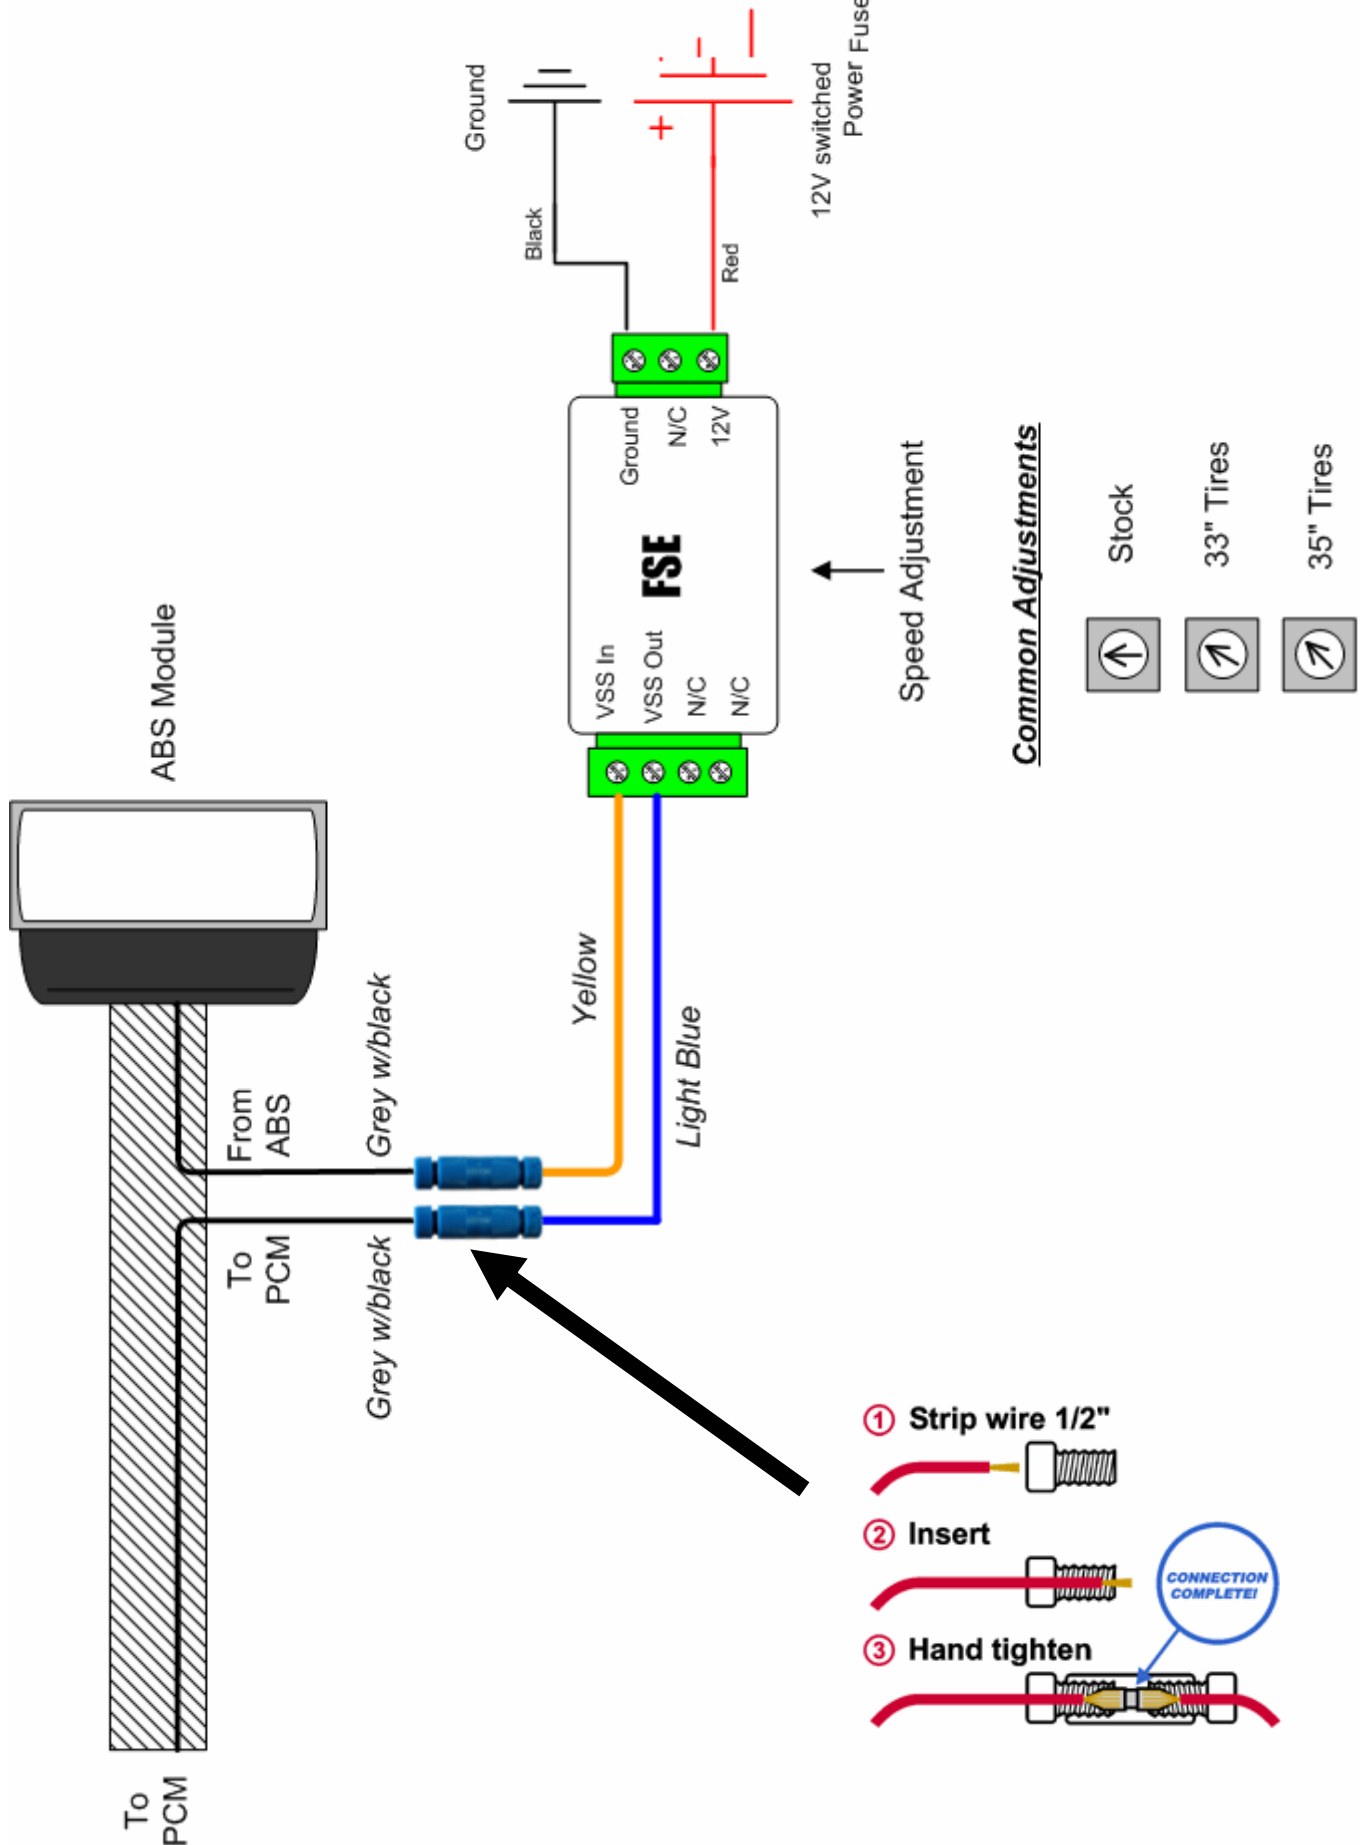

BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)



## 2003-2006+ Installation not utilizing tire size calibration



**Note that there have been some compatibility issues with this style of installation on 2005 & 2006 vehicles. If you have problems installing the units please try the installation in the previous section.**

If the customer has stock tires and is not going to utilize the tire calibration option, a different installation can be performed. The advantage to this installation is that the speedometer will continue to show vehicle speed past 85 mph. With this installation option the tire size calibrator will not work, although it is still very important that the adjustment screw still be vertical.

1. On the driver's side of the engine compartment, remove the battery cables (ground first) using an 8mm wrench.
2. Remove the battery cover by releasing the tab located on the left side (towards the front of the vehicle) of the battery cover. You may need to use a screwdriver to pry the tab.
3. Disconnect the 2nd of the 3 connectors and pull it around to the right side of the power steering fluid reservoir. This helps free up the 3<sup>rd</sup> connector.
4. Remove the 3<sup>rd</sup> connector from the PCM. Locate the gray with black tracer wire in the harness. You will find this connected to **pin 35**.

It is suggested that you cut the electrical tape and open up the black plastic loom surrounding this wire to free up some space. You will need to cut this gray w/black wire in two. Be sure that you have enough length on both ends to attach the supplied Posi-Lock connectors.

5. You must now cut this gray w/black wire and attach the provided bullet connectors. Be careful to attach the

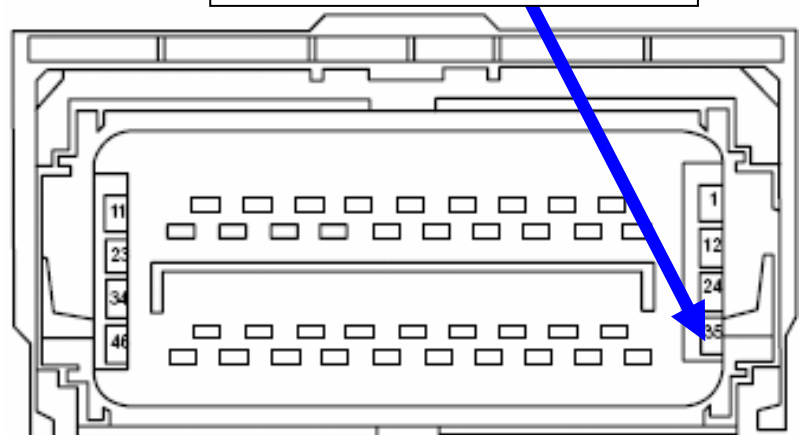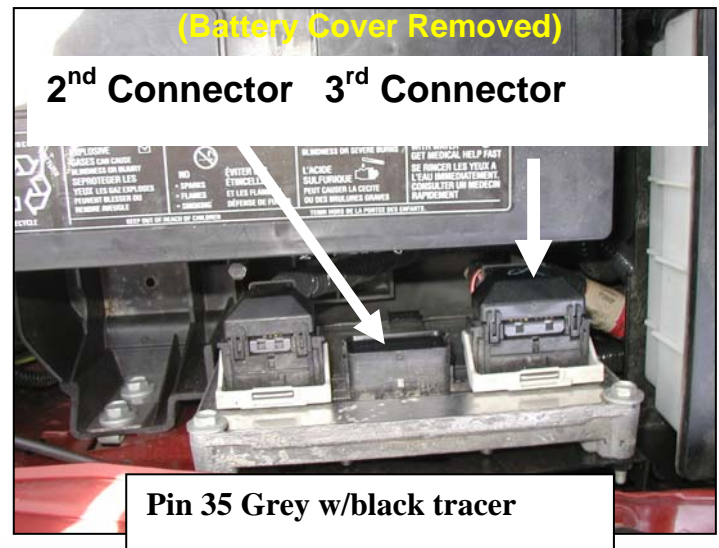


BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)

right bullet connector to the right side of the wire. Attach the female bullet connector to the gray w/black wire closest to the PCM connector. You will also want to attach the yellow wire to this wire using the male bullet connector. Now attach the other male bullet connector to the other side of the gray w/black wire. Connect the light blue wire to the remaining gray w/black wire using the left over female bullet connector.

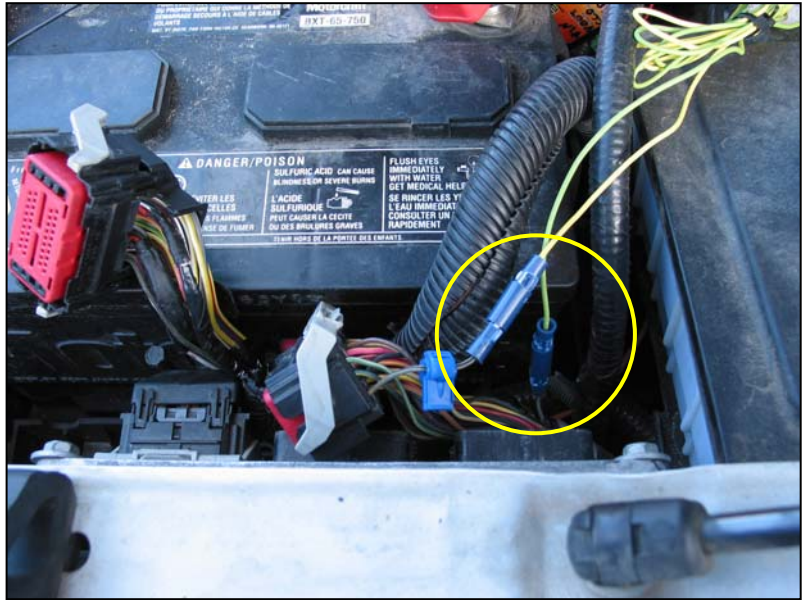

**Be sure that the Speed Eliminator VSS OUTPUT is connected to the wire closest to the PCM (connector), while the VSS INPUT should be connected to the wire on the opposite side of the PCM.** Once you have finished connecting the bullet connectors you may reconnect the PCM connectors and attach the battery cover.


6. Note that the Speed Eliminator should be mounted inside of the cab, as it is not weather resistant. Route the yellow and light blue wires through the firewall into the cab and connect them to the appropriate input and output connection points. The yellow wire should be connected to the VSS OUTPUT, while the light blue should be connected to the VSS INPUT.

12V Switched power and a clean ground are also needed. Choose one the many grounded mounting bolts underneath the dash for a solid ground point. Switched power can be found through the fuse panel, use the supplied scotch-loc to tap power or the fuse tapper.

**Fuse number 29 will supply the keyed power you are looking for.**

7. Once you have finished the wiring you can verify your installation with the wiring diagram.



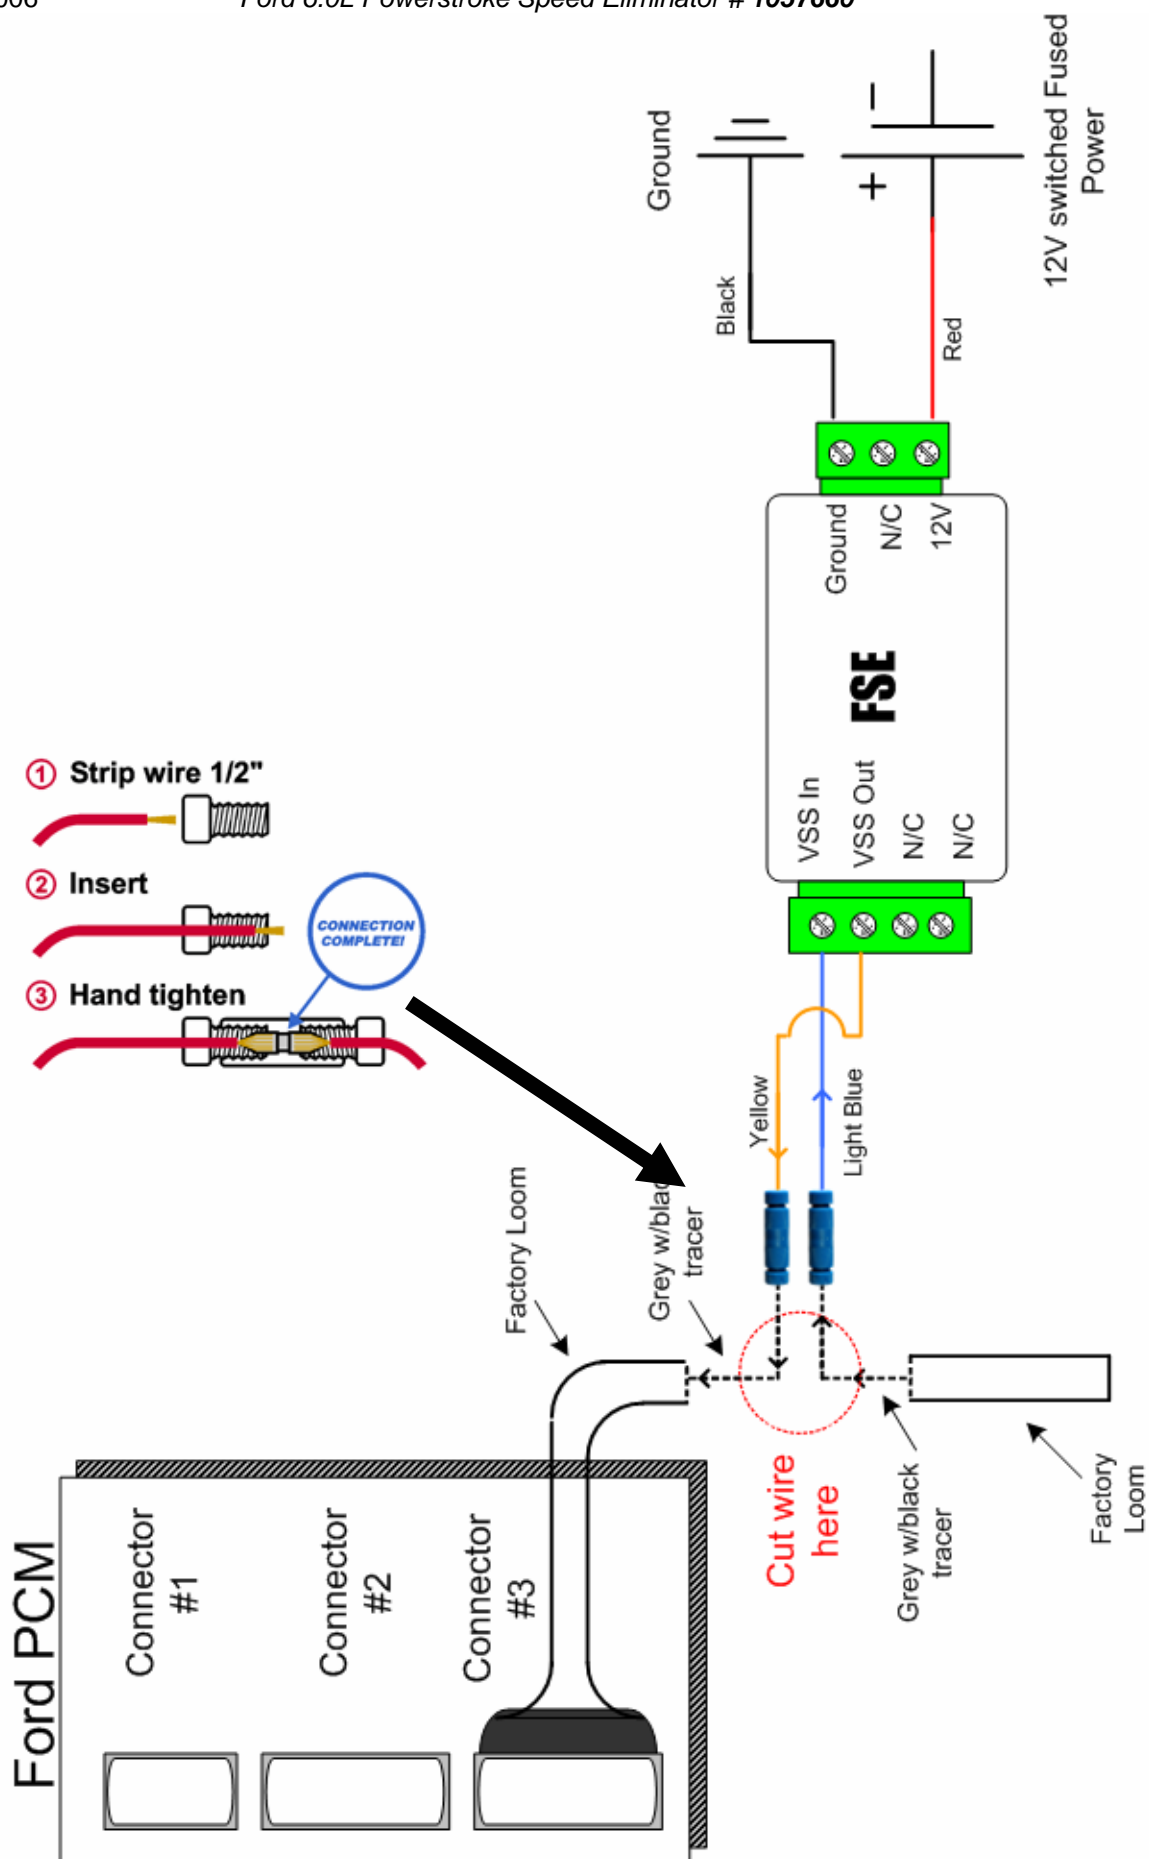

BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)

### **DISCLAIMER OF LIABILITY**

Other than as expressly set forth herein, BD ENGINE BRAKE, Inc. (hereafter collectively, "SELLER"), together with its distributors, jobbers and dealers shall in no way be responsible for the PRODUCT'S proper use and service. In no event shall SELLER be liable for any special, incidental, indirect or consequential damages of any kind or nature, whether or not BUYER was advised of the possibility of damage, arising or resulting from the use or performance of the PRODUCT, and BUYER hereby waives any and all such claims.

BUYER acknowledges that he/she/it is not relying on SELLER'S skill or judgment to select or furnish goods suitable for any particular purpose and that SELLER has no liability that will extend beyond the scope of the limited warranty contained herein, and BUYER hereby waives all remedies or liabilities, expressed or implied, arising by operation of law or otherwise, (including, without limitation, any obligations of SELLER with respect to fitness for any particular purpose; merchantability; and special, incidental, indirect or consequential damages) or whether or not occasioned by SELLER'S negligence.

SELLER disclaims any warranty and expressly disclaims any liability for personal injury or damages related to BUYER'S use of the PRODUCT. BUYER acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and BUYER agrees to indemnify SELLER and hold SELLER harmless from any claim related to the PRODUCT and its use or performance. Under no circumstances will SELLER be liable for any damages, liabilities, costs or expenses incurred as a result of by reason of the use, performance or sale of the PRODUCT, including, without limitation, any damages, liabilities, costs or expenses incurred by reason of BUYER'S negligence related to those uses of the PRODUCT as a result of the removal of the speed limiter.

SELLER assumes no liability regarding the improper installation or misapplication of the PRODUCT. It is the installer's responsibility to check for proper installation, and, if in doubt, contact the manufacturer.

### **LIMITATION OF WARRANTY**

SELLER hereby provides the following limited warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of SELLER'S product sold herewith. The SELLER shall be in no way responsible for the product's open use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's kit. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by BD ENGINE BRAKE, Inc.

Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

Under no circumstances will the SELLER be liable for any damage or expenses insured by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND. THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

BD Engine Brake Inc.

Plant Address: Unit A10, 33733 King Rd, Abbotsford, BC, Canada V2S 7M9

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 Fax: 604-853-8749 Internet: [www.bd-power.com](http://www.bd-power.com)