

Kit 52209

Ford F-250 & F-350 4WD

Front application






INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.



Installation Diagram

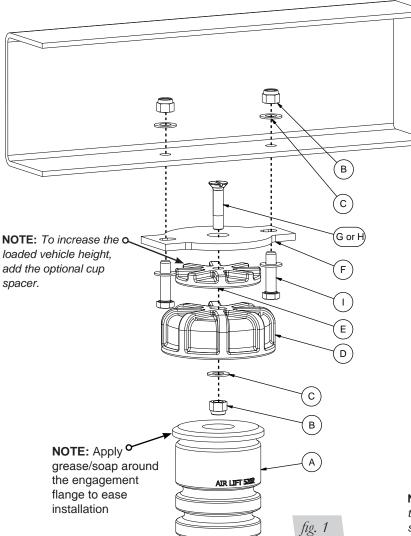


Important Safety Notice

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and pasengers that the truck is designed to carry. Payload is GVWR minus the Base Curb Weight.

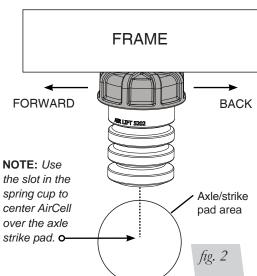

HARDWARE LIST

| Item | Part # | DescriptionQty |
|------|--------|----------------------|
| Α | 52022 | Spring2 |
| В | 18435 | 3/8" Nyloc Nut6 |
| С | 18444 | 3/8" Flat Washer10 |
| D | 10911 | Spring Cup2 |
| Е | 13244 | Cup Spacer2 |
| F | 07308 | Bracket2 |
| G | 17404 | 3/8"-16 x 1.25 Bolt2 |
| Н | 17415 | 3/8"-16 x 1.75 Bolt2 |
| 1 | 17108 | 3/8"-16 x 1.5 Bolt4 |
| | | |

TOOLS LIST

| Description | Qty |
|------------------------------|-----|
| Hoist or floor jacks | |
| Safety stands | |
| Metric and standard sockets | |
| Metric and standard wrenches | 1 |
| Ratchet | 1 |
| | |



Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.



Installing the AirCell System

ASSEMBLING AND ATTACHING THE SYSTEM

- 1. Jack up the front of the vehicle or raise on a hoist. Support the frame with safety stands. Lower the axle of the vehicle until the suspension is fully extended.
- 2. Remove the existing jounce bumper assembly on both sides of the vehicle.
- 3. Assemble the spring cup (D) to the bracket (F) using the supplied 3/8" flat head bolt (G), flat washer (C) and nyloc nut (B) (fig. 1).
- 4. Attach the bracket/cup assembly to the vehicle using the supplied 3/8" bolts (I), flat washers (C), and nyloc nuts (B). Do not tighten the hardware completely at this time.
- 5. Insert the spring (A) into the spring cup (D) using a twisting motion while pushing with force. Make sure the spring snaps into position inside the cup.

NOTE

Applying grease or soap around the engagement flange of the spring (A) will help in aiding the spring (A) to "snap" into the spring cup (D).

6. Check the alignment of the spring over the axle strike pad (fig. 2). If needed, use the slot in the upper bracket for adjustment (fig 1, 2). Once positioned correctly, torque the hardware to 31 ft/lbs and follow steps 3 - 6 for the other side of the vehicle.

OPTIONAL

You can adjust the loaded height of the vehicle by adding the optional cup spacer (E) between the cup and the bracket. It will be necessary to use the longer hardware provided (H) to install the cup spacer.

Warranty and Returns Policy

Air Lift Company warrants its products, for the time periods listed below, to the original retail purchaser against manufacturing defects when used on catalog-listed applications on cars, vans, light trucks and motorhomes under normal operating conditions for as long as Air Lift manufactures the product. The warranty does not apply to products that have been improperly applied, improperly installed, used in racing or off-road applications, used for commercial purposes, or which have not been maintained in accordance with installation instructions furnished with all products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid, to the dealer from which it was purchased or to Air Lift Company for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

| AirCellLifetime L | mited Load Controlle | er (I)2 Year Limited |
|----------------------------|----------------------|-----------------------|
| Air Lift 1000Lifetime L | mited Load Controlle | er (II)2 Year Limited |
| RideControlLifetime L | mited SmartAir | 2 Year Limited |
| SlamAirLifetime L | mited Wireless AIR | 2 Year Limited |
| LoadLifter 5000*Lifetime L | mited Other Accesso | ories2 Year Limited |
| EasyStreet Systems1 Year L | mited | *formerly SuperDuty |

Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Company customer service at (800) 248-0892, first if:

- Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- Wrong parts in the kit.
- Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- If there is a problem with the price.

Need Help?

Contact our customer service department by calling (800) 248-0892, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time. For calls from outside the USA or Canada, our local number is (517) 322-2144.

Register your warranty online at www.airliftcompany.com/warranty



Thank you for purchasing Air Lift products — the professional installer's choice!