

# **Installation Instructions**

C-RES (Cargo Restraint System) 07-10 Jeep Wrangler (2-Door) Part #571035

Please read instructions entirely before installing this part

**NOTE:** You will need to have the following to install this part correctly.

- 1. Tailgate retaining bar and brackets.
- 2. OEM Door-Surrounds

<u>Step 1:</u> It is recommended to remove your soft top and bow assembly completely to install this product. Remove your existing soft top and bow assembly (If equipped)

**Step 2:** Unfold the C-RES top and lay it our over the rear of the vehicle. (Fig A)

**Step 3:** Starting on the driver side attach the plastic channel in the top into the back channel of your door surround. (Fig B)





**Step 4:** Begin sliding the side channel on the top into the side channel on your vehicle and continue around the corners.(Fig C) Repeat step 3 and 4 on passenger side.

For Technical Support/Warranty Information please call 310-762-9944




### **Installation Instructions**

C-RES (Cargo Restraint System) 07-10 Jeep Wrangler (2-Door) Part #571035

### WWW.SMITTYBILT.COM

**Step 5:** Now insert the plastic channel on the top into the top horizontal part of your door surrounds. (Fig D) Repeat step 4 and 5 on the passenger side now.

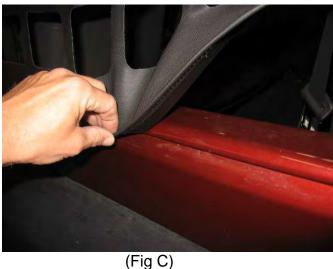



(Fig D)

Loosely attach the two top straps around the sport bar into the factory holes in the Step 6: sound pods. (Fig D) (Do not pull tight at this time.)

<u>Step 7:</u> Slide your tail-gate retaining bar into the sewn in extrusion on the back of your top (Fig F) Once all the way on lock the bar into the brackets (Fig G)







#### WWW.SMITTYBILT.COM

## **Installation Instructions**

C-RES (Cargo Restraint System) 07-10 Jeep Wrangler (2-Door) Part #571035

Step 8: Now pull the straps around the sport bar securely. Installation is now complete. The C-RES can be used in with conjunction with briefs and extended tops. Simply maneuver the straps on the briefs through the holes on the C-RES in the best location, on some models you may not be able to use all of the straps, in this case simply tuck strap under in the best location.



#### LIMITED WARRANTY

Smittybilt (The Company) warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within the warranty period of 90 days from the date of purchase, such defect(s) will be repaired or replaced (At the Company's option) without charge for parts or labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale, receipt), specification of defect, freight pre-paid with Returns Good Authorization Number from Smittybilt to place of purchase. Items returned to Smittybilt without an Returns Authorization Number will be refused and returned to sender at the senders expense.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through altercation, improper installation, mishandling, misuse, neglect accident or acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THIS PRODUCT.

This warranty is in lieu of all expressed warranties and liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHTH WITHIN A PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, therefore above limitations may not apply to you. This warranty gives the purchaser specific legal rights. The purchaser may have additional rights, which vary from state to state.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, therefore above limitations may not apply to you. This warranty gives the purchaser specific legal rights. The purchaser may have additional rights, which vary from state to state.

#### **Care and Maintenance Information**

To keep your product looking new and for the maximum possible wear, it requires periodic cleaning and maintenance.

FABRIC – The fabric can be washed using soap, warm water and a soft bristle brush. Rinse with clear water making sure to remove all soap.

For Technical Support/Warranty Information please call 310-762-9944